

CytLED

Ultra Installation Manual

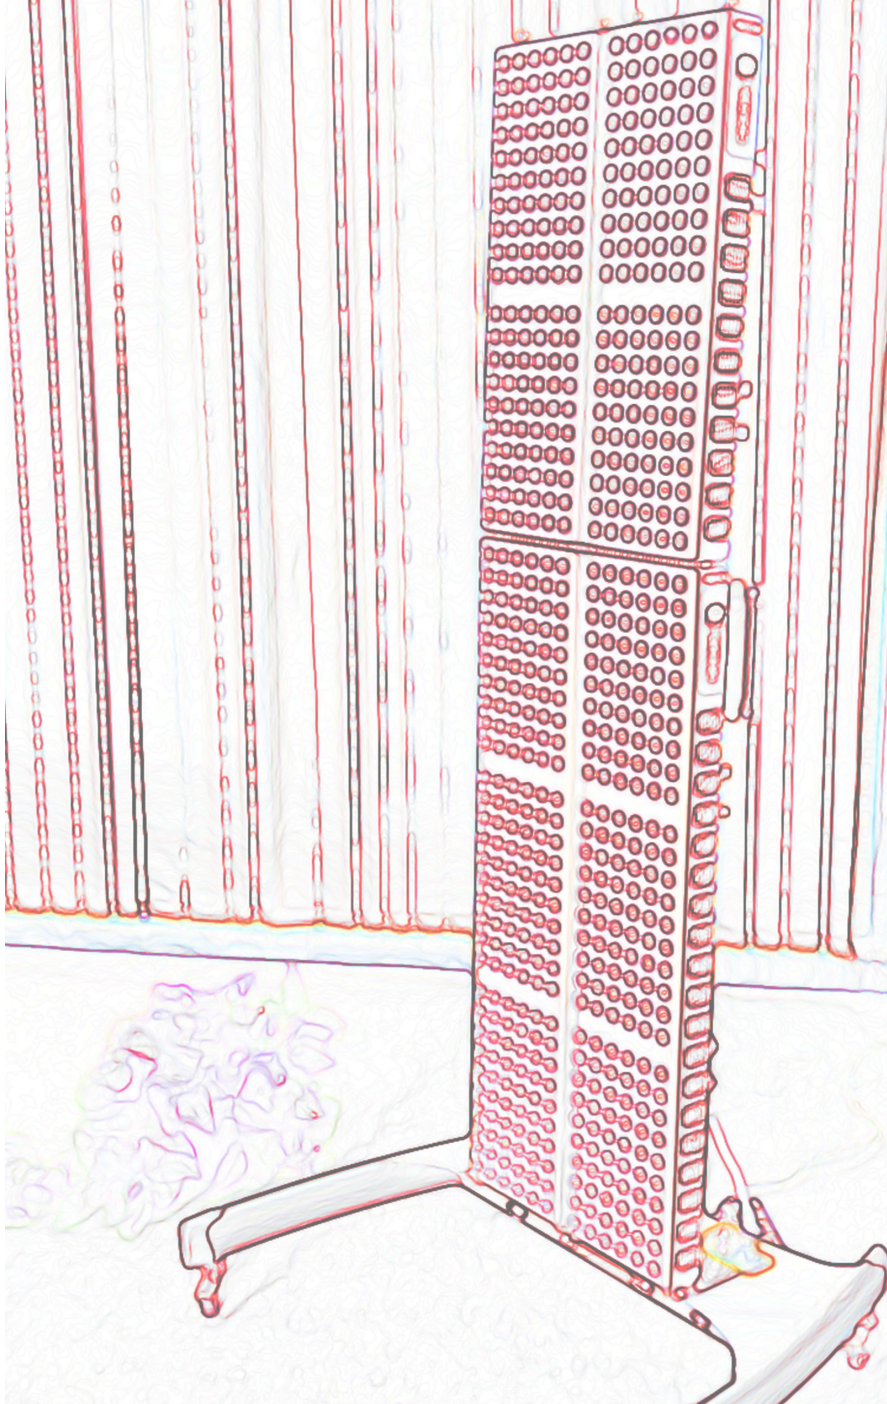


Table of contents:

Warning 3/8


Parts list 4/8

Stand assembly 5/8

Ultra assembly 6/8

Ultra to Stand connection 7/8

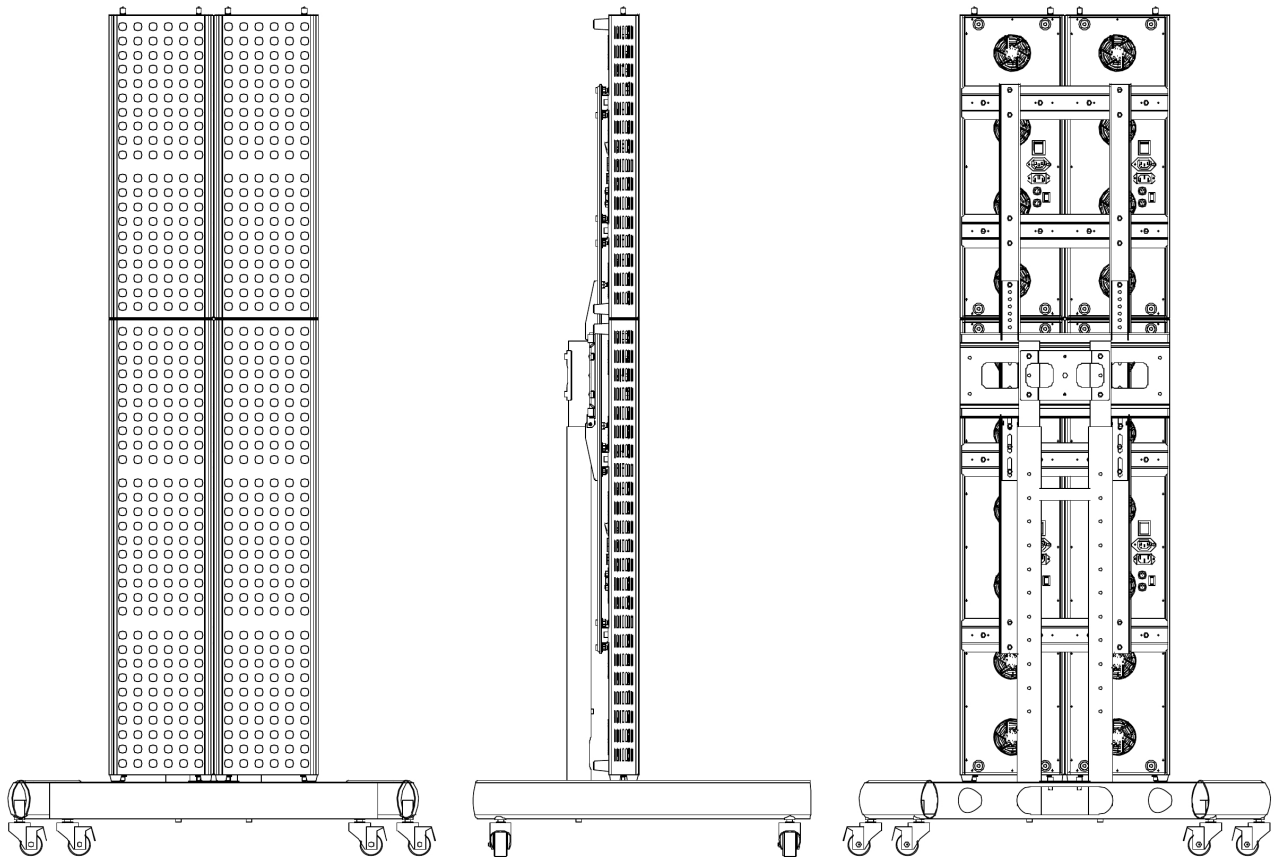





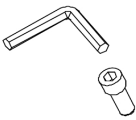

Wiring 8/8


















Warning

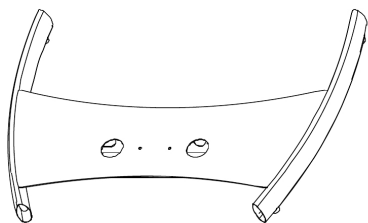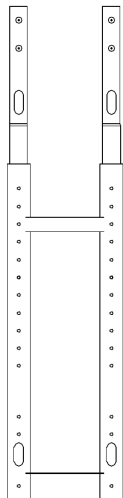
Severe personal injury and property damage can result from improper installation or assembly. Read the following warning carefully before installing.

1. If you do not understand the instructions or hardware is damaged or missing, please contact a qualified local installer.
2. Do not install or assemble if the product or hardware is damaged or missing, if you require replacement parts, please contact your local distributor for assistance.
3. This product has a maximum load capacity of 100lbs/45.5kg
4. Do not use this product for anything other than its intended purpose.
5. This product contains moving parts, please use with caution.
6. CytoLED disclaims any liability for the modifications, improper installation, or installation over the specified weight range. CytoLED will not be liable for any damages arising out of the use of, or improper use of the product.
7. Death or serious injury may occur when children climb onto the stand and/or CytoLED Ultra.
8. Relocating the CytoLED Ultra to a stand not specifically designed to support the CytoLED Ultra may result in collapsing or overturning.
9. Using the stand with products heavier than the maximum weights indicated may result in instability causing possible injury.


							
Tightening Direction	Loosening Direction	Phillips Screwdriver	Metre Ruler	Adjustment	By Hand	Hex Wrench	+Tightening -Loosening

Parts list


Parts list				
<div>F*1</div> <div></div>	<div>K*1</div> <div></div>	<div>L*2</div> <div></div>		
<div>G*1</div> <div></div>		<div>M*1</div> <div></div>		
<div>H*1</div> <div></div>		<div>N*1</div> <div></div>		
<div>I*4</div> <div></div>		<div>O*4</div> <div></div>		
<div>J*2</div> <div></div>				
<div>A*4</div> <div></div> <div>M8*60MM</div>	<div>B*4</div> <div></div> <div>M8*25MM</div>	<div>C*36</div> <div></div> <div>M8*16MM</div>	<div>D*2</div> <div></div> <div>M5*8MM</div>	<div>E*1</div> <div></div> <div>M8*130MM</div>

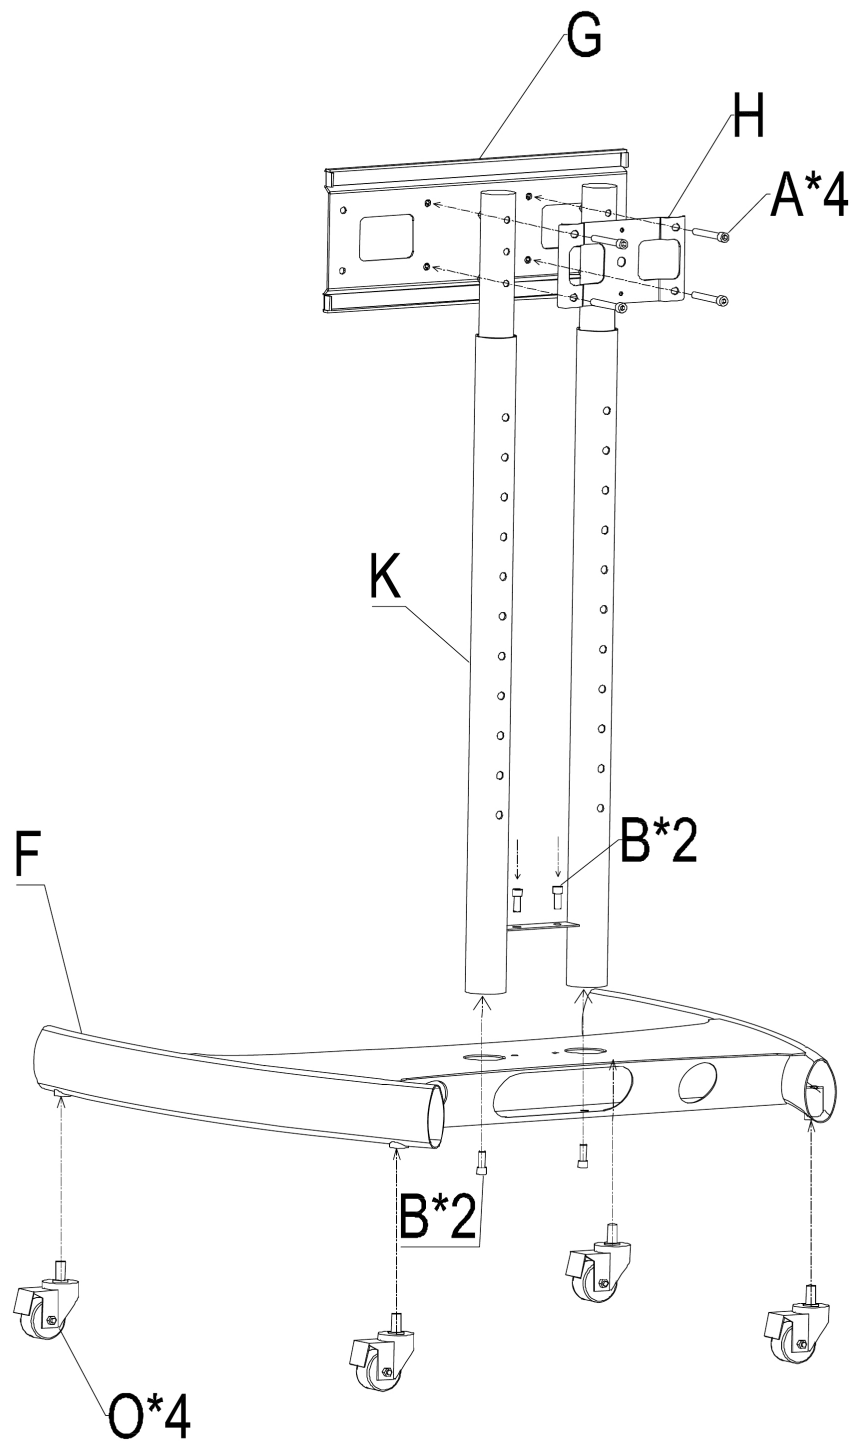

Step 1: Place the Duplex and Triplex face down and lay them out on a table or floor, as the picture shows.

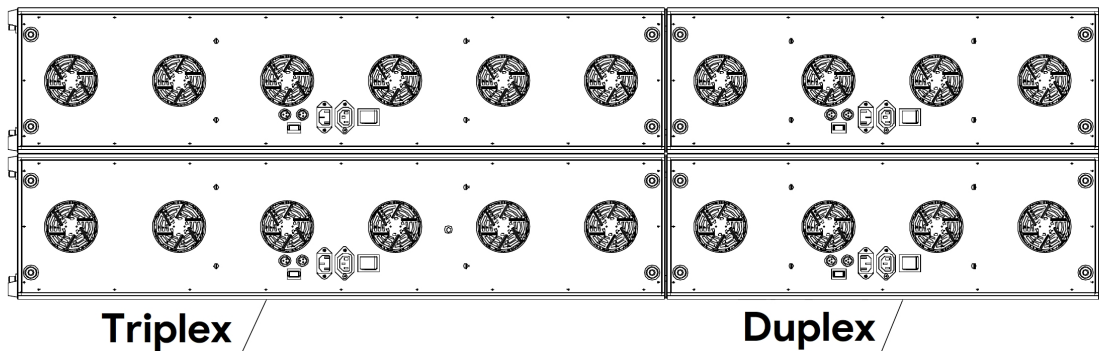

Step 2: Use the accessory C*16PCS to lock the accessory I*4PCS to the rear mounting holes of the Duplex and Triplex, as the picture shows.

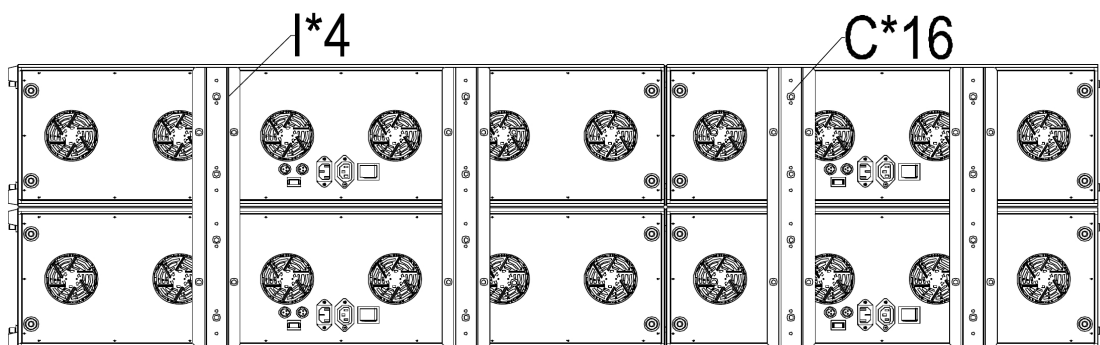

Step 3: After the accessory L is locked on the accessory J, the screw G is locked to the assembled accessory I, as the picture shows.

