

# Lilitab Picture Pro Mount

Assembly Instructions

v3.0

## TABLE OF CONTENTS

Assembly Preparation and Packing List . . . . .	2
Assembly Instructions . . . . .	3

### FOR BOLT DOWN INSTALLATION, YOU'LL NEED:

- ✓ Powered drill/driver, preferably with impact action or Phillips screwdriver
- ✓ 4 x fasteners for your wall




← Scan to watch assembly videos on our YouTube Channel!

### GOT QUESTIONS? WE'RE HERE TO HELP!

**EMAIL** [support@lilitab.com](mailto:support@lilitab.com) **PHONE** 888.705.0190


## PACKING LIST

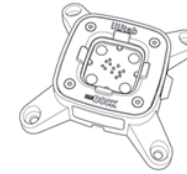

1 x Picture Pro Mount




2 x MagDOCK Keys



1 x Key Extender


# ASSEMBLY INSTRUCTIONS

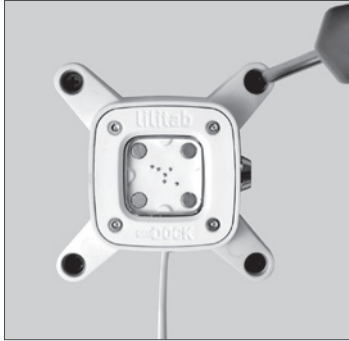



## 1. Attach Picture Pro Mount to wall.

**NOTE 1:** You will need to purchase fasteners suitable for your wall.


**NOTE 2:** The charge cable can be routed down the face of the wall or inside the wall.

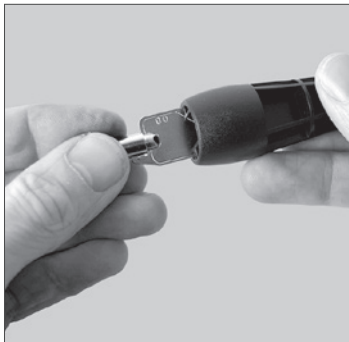

## 2. Insert MagDOCK Key into the Key Extender provided.

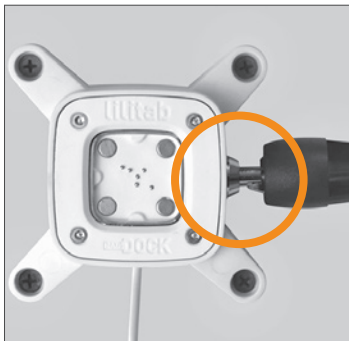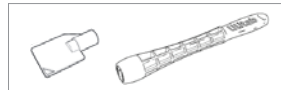


## 3. The Key Extender makes it easy to actuate the lock once the Head Unit is attached.

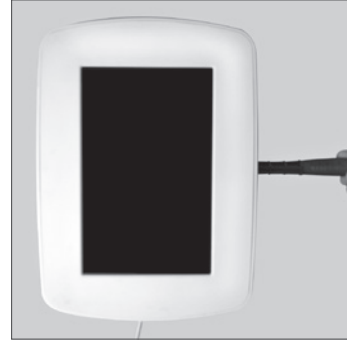

## 4. Place your Head Unit onto the MagDOCK in either landscape or portrait orientation. Turn the key to lock it in place.

**WARNING:** Not locking the MagDOCK will result in the unit falling off, possibly damaging the unit and/or the tablet. The Lililab Pro is designed to be operated with the lock closed.

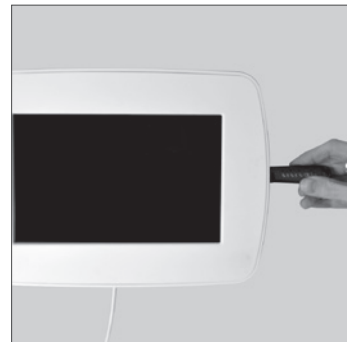

Refer to your Lililab Head Unit owner's manual for tablet installation instructions.