ZERO Translator

Manual English

Important reminders

1. This device works with the Timekettle app. Please scan the QR code, and download the app. You can also download the Timekettle app from the following app stores.








2. This device has two versions: iOS version (lightning) and Android version (Type-C). It does not support Micro-USB 2.0.






Instructions


1. Open the app, place the side of the product with the 4 microphones face-up, plug it into the phone, hold the phone horizontally, or place the phone flat on the table.



Hold the phone horizontally Please make sure your mouth is within 60° angle

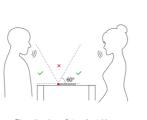

Place the phone flat on the table Please speak within 60° angle

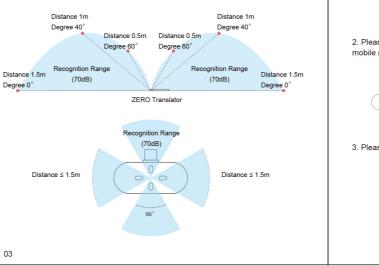

2. Please scan the QR code, or visit our website for detailed instructions (including mobile model compatibility, video tutorials, and troubleshooting).

https://help.timekettle.co/en



3. Please search "timekettle.tech" on Facebook or Twitter or YouTube to contact us.







YouTube

04

Please read the following safety and warning information before using ZERO:

- 1. This device does not need to recharge. To avoid fire, explosion, and other dangers, do not use any method of charging.
- 2. To avoid damaging the device, do not intentionally drop, incinerate, puncture, squeeze, or immerse the product in liquid.
- 3. Do not expose the device to high temperatures or heat-generating equipment, such as microwaves and ovens.
- 4. Please use the device within the temperature range of 0 °C 35 °C and store the device within the temperature range of -20°C - 45°C. If the temperature is too high or too low, it may cause device failure.
- 5. Timekettle is not responsible for quality issues, device failures, and safety accidents caused by unauthorized accessories such as adapters.
- *. Declaration of CE conformity: www.timekettle.co/support/statement

Corporate Information

Official Website: www.timekettle.co

Customer Service: support@timekettle.co

Safety & Warning Information

Manufacturer: this product is authorized for manufacturing by Shenzhen Timekettle Technologies Co., Ltd. Address: Room 602, Building 3, Minqi Science Park, Xili Road, Shenzhen, Guangdong Province, China All rights reserved by Shenzhen Timekettle Technologies Co., Ltd.

Warranty Card

Name of Customer: . Location of Purchase Date of Purchase: Contact number:

E-mail:..

Address: Postal Code:

Terms & Conditions

- 1. After purchasing the device, please keep the proof of purchase and the warranty card for warranty
- 2. Under regular use, customers can enjoy free maintenance service with the proof of purchase and warranty card under the following conditions:
- The device has quality issues within one year since
- the date of purchase; or
- The parts have quality issues within six months since the date of
- Not covered by warranty:
- a. The device is worn due to regular use.
- b. Failure to use the device in accordance with the Manual.
- c. Damage caused by human or irresistible factors.
- 4. If damage is caused by human factors, use in inappropriate conditions, or the warranty period has ended, Timekettle may charge appropriate repair costs. Please contact us for such information if