



# MA-15 AIRPURIFIER

READ AND SAVE THESE INSTRUCTIONS
INSTRUCTION MANUAL AND WARRANTY INFORMATION
Lifetime warranty if replacing filters on time

## IMPORTANT SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

#### IF THE POWER CORD OR UNIT DOES NOT WORK, CONTACT MEDIFY CUSTOMER SERVICE IMMEDIATELY.

READ ALL INSTRUCTIONS BEFORE USING.

## DANGER — TO REDUCE THE RISK OF ELECTRICAL SHOCK:

- Always unplug the air purifier from the electrical outlet immediately after using it and before cleaning or replacing filters.
- · Keep the cord away from heated surfaces.
- · Always place the air purifier on a firm, leveled surface.
- Always place the air purifier at least 6 inches away from walls and 3 feet from heat sources such as stoves, radiators, or heaters.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- Keep dry DO NOT operate in wet or moist conditions.
- Check your air purifier cord and plug connections. Faulty wall outlet connections or loose plugs can cause
  the outlet or plug to overheat. Be sure the plug fits tightly in the outlet.

**NOTE:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

DO NOT attempt to defeat this safety feature. To do so could result in an electrical shock hazard.

## **WARNING** — TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- Always unplug the air purifier when not in use.
- Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 110v
  unit with a 110v power supply. You can break or ruin the circuit boards if you plug a 110v plug into a 220v
  power supply.
- Do not operate the air purifier with a damaged cord or plug, or after the air purifier malfunctions, or
  has been dropped or damaged in any manner. Contact www.medifyair.com for examination, electrical or
  mechanical adjustment, or repair.
- This air purifier is not intended for use in bathroom, laundry areas, and similar moist indoor locations.

- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings.
- Do not route cord under furniture or appliances. Arrange the cord away from traffic areas where it can be tripped over.
- To disconnect the air purifier, first turn controls to the off position, then remove the plug from outlet.
- Do not tilt or move the air purifier while it is in operation. Shut it off and remove the plug from the outlet before moving it.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an
  electrical shock or fire, or damage the air purifier.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where
  openings may become blocked.
- Use this air purifier only for its intended use as described in this manual. Any other use not recommended
  by the manufacturer may cause fire, electrical shock, or injury to persons.
- DO NOT use outdoors.
- BEFORE USING THIS PRODUCT, PLEASE MAKE SURE TO REMOVE THE PLASTIC COVERING FROM ALL FILTERS
- This product is intended for household use only.

#### SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

#### TECHNICAL DATA

Voltage: 120V/60HzRated power: 18W


Noise level: Min: 35dBA, Max: 51dBA
Unit dimensions: 15.5"H x 9.7"W x 9.7"L

Unit weight: 6.64 lbs
 EPA Est. No.:88959-CHN-1

#### **COVERAGE AREA\***

Up to 660 sf every 60 minutes, up to 330 sf every 30 minutes, 165 sq. ft every 15 minutes.

\*Based on average CADR for pollen, smoke, and dust when operating at fan setting 3. Assumes closed room with 8 ft. ceiling.

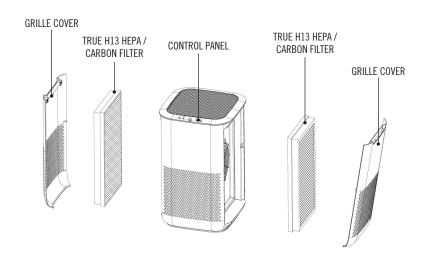

## FILTER PURIFICATION

#### 1. PRE FILTER


Removes hair, fibers, and large particles like dander.

#### 2. TRUE HEPA H13 FILTER


The high-efficiency H13 TRUE HEPA filter is tested to removed 99.9% of particles down to 0.1 microns. This higher grade of HEPA filter easily catches pollen, dust mites, and other tiny airborne particles you can't see.

## 3. ACTIVATED CARBON FILTER

Substantial carbon filter with carbon pellets remove toxic odors, smoke, and formaldehyde.

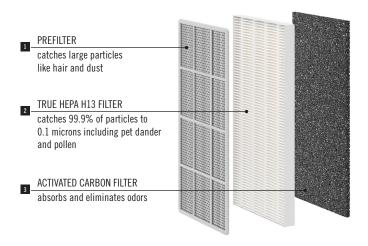

### CONTROL PANEL



# HOW TO USE

This air purifier is used to remove airborne contaminants from the indoor air in a particular area which could be potentially harmful to breathe.

#### BEFORE TURNING THE UNIT ON

- Take the air purifier out of the box and remove the clear protective plastic bag.
- · Place the air purifier on a firm, leveled surface.
- Plug the power cord into a standard AC outlet.

#### POWER BUTTON AND FAN SPEED SETTINGS

- To turn the air purifier on, press the power button.
- This air purifier has 3 fan speed settings: low (1), medium (2), and high (3). The higher the fan speed setting, the faster the air will be purified. To select or change fan speed, press the fan speed sutton until the desired setting is reached.

#### TIMER

Press the timer \( \bigc) button until the desired timer setting is lit on the display. The timer \( \bigc) button will cycle through the following settings: 1 hours, 2 hours, 4 hours, 8 hours and off. To cancel the timer at any time, press the timer \( \bigc) button until all timer LEDs are off. The air purifier will run continuously when the timer function is off.

#### DIMMFR

Press the dimmer - '- button to change the backlight to desired brightness, there are 4 brightness levels to change for all buttons' backlight LEDs. The green backlight will turn off for 1 second when the dimmer button has been pressed.

#### CHILD-LOCK BUTTON

Press the child-lock button 🔒 and hold it down for 3 seconds and all functional buttons will be locked. Press and hold the child-lock button again fo for 3 seconds and all functional buttons will be unlocked.

## FILTER REPLACEMENT

#### REPLACE FILTER LIGHT


The replace filter light illuminates when it is time to replace the True HEPA H13 filter based on the air purifier's hours of use.

#### REPLACING THE TRUE HEPA H13 FILTER

For optimal performance, replace every 2,500 hours under normal usage conditions. Once the filter has been replaced, press and hold the dimmer - \_c\_\_ button for 3 seconds to reset the indicator.



 Unplug the air purifier. Open the filter grille covers on the left and right of the unit by pushing the lock tabs on the top of the covers.



2. Take away the grilles from the unit.



3 Pull the tabs to remove the old filter


To purchase genuine Medify replacement True HEPA H13 filters, for model MA-15, go to the retailer where you purchased your air purifier, or visit www.medifyair.com.



4. Install a new genuine Medify replacement filter with the white side facing out (tabs will be visible).



Align the tabs at the bottom of the grille covers with the unit. Gently push the grille covers until they snap back into place.




 Plug the power cord into a standard AC outlet. Press and hold the dimmer button for 3 seconds to reset the indicator.

## CLEANING AND MAINTENANCE

#### **CLEANING THE PRE-FILTER**

NOTE: For the best performance, vacuum the pre-filter once a month under normal usage.



- 1. Unplug the air purifier.
- Remove the True HEPA H13 filter as described in the Replacing the True HEPA H13 Filter section.
- Vacuum the white side of the True HEPA H13 filter using the brush attachment of your vacuum cleaner, cleaning it thoroughly.
- 4. Place the True HEPA H13 filter back into the air purifier and close the grille.
- 5. Plug the power cord into a standard AC outlet.

#### FOR THE BEST PERFORMANCE

- NEVER use water or any household cleaners or detergents to clean the True HEPA H13 filter.
- · Clean off the outside of the unit with a dry cloth as needed.
- NEVER use water, wax, polish, or any chemical solution to clean the outside of the unit.
- Clean off the grille cover using a damp cloth or the brush attachment of your vacuum as needed.
- Vacuum the pre-filter monthly under normal usage conditions.
- Replace the True HEPA H13 filter every 2,500 hours under normal usage conditions.
- Always use a genuine Medify replacement filter for optimal performance.



This product earned the ENERGY STAR by meeting strict energy efficiency guidelines set by the US EPA. US EPA does not endorse any manufacturer claims of healthier indoor air from the use of this product. The energy efficiency of this ENERGY STAR qualified model is measured based on a ratio between the model's CADR for dust and the electrical energy it consumes, or CADR/Watt.

# **TROUBLESHOOTING**

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Unit will not operate	Unit is not plugged in	Plug the unit in
	Power button not pressed	Press the power button to turn the power on
	No power to unit	Check circuits, fuses, try a different outlet
Reduced airflow	The back grille may be blocked	Make sure side intakes are not blocked or the front outflow area
	Pre-filter needs vacuuming	Vacuum the pre-filter with the brush attachment of your vacuum cleaner
	The filter needs to be replaced	Replace the filter
Reduced odor removal	The filter needs to be replaced	Replace the filter
Excessive noise	The unit is not level	Place the unit on a flat and level surface
Replace filter light remains lit after filter replacement	The replace filter indicator needs to be reset	Press and hold the DIMMER button for 3 seconds until the replace filter light turns off

#### WARRANTY INFORMATION

If you have any additional questions, please contact customer service. All names and trademarks are property of Medify Air. Our company reserves the right to change the product at any time, without prior notice, and the company has no obligation to adjust any products supplied earlier. Please refer to the detailed warranty terms below. To register for the lifetime warranty, please fill out the attached form and mail it to:

#### **Medify Air**

1325 SW 30th, Avenue Deerfield Beach, FL 33442

Or complete the lifetime warranty registration available on our website (preferred method):

www.medifyair.com

#### LIFFTIME WARRANTY

Medify guarantees your Medify Air Purifier to be free of defects in material or workmanship for a lifetime period, provided you have completed and returned your warranty registration to Medify Air within the first 30 days of purchase, and that the filters are replaced with original and genuine Medify Air replacement filters at least once every three to four (3-4) months or after 2,500 hours of use. Within the first 30 days, Medify Air will replace the defective unit at no charge to you and reimburse you for any shipping charges. After 30 days, Medify Air's obligation and liability under this Lifetime Warranty is dependent on your use of our genuine filters, purchased on our website or from our authorized resellers, which can be found on our website. Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 110v unit with a 110v power supply. You can break or ruin the circuit boards if you plug a 110v plug into a 220v power supply.

Our Lifetime Warranty remains in effect as long as:

- 1. You submit your warranty registration to Medify Air within 30 days of purchase.
- 2. You change filters with genuine and original Medify Air replacement filters at least once every three to four (3-4) months or after 2,500 hours of use (whichever comes first).
- 3. You use a proper power supply based on voltage: 110-120V.
- 4. There is no evidence of tampering, mishandling, neglect, accidental damage, modification, and/or repair done to the Medify Air purifier by anyone other than authorized Medify Air service personnel.
- 5. Your air purifier is operated in accordance with the provided instructions.

This Lifetime Warranty is provided by:

#### **Medify Air**

1325 SW 30th, Avenue Deerfield Beach, FL 33442

> www.medifyair.com info@medifyair.com (888) 258-1008

Please visit our website for details on efficacy test data: medifyair.com/pages/reports