







Setting up your TXB Evolution.

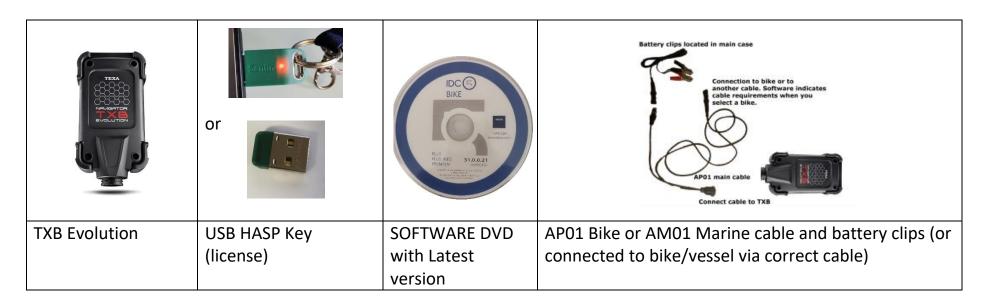

- Install your software. Insert your green usb hasp key when asked. If no DVD drive available, please see separate instructions for Download Manager
- Once installed, you should be taken directly to the configuration screen (go to part 3).

 If not, to navigate to the configuration screen.

 Click on Bike or Marine button, then click on the gears icon at the top of the next page, then click on the wand icon to enter the configuration page.

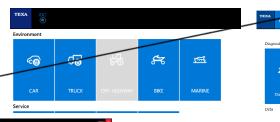











- Fill out your details and add your logo if you would like this to be shown on printed reports.
- Connect your TXB to a 12V battery using the relevant cable (AM01 marine or AP01 Bike). If using Bluetooth, ensure this is switched on in your computer, if using USB, connect the supplied usb cable to your pc and TXB. We recommend using Bluetooth. Then click on the arrow at the bottom right of the page. **NOTE- The TXB is powered by 12V, NOT USB.**
- 5 The software will automatically search for your TXB. Once found, press "click to configure"

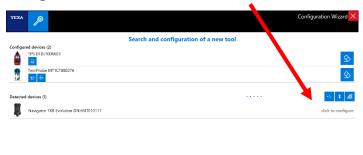

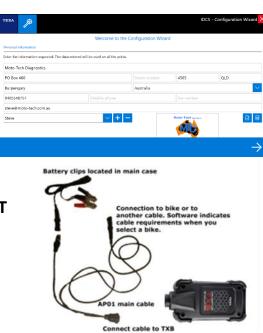








If Bluetooth is active on your pc, once the Bluetooth symbol turns blue, click on End the configuration. You do not need to have the usb cable connected at this point is using Bluetooth.

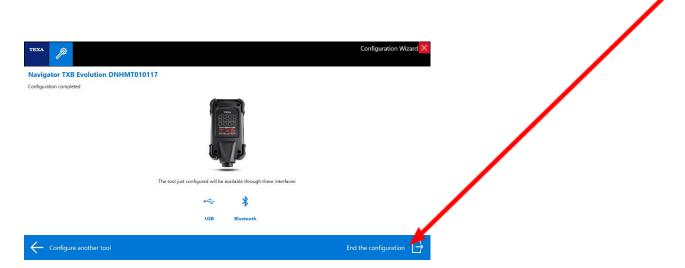

Set up should now be complete, on the next screen click on the red X button to get back to the home screen.











On first connection to a system, the software will register itself via internet. NOTE: you must enter diagnosis directly via a system option, not using the global scan, in order to complete registration.

If you have no internet you will need to manually enter the warranty activation code into the window that shows on your screen.

Please see document Basic Texa Demo for an introduction to using the system

We also have videos on your You Tube channel: https://www.youtube.com/mototechdiagnostics/

Also, if you are a Facebook user, please like and follow our page for updates and information.

Facebook: https://www.facebook.com/MT.Diag

We recommend contacting us to arrange a suitable time and day to run through the software with you. We can connect remotely with your permission using a program called team viewer. www.teamviewer.com. Navigate to that web site and download the free for personal use version.

Ensure you have a suitable bike for connection and the correct cable.