


Brief Introduction

1. Multi-function Button
2. Indicator Light
3. Android Charging Port

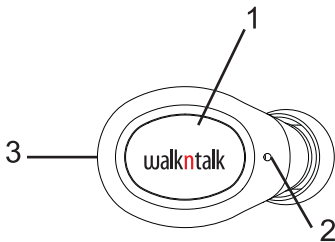

walkntalk



WNT Mini Wireless Earpiece

USER MANUAL

Charging the Battery

1. Fully charge the earpiece before using for the first time.
2. Plug the provided USB charging cable into the appropriate socket on the earpiece and the other end into your USB device.
3. The indicator light will turn red when the earpiece is being charged. Once fully charged, the indicator light will turn blue and remain on.
4. When battery is low, there will be a beep sound every 10 seconds.

Basic Use:

Listening to music

Be sure the earpiece connected with your mobile phone. Shortly press the multi-function button to pause the music and replay by pressing again.

Power On

Long press the multi-function button until hearing the voice "Power On".

Power Off

Long press the multi-function button until hearing the voice "Power Off".

Last call redial

Double click multi-function button.

Pairing your earpiece

Before using your earpiece for the first time, you must pair it with your Bluetooth enabled phone.

1. Press and hold the multi-function button until the indicator light flashes blue and red alternately. You will hear a voice say "Power On". Now the earpiece is under pairing mode.
2. Select "WNT Mini Wireless" on your devices. After pairing has been successfully completed, you will hear a voice say "Connected".

Making and Receiving calls

Be sure the earpiece connected with your mobile phone. You answer the call by short press the multi-function button once, and refuse to answer by long press the multi-function button for 2 seconds.