

## • ABOUT US •

Driven by the passion for innovation, we at Dr Trust endeavour to provide our customers with the latest medical inventions with an objective to promote good health and wellness all around the world. All the medical devices and health monitors provided by Dr Trust are supported by accurate, latest and ground breaking technologies, innovated at our headquarter in NY, USA. All our products adhere to the most stringent CE and FDA guidelines and are strongly recommended by doctors and health practitioners. Our products are designed in the utmost exemplary ways to ensure that their accuracy and convenience are unrivalled. The ease of their use and operation makes them even more suitable for users of all age groups.

Dr Trust strives to enhance the quality of lifestyle by providing with the most trusted and innovative health care and wellness products. Being a renowned global leader in health care products, Dr Trust ensures that our technically efficient team works dynamically and tirelessly to provide the best of the medical devices to our clients. The products that we have to offer are suitably designed for use at homes, laboratories and hospitals.

Our ground breaking solutions allow you to monitor your health in the easiest ways possible. In today's era when all of our lives are too hassled to handle, it becomes a bit difficult to pay attention to our health. But it has now become easier with the coming of the monitoring devices which can be conveniently used at homes and even on the go.

**We bring to you a variety of best self medical devices, trusted and used by Doctors, medical professionals and home users all over the world.**

## Dr Trust HomeSpa Aroma Diffuser – 903

### • QUICK STARTUP GUIDE •

#### IMPORTANT

Reservoir capacity is 200 ml

##### Step 1

Remove the outer cover from the unit. Next, remove the inner cover.

##### Step 2

Pour water into the reservoir until it reaches the max fill level.

##### Step 3

Add few drops of essential oils in the tank.

##### Step 4

Put on back the inner & outer covers.

##### Step 5

Insert the plug into the socket and switch it on.

##### Step 6

Choose your aroma mist and light options.



903

## • INTRODUCTION •

Dr Trust Aroma Diffuser & Humidifier is highly effective at dispersing water and added essential oils in a way that is beneficial for your health and well-being. It uses ultrasonic vibrations to break added liquids' molecules into microparticles which are then dispersed into the air to provide moisture. It has unique mouth design for delivering uniform fog and providing moisture for dry cough, skin, and air. It humidifies dry and stuffy air quickly with removing unpleasant odors, pollutants & other harmful substances from the interiors. It relieves stress & soothes mind too.

## • KEY FEATURES •

1. Operation based on ultrasonic vibrations
2. Holds 200 ml water and works continuously up to 6 hours
3. Shuts off automatically when water runs low
4. Safe, energy efficient and quieter
5. 3 color changing lamps with humidification time settings
6. Functions as both cool mist air humidifier and diffuser.
7. Neutralizes the dryness & harmful particles present in the air

## • APPLICATIONS •

Designed to purify air for reducing inflammation and skin allergies. It is suitable for home, hospitals and offices etc., in the areas where air conditioners are present to prevent air dryness. It can be used in a beauty salon, yoga centre, bedroom, baby room, hotel, hospital, living room, conference room, and corridor etc to fill the space with a lovely fragrance.

## • SAFETY INSTRUCTIONS •

While using the appliance, it is necessary to observe some precautions. Improper operation may result in personal injury to the user or other people, as well as damage to property.

- It is an electric appliance and it should be used under supervision, especially when it is used in a room with children.
- Please, make sure that children do not play with the appliance.
- Use it only in accordance with the user manual.
- Never use the diffuser with a damaged power cord or plug and if the diffuser is broken or damaged by falling or in other circumstances.
- It should be operated only in the fully assembled condition. To avoid a burn, do not touch the membrane of the operating diffuser. High frequency of oscillations results in heating of the membrane.
- The appliance is not intended for use by persons (including children) with physical, sensory or mental disabilities, or having insufficient experience and knowledge, if they are not under supervision and have not received instructions for use of the appliance from a person responsible for their safety.

## • IMPORTANT NOTES •

- High-frequency oscillations of the ultrasonic diffuser membrane are noiseless and safe for people and pets.
- To avoid electric shock, the damaged power cord should be replaced by a qualified specialist only in an authorized service center.
- To avoid traumas and property damage, do not try to repair the diffuser by yourself.
- Always keep the diffuser on flat and dry surface.




- Do not use the diffuser on the floor, as well as in close proximity to heating appliances, walls, furniture and other objects.
- The manufacturer and vendor are not responsible for damages caused by incorrect positioning of the diffuser.
- Diffuser should be installed on a rise – e.g. on a table, pedestal, etc.
- Never fill the water in the humidifier through a diffuser.
- Do not immerse the unit in water or other liquids.
- Do not install the unit in a passage or in other places, where it can be touched, overturned, etc.
- If the unit is not in use, unplug it.
- Do not lay a power cable under a carpet or other objects. While placing the device, be careful that you do not touch the power cable by accident.
- Do not use the unit in damp rooms.
- Prevent the ingress of foreign objects into the device.
- Do not block an air intake and the diffuser with foreign objects.
- Do not sit or stand on the device and do not put heavy objects on it.
- Do not add water over Max scale level.
- Only use water-soluble essential oils to fill your space with more fragrance without affecting mist output.
- Clean the diffuser after each use to avoid clogging.
- Always empty the water tank and wipe it to dry.
- Do not wash it directly under the water tap.
- Unplug the diffuser in the following cases:
  1. before discharge or filling of a tank with water;
  2. before cleaning and maintenance;
  3. before assembling/disassembling of elements;
  4. before displacement of the diffuser.

## Note!

- Do not use inferior quality essential oil as this would block the cotton filter and mist export even corrode the product.
- Use water-soluble essential oil for effective fragrance.

## • APPLIANCE DESCRIPTION •


1. Mist out-let
2. Shell
3. Mist out-let silicon
4. Water tank cover
5. Water tank
6. Base
7. Button
8. Metal base
9. Silicon feet

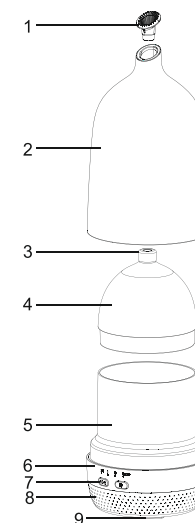

## • SETTING UP THE DEVICE FOR OPERATION •


### Step 1

Remove the outer shell and body cover.

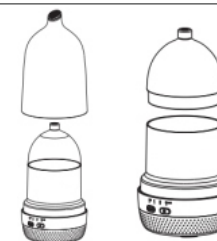

### Step 2

Fill the water tank with clean, cold or purified water. Water temperature should be around 6°C to 40°C. Do not pour water above the MAX Scale Level of the tank.

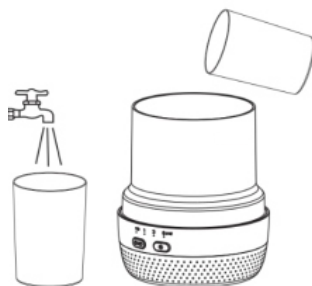

### Step 3

Pour the aroma oil inside in moderate amount. (Preferably 2-3 drops)



### Step 4

Cover the water tank and shell.

### Step 5

Insert the plug into the socket, a buzzer alarm rings which indicates the appliance is connected.

### Step 6

Switch on the appliance using the on/off button, aroma indicator light can be turned on or off as per requirement.

### Step 7

Indicator light color changes to red when water tank has less water.

### Step 8

8. If the appliance stops working due to lack of water, turn off, unplug and refill the water tank.

### Note!

- Do not pour water into the mist outlet of the appliance.
- Do not move the appliance before turning off.
- Do not move the appliance during working.

### 1. ON/OFF & Timer

1. Connect to power; a buzzer alarm indicates the appliance is connected to power.
2. Press the on/off button; appliance starts to produce the mist by default.
3. Press the on/off & timer button again, timer sets to 1 hour as default.
4. Press 3rd time, timer sets to 3 hours, 4th time to set 6 hours,
5. 5th press to switch off the appliance.

### 2. Aroma Indicator Light

Product has 3 different indicator lights. Change the light by pressing the Indicator light button.

- 1st press – orange color,
- 2nd press – pink color,
- 3rd press – Purple color,
- 4th press – indicator light off.

### 3. Water Shortage Status


Indicator light turns red when there is insufficient water in the tank.

**Note:** Light and Timer function can be used at the same time.



## • CLEANING AND MAINTENANCE •

- Always unplug the unit before removing the water tank.

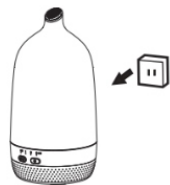

- Do not touch the water in the base during operation!

- Caution-risk of electric shock damage to the product!

- Switch OFF the appliance and unplug it from the socket before cleaning it.

- Clean the water tank and the base regularly. Use water only, no detergents.



## • SPECIFICATIONS •

|                        |           |
|------------------------|-----------|
| Voltage                | 24v-      |
| Power                  | 9 W       |
| Capacity of water tank | 200ml     |
| Mist                   | 15-25ml/h |

## • TROUBLESHOOTING •

| Problem                                                                                                 | Possible Cause                                                                                                                                      | Remedy                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Poor atomizing (insufficient capacity)                                                                  | The unit is operating in the minimized mode (low atomizing frequency)<br><br>The atomizer is clogged<br>Temperature of water in the tank is too low | There is no problem. If you need to switch to the intense mode of operation, turn the regulator handle all the way to the right.<br>Clean the atomizer.<br>Set maximum capacity. The diffuser's capacity will go up after a while. |
| No atomizing                                                                                            | The power cord is poorly connected to the outlet                                                                                                    | Connect the power cord into the outlet carefully                                                                                                                                                                                   |
| There is white deposit on objects around the diffuser (salts, separating out from water)                | 1. Lime deposits have formed on the membrane<br>2. There are lot of salts in the water used (calcium and magnesium)                                 | 1. Clean the diffuser's membrane with a special brush<br>2. Use filtered water                                                                                                                                                     |
| Steam has an unpleasant odor                                                                            | Stale water is used<br><br>Remains of stale water or waste have accumulated in the unit's case or the atomizer                                      | Clean the unit according to the cleaning and servicing instructions and fill the tank with fresh & pure water                                                                                                                      |
| Condensate is formed on the upper part of the diffuser and on surrounding objects when it is operating. | 1. High humidification intensity is set.<br><br>2. High room humidity and temperature.                                                              | Lower the humidification intensity by turning the on/off and steam outflow intensity regulator counterclockwise.                                                                                                                   |



|                                                          |                                                                                                                                         |                                                                                                                                                                                                    |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Water appears next to the diffuser when it is operating. | 1. High humidification intensity is set.<br>2. Lime deposits have formed on the membrane and in grooves for water (in the unit's base). | 1. Lower the humidification intensity by turning the on/off and steam outflow intensity regulator counterclockwise.<br><br>2. Clean the unit according to the cleaning and servicing instructions. |
| Water appears / accumulates next to the diffuser         | Water tank is leaking                                                                                                                   | You need to contact an authorized service center                                                                                                                                                   |

### Important!

Products must be stored in dry, ventilated storages at the temperature not lower than -30°C.

## CUSTOMER SUPPORT

### CONTACT ADDRESS

#### USA

Nureca INC.USA  
276 5th Avenue, Suite 704-397,  
New York (NY) - 10001, USA

#### INDIA

#### Corporate Office (Mumbai)

Nureca Limited  
128 Gala Number Udyog Bhavan,  
1st Floor Sonawala Lane, Goregaon East  
Mumbai City Maharashtra 400063

#### Contact us

India: +91-7527013265 / +91-9356658436

Website: [www.drtrust.in](http://www.drtrust.in)

Corp Website: [www.nureca.com](http://www.nureca.com)

Email: [customercare@nureca.com](mailto:customercare@nureca.com)

Connect with us on social networks

Facebook: @drtrust

Instagram: @drtrustisin

Youtube: NurecaUsa

COPYRIGHT©2021 NURECA LTD ALL RIGHTS RESERVED



Scan to View  
Product Demo Video  
[www.drtrustusa.com/903](http://www.drtrustusa.com/903)