

# GRIPPS®

## GRIPPS Technical Specification Sheet:

### GRIPPS® Tablet Gripper Models: H02037, H02037P



**H02037**  
Tablet Gripper  
**Max Load:** 0.85kg | 1.9lbs  
**ANSI/ISEA 121-2018**  
**COMPLIANT**



**H02037P**  
Tablet Gripper With Coil Tether  
Single Action 0.75kg / 1.65lb  
**Max Load:** 0.75kg | 1.65lbs  
**ANSI/ISEA 121-2018**  
**COMPLIANT**

## GRIPPS® Tablet Gripper

### SAFETY INFORMATION

**⚠️ WARNING** Before using the GRIPPS® Tablet Gripper, read all provided safety information pertaining to the use of your Dropped Tool Prevention (DTP) device. **FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH.**

The user of a DTP device bears the responsibility of reading all safety information contained herein. Keep this manual for future reference.

#### Intended Use:

When used properly, the GRIPPS® Tablet Gripper can prevent workplace hazards resulting from dropped tools. These may include personal injury and material damage.

GRIPPS® does not approve use of this device for any activities not described in the User Instructions. This device is not intended to be used in any recreational activity, as a personal fall-arrest device or in any other manner not described herein.

**⚠️ WARNING** Misuse of this device could result in serious injury or death.

Adhere to all manufacturer recommendations regarding the operation and maintenance of this device. For additional information, contact GRIPPS® customer support.

Read and adhere to the following in order to ensure correct operational functionality:

- Your DTP should never be used as a personal fall-arrest device or restraint system.
- Do not use this device with tools that exceed the specified maximum load/weight.
- A DTP device used in applications that exceed the limits of operation specified by the manufacturer should be considered unsafe and should be replaced.
- Do not tether a tool over 2.5kg/5.5lbs directly to your clothing or person.
- Inspect your DTP device before each use.
- Ensure the DTP device is securely connected to a load rated tool connector or anchor point before use.
- Inspect any tool connector point before it is connected to the DTP device.
- Modification of the DTP device voids all warranties and violates manufacturer recommendations.
- Do not use a tool that cannot be connected to your DTP in the manner specified by GRIPPS®.
- It is unsafe to extend the length of the DTP product by any means.
- Do not use this product if it will create an unsafe working environment.
- Use extra precaution around moving machinery, moving parts, electrical hazards, extreme temperatures, chemical hazards, or combustion hazards.
- Avoid contact between any connected tethers and rough or sharp edges.
- Regularly inspect the Tablet Gripper & connected tethers to ensure it is free from any dust, grime or debris.

- All connected tools and equipment, including connection points, must be compatible for use with this DTP device.
- Always wear appropriate personal protective equipment.
- If a tether has arrested a dropped tool or object, it should be taken out of service and replaced.
- All procedures shown in this instruction are for GRIPPS® Tablet Gripper products only.

### GENERAL USE AND CARE

The GRIPPS® Tablet Gripper allows for the tethering of your phone/mobile device without the need for a permanent or semi-permanent connection point. Used in conjunction with a load-rated tether, the Tablet Gripper uses purpose-built silicon to create a fully load-rated mobile device tethering solution with zero impact on device operation.


#### Recommended Use of GRIPPS® Tablet Gripper:

1. Use with rectangular shaped devices with a minimum size of 135mm x 65mm x 7.0mm (5.3" x 2.5" x 0.3") and a maximum size of 160mm x 80mm x 10mm (6.3" x 3.0" x 0.4")
2. Only use in conjunction with GRIPPS® Certified Tethers.
3. Ensure the Tablet is secured within the Tablet Gripper by tugging on the attached tether prior to operating at height.


#### Before Use:

Thoroughly inspect your GRIPPS® DTP device before each use. Do not use any component that presents deformities or deterioration.

### HOW TO USE / INSTRUCTIONS:

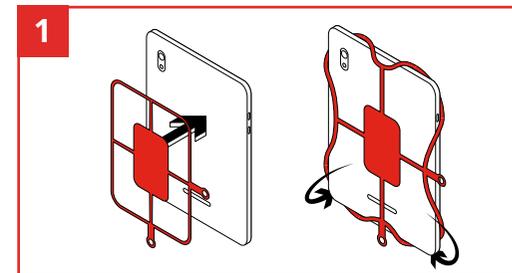

Pull all four corners of Tablet Gripper over the corners of your tablet to the front side. Ensure all corners are firmly applied and Tablet Gripper has a snug fit over device.

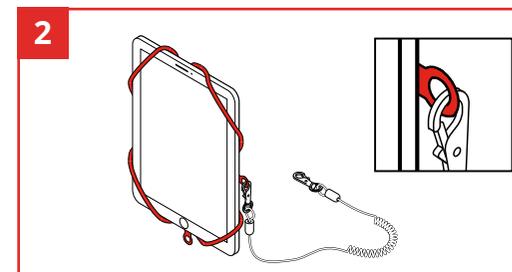

Attach Coil Tether to one of the two eyelets. Connect opposite end of tether to an appropriate anchor point.

#### After Use Care:

Clean and inspect the Tablet Gripper and any connected tethers. For tougher stains, use warm water and a mild soap or detergent. Do not use again until dry.

Store in a clean and dry environment. Proper care will help to ensure that it will operate effectively and extend its service.

### FOR PRODUCT SUPPORT CONTACT:

support@gripps.com | +61 3 8383 9458

WWW.GRIPPS.COM

## GRIPPS®

 [linkedin.com/company/grippsglobal](https://www.linkedin.com/company/grippsglobal)

 [facebook.com/gripps1993](https://www.facebook.com/gripps1993)

 [youtube.com/@gripps3480grippsglobal](https://www.youtube.com/@gripps3480grippsglobal)

 [instagram.com/grippsglobal](https://www.instagram.com/grippsglobal)