

OPERATING PROCEDURE



OSPREY DEEPCLEAN
STEAM CLEANING TECHNOLOGY

- **Always** Check daily before use that the power supply cable, plug and sockets are in good condition; check for visible signs of damage (do not use if damaged)
- **Always** ensure the machine is connected directly to mains electricity when heating up initially and keep extension cable use to a minimum
- **Always** The use of disposable gloves and aprons is recommended with this machine
- **Never** allow any part of the machine to be immersed in water
- **Never** allow inexperienced, untrained or unauthorised people access to the machine
- **Always** Follow the correct procedure when filling the water reservoirs and waste tank


Operating Procedures on the SteamForce Compact



Unclip the 4 locking clips to release the machine from the integral storage unit.



Set the unit down on a suitable flat surface

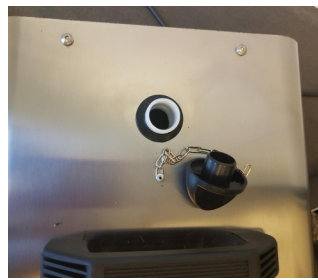

Remove the water tank stopper and fill tank with clean, cold tap water only. Re-fit stopper.



Plug the machine into a suitable electrical socket and press the ON/OFF switch to the ON position



Press the boiler switch button to the ON position and allow the machine to heat up



After approx. 7-8 minutes the green "Ready" light will stop flashing. The machine is now ready to use.



If required, connect the extension tubes to the pistol grip before selecting the required accessory. Ensure both are firmly pushed onto the pistol grip until they click into place



Set the steam volume required using the steam regulator



Switch the top switch to the "ON" position as shown and press the trigger on the pistol grip to release the steam



When the red water tank light illuminates, stop operation, turn off machine. Refill the water tank and switch machine back on

Note: In accordance with PSSR 2000 the machine should be serviced within 14 month intervals.

The following rules **must** be observed when using the **Fogging Device for the SteamForce Compact**.

- **Always** start fogging the furthest away from the entrance/exit of the room.
- **Always** Wear full PPE when working in confined spaces - mask, faceshield, goggles, gloves, overalls.
- **Always** ensure ventilation is adequate for the room
- **Never** direct the fogging device towards humans or animals
- **Never** use unapproved chemical with the device
- **Never** use the fogging device in small confined spaces of less than 15sqm without proper ventilation,

Fogging Device for the SteamForce Compact



Take the fogging device attachment.



Unscrew the bottle from the attachment



Fill the bottle with the recommended chemical.



Always wear a face visor when using the fogging device.



Re-attach the fogging bottle to the attachment.



Always start fogging the furthest away from the entrance/exit of the room and always away from