



GET STARTED

Fully charge before using the CrazyCap™

Fill the bottle with water and screw the cap on it.

Depending on source, sterilize water in two different modes (Normal mode and Crazy mode)

To ensure uniform sterilization effect on the contents, gently swirl the bottle during sterilization. Once Sterilization is complete, enjoy ultra-clean water* from a cleaner bottle.

Besides water/bottle CrazyCap™ can be used on other surfaces like cell phones, laptops, tablets, etc.



NEED HELP WITH YOUR CrazyCap™?

Talk to an expert at
HELLO@THECRAZYPAP.COM

*Deep UV sterilization technology only eliminates microbial contaminants not chemicals or particulates. Chemical and particulate matter needs to be filtered separately before sterilization.

WATER STERILIZATION

Normal Mode : Press touch sensor twice, UV-C activates for 1 minute. Suitable for sterilizing low to moderately contaminated water like Tap water.
Crazy Mode : Press touch sensor five times, UV-C will activate for 2.5 minutes. Suitable for sterilizing moderately to highly contaminated water such as lakes, ponds, springs, etc.,

Slow blinking blue light indicates sterilization is active.

Solid green light indicates sterilization is completed

STERILIZATION ON OTHER SURFACES

CrazyCap™ 2 can be used for sterilizing cell phones, laptops, keyboards, toothbrushes, jewelry, etc. To use, simply turn-on the Crazy mode, and point the deep UV light on to 4-5 inches away from the surface of interest. Make sure to cover the entire surface of treatment by moving the light slowly through out the complete Crazy mode cycle.

BATTERY STATUS


Tap touch sensor once gently to indicate battery life



- 50% - 100% charge
- 50% - 25% charge
- Under 25%

CHARGING

Wipe off the cap to remove any water residue. Place the charger on the cap and make sure its firmly secured. Charge the CrazyCap™ by plugging it to a USB wall adaptor or a computer. Indicator light will pulse orange while charging once fully charge, it will turn green.

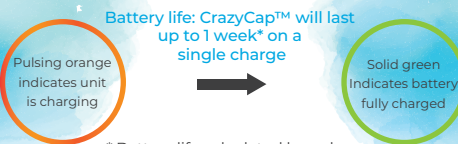

* Battery life calculated based on 5 Normal mode sterilizations per day. Using CrazyCap™ in Crazy Mode Sterilization or more than five times will affect battery life.



GET SUPPORT

Learn more about the CrazyCap™ and the warranty at TheCrazyCap.com/support
Get your warranty replacement.*
Register for your one-year limited CrazyCap™ warranty today.

*One-year limited warranty summary: Microlyscs warrants the included product and the accessory against the defects in materials and workmanship for one year from the date of original purchase. Microlyscs does not warrant against normal wear and tear, nor damage caused by accident or abuse. Microlyscs requires you to return your product before a warranty replacement is issued but may waive this requirement.

START CLEAN

For the best CrazyCap™ performance, prevent residue build-up by keeping the mouth of the bottle clean. This is the area where UV-C light can't be reached.

Use provided alcohol wipes to clean the mouth area. Dry thoroughly after cleaning. It might take up to an hour to fully evaporate the alcohol. You can accelerate drying by wiping it of with a dry cloth.

DO NOT PUT CrazyCap™ IN THE DISHWASHER

FOLLOW US

JOIN US

[@crazycapbottle](https://www.instagram.com/crazycapbottle)
[@microlyscs](https://www.instagram.com/microlyscs)



#withCrazyCap

TheCrazyCap.com

© 2019 UBO-Technologies, LLC. ALL RIGHTS RESERVED