

USER MANUAL

Applicable for AP6200L & AP6300L (Lite)



AP6300L



AP6200L

Faux Orchid Air Purifier with
PM2.5 Air Quality Monitor
AP6200L & AP6300L (Lite)

AP6200L / AP6300L (Lite)

FAUX ORCHID AIR PURIFIER WITH PM2.5 MONITOR

USER MANUAL




Thank you for welcoming our Air Purifier into your home.

Zero2.5 Air Purifier emit negative air ions (NAIs) that remove pollutants from the air.

This device shows real time air quality (PM2.5) with the OLED display.

IMPORTANT NOTE

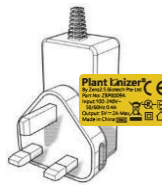

Only use Zero2.5 adaptors. Other adaptors in the market are incompatible and may result in damage of adaptors in the event of improper usage.



Electric field may interfere with pacemakers.
Avoid close contact.

PACKING LIST

- AP6300L (Lite) Faux Orchid Air Purifier with PM2.5 Monitor
- Zero2.5 Adaptor

SMART HOME
READY

The Benefits of Negative Air Ions (NAIs)

Forest Air Technology

NAIs are naturally formed in rainforest, waterfalls, and during heavy storms. Humans take 20,000 breaths each day. The natural fiber, negative ion air purifier works to return forest air for a healthier living.



Removes air-borne pollutants; viruses, PM2.5




Removes allergens and molds



Rejuvenates the body



Biophillic design

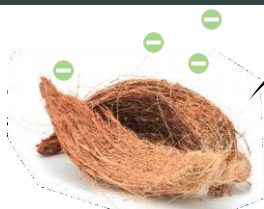

Natural Coco coir fiber sustainably-made from coconut husk by-products

Faux Orchid Purifier stimulates natural fibers to release negative air ions (NAIs), a million-fold more emission than a live tree



Charges up harmful airborne pollutants (viruses, germs, PM2.5)

No fans/filters to replace



Causing them to stick to surfaces, where we can remove them through regular wiping.

1 FOREST AIR PURIFIER = 1 FOREST OF TREES

Faux Orchid Purifiers emit a million-fold more Negative Air Ions (NAI) than a live tree does. Like in the forest, they clean the air of harmful PM2.5 particles, refresh the mind, and reduce infectivity and transmission of viruses.

An eco-friendly natural-fiber based solution to bring clean and fresh air to any indoor or outdoor environment.


Sustainably made from the fibers of the humble coconut husk. Low maintenance, with no fan or filters to discard and replace. Faux comes in a versatile selection of faux plants to complement your space.



AP6200L / AP6300L (Lite)


FINDING A SUITABLE SPOT

Place at least 10cm away from the wall. Elevate pot for better ion emissions.

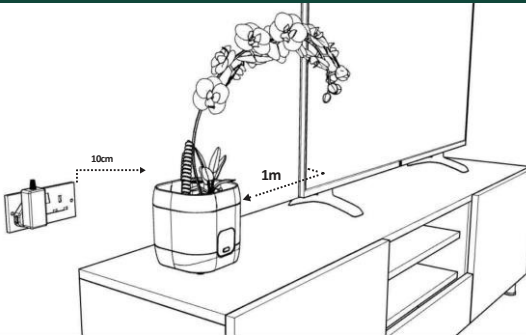

Place at least 1m away from TV, monitors or laptops to avoid static interference.

SWITCHING ON YOUR AIR PURIFIER

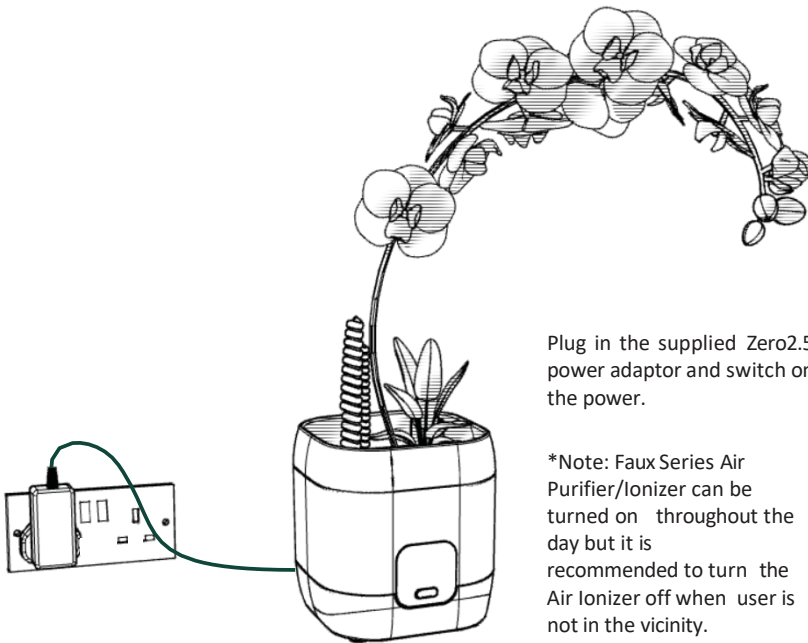

Plug in the supplied Zero2.5 power adaptor and switch on the power.

*Note: Faux Series Air Purifier/Ionizer can be turned on throughout the day but it is recommended to turn the Air Ionizer off when user is not in the vicinity.

SAFETY INFORMATION

- Do not remove the AC adaptor if your hands are wet.
- Not intended for use in environment where there is chance of explosive gases.
- Do not tamper with the adaptor in any way.
- Do not touch the ionizer/purifier when your hands are wet.
- Do not use the ionizer near flammable liquids or gases.
- Cleaning and maintenance of the ionizer is best done by an adult.

AP6200L / AP6300L (Lite)

CONTROL THE DEVICE IN LOCAL MODE

CONTROLS IN LOCAL MODE:

- Operation Mode
- Particle Size
- Ion Strength
- Therapeutic Mode
- AQI Mode



- 1 LED INDICATOR
- 2 OLED DISPLAY
- 3 CONTROL BUTTON


- ▶ **Press and release** to navigate between selections
- ▶ **Press and hold** for 1 sec to make selection

Landing Page




▶ **Press and Release**

Current Settings

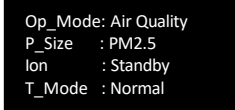

▶ **Press and Release**


Main Menu

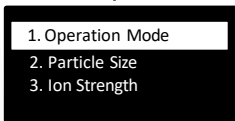

▶ **Press and Release** to toggle between options.


▶ **Press and Hold** for 1 sec to select option.

Operation Mode Menu

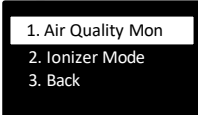


Set Operation Mode

Particle Size Menu

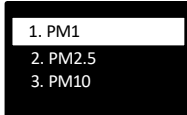


Set Particle Size

Ion Strength Menu

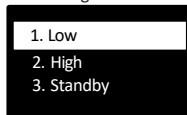

Set Ion Strength

Therapeutic Mode Menu

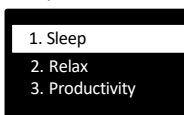

Set Therapeutic Mode

(Note: In Air Quality Monitor Mode, ionizer function is disabled).

(Note: Ion strength selection is only available in Ionizer Mode).

(Note: Therapeutic Mode selection is only available in Ionizer Mode).

- In Local mode, use the Control Button on the OLED display to control the device.
- Pressing the button navigates selections. Press and hold the button for 1 second makes the selection.
- From the landing page, short-press the button to enter the Settings menu. Pressing the button again will open up the main menu.
- Menu Navigation and Selection:
 - Example: From the main menu, press and hold the button for 1 second to select "ION STRENGTH". Thereafter, press to toggle between different ion strengths. Press and hold to select desired option.
- Shortcut key to toggle between PM2.5 and particle count reading display:
 - From the landing page, press and hold the button for 1 second to toggle between PM2.5 and 1.0 um Particle Count reading display.

AP6200L / AP6300L (Lite)

CONTROL THE DEVICE IN LOCAL MODE

CONTROLS IN LOCAL MODE:

- Operation Mode
- Particle Size
- Ion Strength
- Therapeutic Mode
- AQI Mode



LED INDICATOR

- Displays LED colour according to the AQI category colour code of the respective AQI modes as shown below.

Default AQI Mode

AQI Category	PM2.5 Level ($\mu\text{g}/\text{m}^3$)
Excellent	0 - 5
Good	6 - 15
Average	16 - 50
Poor	≥ 51

Singapore AQI Mode


AQI Category	PM2.5 Level ($\mu\text{g}/\text{m}^3$)
Normal	0 - 55
Elevated	56 - 150
High	151 - 250
Very High	≥ 251

Europe AQI Mode

AQI Category	PM2.5 Level ($\mu\text{g}/\text{m}^3$)
Good	0 - 10
Fair	11 - 20
Moderate	21 - 25
Poor	26 - 50
Very Poor	51 - 75
Extremely Poor	76 - 800


USA AQI Mode

AQI Category	PM2.5 Level ($\mu\text{g}/\text{m}^3$)
Good	0 - 12
Moderate	13 - 35
Unhealthy for Sensitive Groups*	36 - 55
Unhealthy	56 - 150
Very Unhealthy	151 - 250
Hazardous	251 - 500

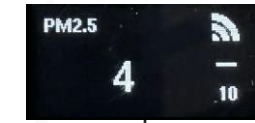


Press and Release

Current Settings

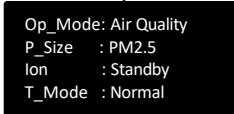


Press and Release

Main Menu

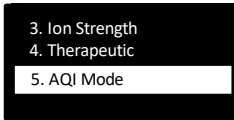

Press and Hold for 1 sec to select option

AQI Mode Menu

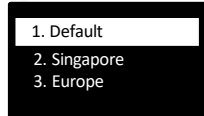

Set AQI Mode

Sensitive groups include:

- Children (under 18), including teenagers, because their lungs are still developing and they breathe more air per pound of body weight than adults
- Older adults (65+)
- Other adults (18-64) with lung diseases such as asthma
- People who are active outdoors, including outdoor workers

AP6200L / AP6300L (Lite)

SET THERAPEUTIC MODE

Set Therapeutic Mode

Different Therapeutic modes are suitable for different scenarios. For more details of each mode, refer to next page.

1. Select device on Dashboard tab.
2. Select the “Therapeutic Mode” tab.
3. Select desired Therapeutic mode.

Note: AP6300 must be in ionizer operation mode

PRODUCTIVITY MODE

Alpha brainwaves have a frequency of 8-13Hz. Alpha brainwaves are observed when human brain is creative and relaxed. Alpha waves aid overall mental coordination, calmness, alertness, mind/body integration and learning. This setting induces Alpha brainwaves to assist in focus, creativity, and alertness.

SLEEP MODE

Delta brainwaves are from 0.5-4Hz. These are the slowest of all brainwaves and are strongest when we are enjoying restorative sleep in a dreamless state. This is also the state where healing and rejuvenation are stimulated. This setting resonates with Delta brainwaves and amplify its effect. It counteracts infections and stimulates the immune system as well as phagocytes.

FOCUS MODE

Beta brainwaves dominate our normal waking state of consciousness when attention is directed towards cognitive tasks and the outside world. Beta is a ‘fast’ activity, present when we are alert, attentive, engaged in problem solving, judgment, decision making, or focused mental activity.

RELAX MODE

7.83Hz is also known as the Earth’s Brainwave or “Schumann Resonance” Alpha-Theta borderline. Alpha-Theta borderline brainwave frequency is relaxed, dreamy, sleepy state, that is also when cell regeneration and healing happen. This setting amplifies the Earth’s Brainwave’s effects that help with relaxing, normal sleep, dreaming and body detoxification.

AP6200L / AP6300L (Lite)

TROUBLESHOOTING

Screen does not turn on

Check if adaptor is properly inserted in the electrical outlet. Check if electrical outlet is turned on.
Check if DC jack is correctly attached, make sure it is pushed all the way into the Air Ionizer.
Check if the electrical outlet is working by plugging in another device.

Ionizer Weak

Shift the Air Ionizer further away from other surfaces such as a nearby wall or furniture.

For additional information or FAQ, please refer to www.zero2-5.com.

TECHNICAL SPECIFICATIONS

Required Power Adaptor
Operating Temperature
Storage Temperature
Room Size
Dimensions (mm)
Power Input

Zero.5 Adaptor
0°C to 40°C (32°F to 104°F)
-20°C to 70°C (-4°F to 158°F) 15-20 m²
142 x 142 x 160mm (Pot only)
AC100- 240V, 50/60Hz, 0.15A

WARRANTY

All electronic components come with a warranty of 1 year. Warranty does not include damages due to improper usage.



Visit us at
www.zero2-5.com




zero2.5



Singapore Brand

 67 Ayer Rajah Crescent #03-10/11
Singapore 139950

 zero2.5official

