

PROAIM Spin Lightweight Doorway Dolly (DL-SPIN-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Proaim Spin Doorway Dolly



Proaim Track Wheels for Spin Dolly (SPN-TRK-WS)



Proaim Wheel Axle for Spin Dolly



4mm 10mm 13mm



Accessories

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Spin Dolly Setup

- Loosen the knob on either rear side of dolly. Insert both Handle Bar together & tighten the knobs to secure them.

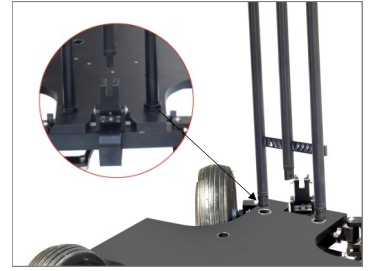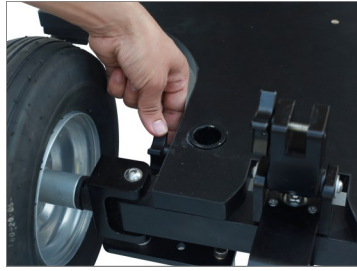

- Insert push bar handle into Rear-Wheel Steering and lock it with the provided pin.



Converting 4x4 Steering into 2x2

- Hold hex nut with 13mm wrench & loosen the steering rod bolt with 4mm allen key to remove the allen bolt from dolly.



- Then remove the bolt (as shown) with the help of 10mm allen key and detach the front section of dolly.



- Remove bolts on Pneumatic wheels with provided 4mm allen key and detach the wheels.



- Insert the wheel axle in dolly & screw it tightly. Then attach the wheel and tighten it properly.



■ Track Wheels Setup

- Remove the knob to attach track wheels.
- Now attach Track wheels. Re-insert knob and tighten it properly. Follow the same steps on the other side of the dolly.



YOUR PROAIM SPIN LIGHTWEIGHT DOORWAY PLATFORM DOLLY ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.