


Vanguard cart for C-stand CS4 (CT-VNGD-CS4)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

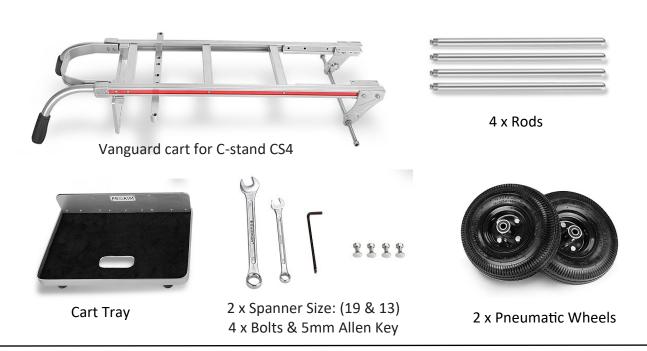

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

FUNCTION

damages can be avoided.

Rubber Hand Grips

For Comfortable Handling & Can maintain a secure and comfortable grip. Hole A unique holding plate with 10 holes for c-stand extensions. Rods Designed to safely carry up to 10 stands at once. **Pneumatic Wheels** Eliminate the hassle of transportation with rear wheels. **Soft Carpet Lining** For Damage-Free Stand Mounting & Scratches and

For Stand Mounting

Tray

Vanguard Cart for C-Stand **Setup**

• To attach the Vanguard cart to the tray, first remove the bolt by loosening the nut.





• To properly attach the Vanguard cart to the tray, match and insert the bolts from the bottom, as shown in the image.





• After inserting the bolt, tighten it and secure it using the spanner.





 To attach the pneumatic wheel, remove the bolts and washers from the wheel using the spanner.





• Now, insert the wheel in the rod and repeat the same process for the second wheel.





 After attaching the wheels, insert back the bolts and washers to completely secure the wheels.





• After attaching the wheels, secure them using the spanner.

NOTE: Enjoy hassle free transportation with pneumatic rear wheels that provide incredibly smooth movement.

• To remove the bolt from the rod, use an Allen key.










- To insert the rod in the Vanguard Cart, tighten it by twisting them around, as shown in the image.
- Repeat the same process for the remaining three rods.



Feature: It features a unique holding plate with ten holes for c-stand extensions.





 After inserting all four rods, insert bolts from the backside of the cart, as shown in the image.

Feature: With its non-slip rubber hand grips, you can maintain a secure and comfortable grip.





• All rods are securely inserted on the Vanguard cart for C-Stand.



• Loosen the knob of the 360° Rotatable Grip Clamp (Not Included).





• Hang the C-Stand on the rod and insert the clamp.


Feature: Effortlessly carry C-stands around the set with Vanguard cart for C-stand, designed to simultaneously maneuver up to 10 stands.






 The Vanguard Cart can hold up to 10 C-stands with extra protection using the Grip Clamp (Not Included).

NOTE: It has a 360-degree locking design with 12mm or 16mm holes that allow you to mount your equipment in variable positions.







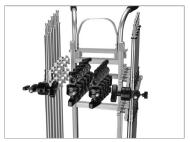

YOUR PROAIM VANGUARD CART FOR C-STAND CS4 ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.