







ROTAI




E16 E-sports massage chair

User Manual


Installation

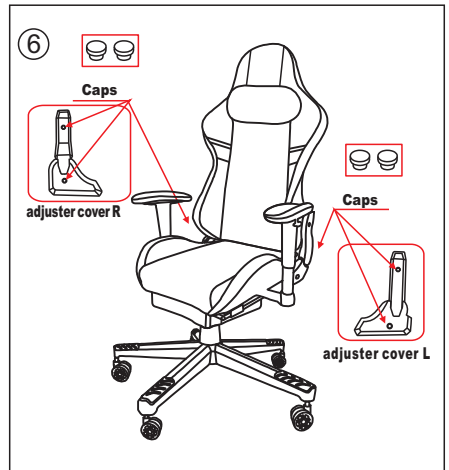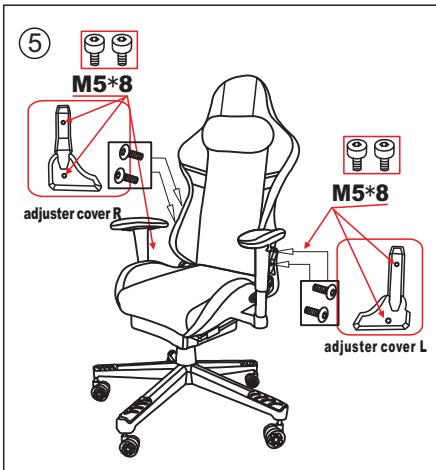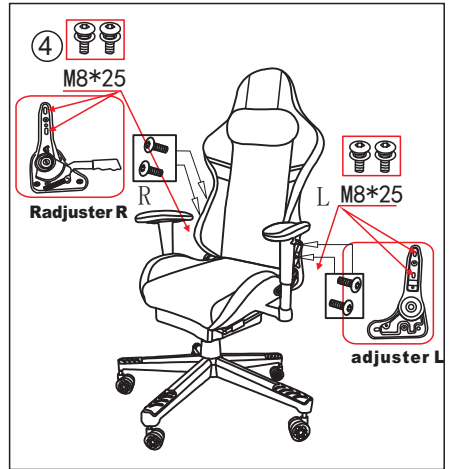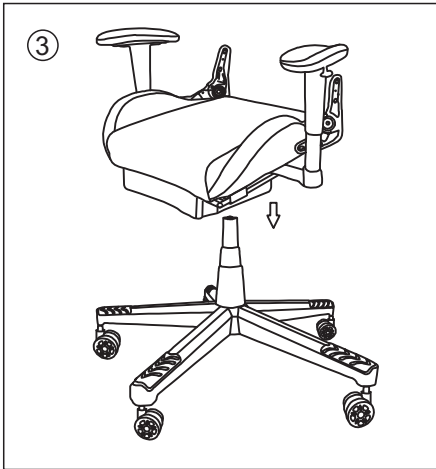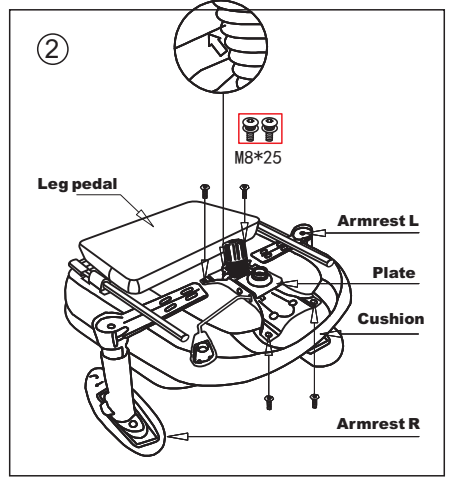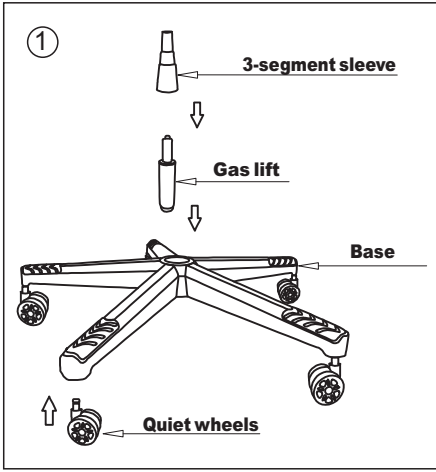

Internal Structure



Charging cable

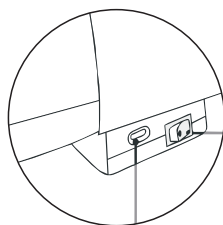


Product main switch


— : ON

O : OFF

charging port

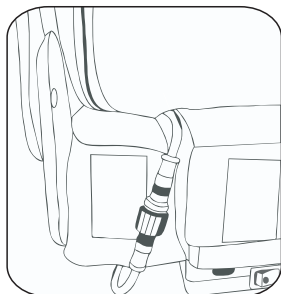

- ▶ Align the three core connector in the direction indicated by the arrow on the wire harness and insert it inward to ensure that the male and female ends of the connector are connected properly. Then, rotate and tighten the nut to secure the connector. (As shown in the left figure)



- ▶ Please be cautious during installation to prevent product damage or personal injury.
- ▶ After installation is completed, please check if the installation is correct before powering on. Do not power on during the installation process

Instructions for each button of the controller

After turning on the main switch of the entire machine, the machine is in standby mode and the product performs the following functions:



Power on key:

In standby mode, when the user is seated or presses any key, the yellow light remains on, the function key is active, Bluetooth can be connected, and the effective operation time is within 3 minutes.

Long press this button to enter the massage state, and the indicator light remains green. It defaults to a soothing massage. Short press switch: soothing kneading, low level full back massage, heating off - restoring energy, medium level full back massage, heating on - deep massage, high level full back massage, heating off. The scheduled time is 15 minutes.

Long press this button to shut down the machine, reset the movement, and the yellow light on the button panel will slowly flash. After the reset is completed, the yellow indicator light remains on. At this point, if someone is seated, the yellow indicator light will remain constant. After leaving the seat for 3 minutes, the yellow indicator light will turn off.



Fixed point massage key

Under any program, click to enter the fixed point massage, and then click again to exit the fixed point massage.

Indicator light description

Yellow light always on: function key is valid, Bluetooth can be connected.

Green light always on: enter massage state, fully charged state.

Flashing green light: charging.

Low battery; Slow flashing red light.

Red light flashing quickly: abnormal charging, please check if the main switch of the product is turned on

Slow flashing yellow light: movement reset;

Yellow light flashing fast: distribution network status, unbinding status.

Specificaons

Model: E16

Input: 5V == 9V == 12V ==

Rated Power: 15W 18W 25W

Executive standards: GB4706.1, GB4706.10

Waste Disposal
Warning



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncoltrrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources. Please follow your local environmental law and protocol when dispose of this product.