
## **Powder Coated Restroom Partitions**

## Installation

## 1-1/4" Wall Front Post Installation




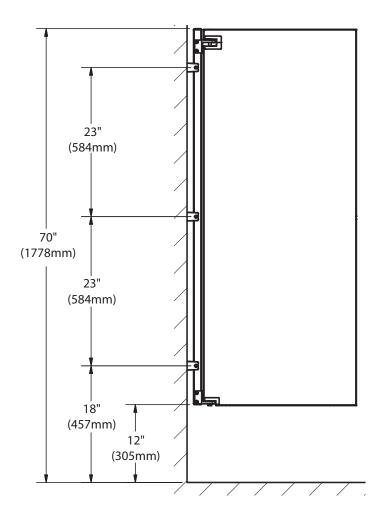

When installing the partition components, consult the applicable Mills Partition submittal drawing and standard insallations for compartment layout dimensions, locating brackets, and door mounting.



**Standard Mounting Detail** 



**Optional Mounting Detail** 



P.O. Box 309, Menomonee Falls, WI USA 53052-0309 800 BRADLEY (800 272 3539) +1 262 251 6000 bradleycorp.com

## 1-1/4" Wall Front Post Installation 21/16" (52mm) Ε Pilaster Plumb Line Establishe Level Line 563/16" (52mm) Α Place the center of the stirrup bracket at the established level line. Center the bracket opening on the plumb line. Using the bracket as a template, mark the hole locations on the wall. Remove the bracket and drill a 5/16" dia hole Measure down 2 <sup>1</sup>/<sub>16</sub>"(52mm) and 56 <sup>3</sup>/<sub>16</sub>"(1427mm) from the top of the post (end caps must be attached) (min 2" deep) at each hole location and mark a level line. This line represents the upper Insert the plastic anchors in all holes and secure the hole location of the top and bottom hinge. brackets with the #14 x 2" screws provided. В Attach end caps to both ends of post Place hinge tight against the post face and align the top hinge hole with the established level line. Using the hinge as a template, drill 1/4" dia holes through the post. Secure the top and bottom hingle to the post with 10-24 x 1" shoulder screws and Place the post into the wall mounting brackets. Refer to the Mills submittal drawing to locate the gap at 10-24 x 3/4" barrel nuts provided.

wall dimension. Ensure the post is plumb, using the brackets as a template drill  $^3/_{16}"$  dia holes at each hole location. Attach with #14 x  $^5/_8"$  screws provided.