

Dexseal: 2 Pair in-line Non-Re-Enterable Closure Installation Instructions. Item Code: 51300179



Kit contents.


1 x 2 Pair Lead in closure complete with gel and cable clamps.

Product description


This 2 pair Dexseal closure is designed for 0.40mm and 0.64mm 2 pair cables. The outer nylon jacket must be removed when using hard nylon jacket cable only, in order to stop moisture ingress.

Note: it is not suitable for 0.90mm cable.

Installation Instructions

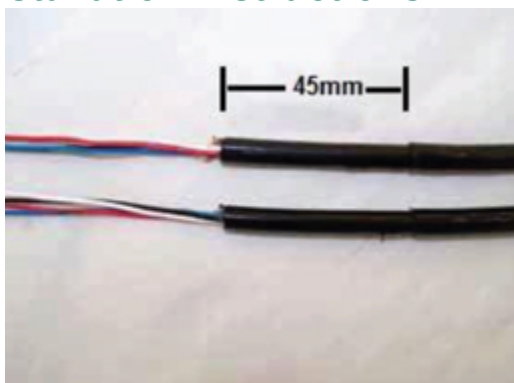

1. Prepare cable using current work practices. For hard jacket cables, remove 45mm of outside sheathing in order to fit into the entry slot of the closure.

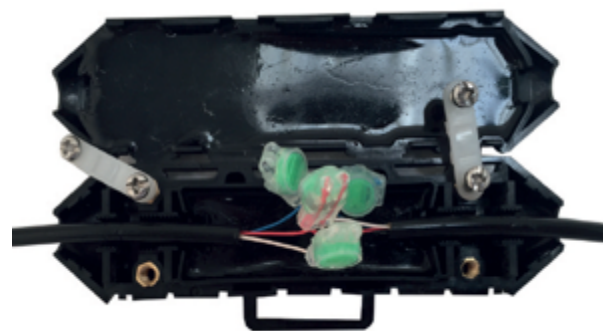


2. Insert 45mm of cable into each end of closure. Unscrew one side of each cable retainer & push cable into the slot. Leave 50mm of conductors for 8A connectors.

Dexseal: 2 Pair in-line Non-Re-Enterable Closure Installation Instructions. Item Code: 51300179



3. Position connectors in either side of the joint space. Screw cable retainers using a cross head screwdriver. It is important to screw down each side evenly to avoid cross threading. Screw down fully to allow the top gel filled compartment to close. Do not over tighten screws.
4. Fold cover to the closed position, squeezing firmly home so that the closure snaps closed. This design is for single use only. To reopen cut the latches and use a new closure to terminate as required.

Packaging Information

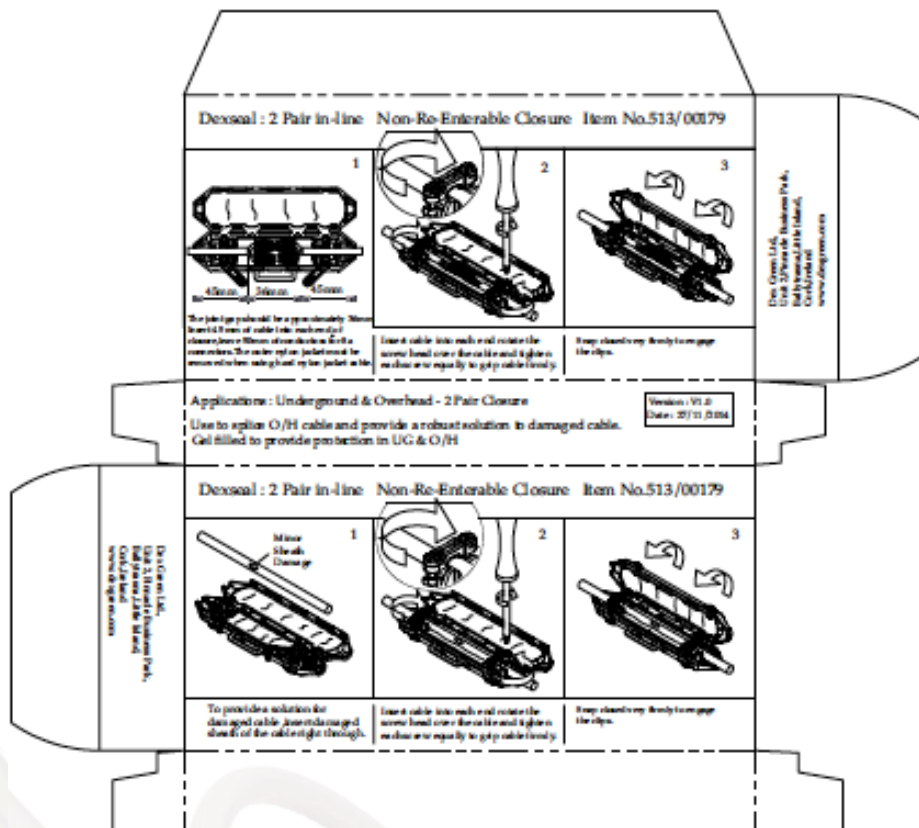

DexGreen Ltd, Unit 2, Pinnacle Business Park, Ballytrasna, Little Island, Co. Cork, Ireland

Tel: +353 21 4317955
Email: sales@dexgreen.com

Fax: +353 21 4316269
Internet: www.dexgreen.com

