
# **Airpura Limited Warranty**

5 years on parts and 10 years labor

See www.airpura.com for details



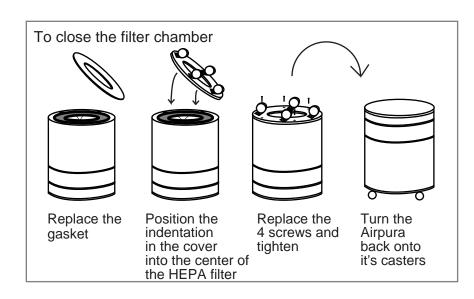

Thank You for choosing an Airpura High Efficiency Air Purifier To bring you the benefits of clean indoor air

### To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

Feel the difference breathing clean air makes to your health


## Filter Maintenance and Replacement

#### The Pre-Filter

- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced at least after 12 months of use


#### To vacuum the pre-filter


- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber




#### The HEPA Filter

Should be replaced as required; at least every 5 years of residential use

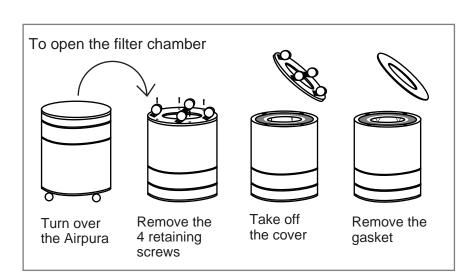





Position the pre-filter inside the filter chamber




Place a felt gasket at the bottom of the filter chamber

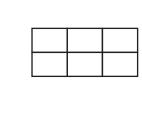


Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)




Roll it into a spiral




Insert the tube into the filter chamber inside the pre-filter



Let the spiral open to fill the opening




Open the top of the spiral to make a slight funnel



Insert the Hepa filter into the funnel and hold it straight



Let the filter slidedown the filter slider



Pull the filter slider up out of the cavity using both hands and let the filter slide to the bottom of the cavity



slider and fold it for further use



See over for closing the filter chamber