

# SOUNDS LIKE YOU'RE THERE



**Thank you for your purchase!**

SonicPresence® makes recording great audio accessible to everyone. After 50 combined years of working in studios and on film sets, we understand the challenges of traditional audio production. The SP15C takes care of all the technical know-how for you. Just wear it on your ears, plug it in, and record exactly what you hear. Listen back – It Sounds Like You're There!

*- The Sonic Presence Team*

## TECH SPECS

Model	SP15C
Powering	USB 2.0
Connector	Type-C Plug
Sensor Matching	+/- 1dB
Resolution	16/24 bit
Sample Rate	44.1 / 48 / 88.2 / 96kHz
Frequency Response	20 to 35,000Hz
Polar Pattern	Stereo/HRTF
Sensitivity (Open Circuit at 1kHz)	-35dB (18mV) / Pascal
Maximum SPL (1kHz at 1% THD)	130 dB
Self Noise (A-weighted Typical)	< 20dB
Dynamic Range (at 1kHz)	110dB
Weight Sensors	21g (0.7oz)
Operating Temperature	-18°C (0°F) to 57°C (135°F)

## LEGAL DISCLAIMER

Recordings you make with SonicPresence® are strictly for your own personal use. You may not sell the recordings or make use of them for any commercial purpose unless you first obtain the legal permission of the performers and the copyright owners. Doing so without their permission is a violation of the law.

## WARRANTY

Visit [sonicpresence.com/warranty](https://sonicpresence.com/warranty) to read terms. Upon purchase warranty is automatically activated.




## SP15C | USB-C Spatial Microphone QUICK-START GUIDE

Download this guide and other helpful resources at [sonicpresence.com/resources](https://sonicpresence.com/resources)


© SonicPresence®, Inc.  
US & INTERNATIONAL PATENT PENDING

## GETTING STARTED

1. Remove SP15C Spatial Microphone from the static protective package.
2. Hang the hook marked "L" over your left ear and the red "R" hook over your right ear.
3. Adjust the fit so the spheres rest comfortably in front of ear and **not inside** your ear (Fig. 1).
4. Use Cable Slider to fasten cables below your chin.
5. When using a cellular-enabled device, switch it to airplane mode.

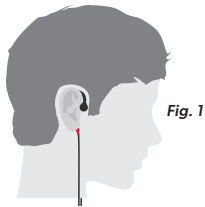

6. Plug the USB-C cable into your SP15C until it seats with a click (Fig.2). Plug the other end into a compatible USB-C device. (see section *Compatible Devices*).

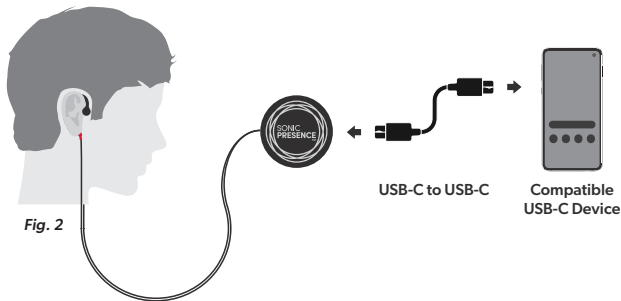

7. Open an application with stereo sound and begin recording (see section *Apps*).
- NOTE: Always plug-in first and launch app second.

## COMPATIBLE DEVICES

Android® Devices



iPad Pro (USB-C)



Apple® macOS



Windows® PCs



### PRO TIP

You can connect your SP15C to older devices that have a USB-A port, including Windows PCs and macOS computers, by using a USB-C Male to USB-A Male cable (sold separately).

## APPS

Visit [sonicpresence.com/apps](https://sonicpresence.com/apps) for the most current list of recommended apps plus links to download.

### iPadOS Audio

Voice Memos  
ShurePlus Motiv Audio  
Voice Recorder Pro 7  
Apogee MetaRecorder

### Android Audio

Field Recorder Pro  
USB Audio Recorder  
ShurePlus Motiv Audio  
Rec Forge Pro II

### DISCLAIMER

App compatibility may vary across different Android devices due to hardware variation.

### iPadOS Audio + Video

ShurePlus Motiv Video  
Apple Camera App  
FiLMiC Pro  
ProMovie Recorder

### Android Audio + Video

Open Camera  
ShurePlus Motiv Video  
FiLMiC Pro  
Cinema 4K

SHARE YOUR STUFF  
#SONICPRESENCE