


The procedure to update the system software is accomplished with the use of a portable USB drive that is loaded with the update software file '6000A.bin'.

The software file is specifically designed only for **audiolab 6000A**, amplifier. **Audiolab** does not take any responsibility for loss of information or problems resulting from a failed download. Systems that fail after a download may be returned to **audiolab** for attention under warranty.

## Upgrade Procedure

1. Save '6000A.bin' into a portable USB drive. The file name must be '6000A.bin'. Please rename the file if it is not.
2. Connect the portable USB drive to the USB port labeled 'UPDATE' on the rear panel of the **audiolab 6000A**.

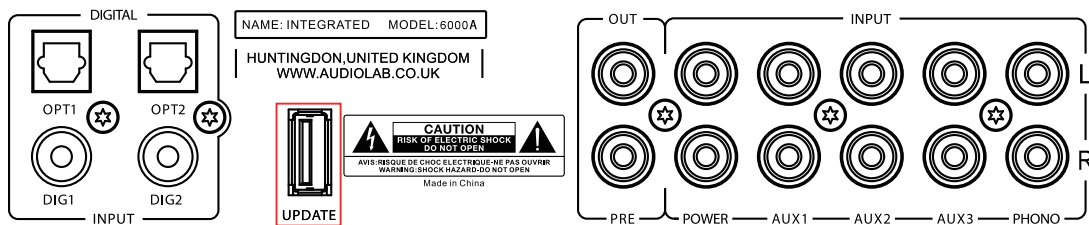

3. Press and hold the 'STAND BY' button on the front panel and at the same time switch on the 'POWER SWITCH' on the rear panel of the **audiolab 6000A**. The front display of the system should display as below:

### Connect USB drive



### USB drive is detected



### Program is being upgraded



4. When the upgrade procedure is complete, the front panel will display 'FINISH' as illustrated below. Once complete, the USB drive can be removed from the USB port.

**Upgrade procedure is complete**

