


# Euky Bear™



*sweet dreams*

The essential portable baby sleep aid

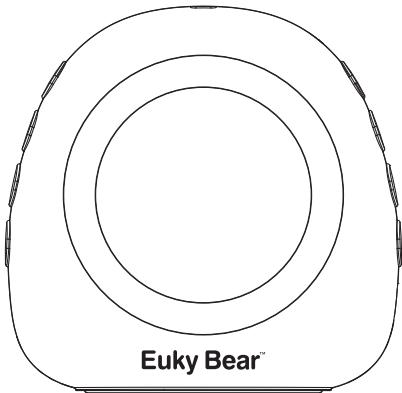

OPERATING MANUAL - MODEL 250

# FEATURES

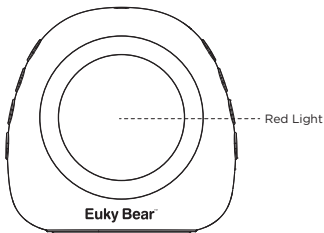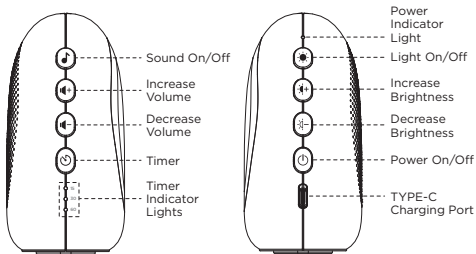

Please read the Operating Manual, including Precautions & Safety Warnings carefully, and retain for reference.

## **How your Sweet Dreams Portable Baby Sleep Aid works**

Combines red light and sound in a compact, portable unit you can take anywhere. Ideal for travelling, in the car, pram or out and about

### **Pink Noise + Soothing Sounds**

Carefully crafted and chosen to help relax and calm little ones for sleep.

### **Light Therapy**

Red light therapy supports the functioning of the body's natural circadian rhythm, or sleep cycle, assisting babies to fall asleep and settle more easily.

- 5 Soothing Sounds
- Adjustable red light - 3 settings
- Rechargeable battery with USB
  - Up to 24hr run time (typical use)
- Light up buttons - 20 second auto off
- Memory function stores last setting
- 1 year warranty
- Volume control
- Handy cord hanger
- Compact & portable for on-the-go use
- USB TYPE-C Charging Port
- 3hr charge time
- Continuous or 15/30/60 minute interval timer

## BUTTON FUNCTIONS



### Power Switch

Press and hold to turn on/off.

When turned on, sleep aid will remember and revert to all the settings used before last shutdown.



### Power Indicator Light

The power indicator light will show solid green when unit becomes fully charged. It shows amber when the unit is turned on, red when charging, and will flash red when battery is low.

### Light up buttons

Easy to navigate in the dark. Once unit is turned on, press any button to activate button backlighting.

Select chosen functions. Button backlights will automatically switch off after 20 seconds.



### Red Light Settings

Press to turn red light on/off.

Press and hold to turn off light.



### Brightness Settings

3 levels of brightness, press button + brighter,

or - darker, to cycle through. Release button



when desired level of brightness is reached.

## BUTTON FUNCTIONS



### Timer

Press to select timer interval of 15/30/60 minutes. Indicator will light up on selection. When no indicator light is shown, unit will be set to continuous all night use. Press and hold timer button for 3 seconds for sound, volume and timer to revert to default settings.



### Volume Settings

Press to cycle through 7 volume intervals to reduce/increase volume. A bell sound can be heard when maximum volume is reached.



### Sound Settings

Press to cycle through 5 soothing sounds. Press and hold for sound off.

First press: Pink Noise

Second press: Heart beat

Third press: Waterfall

Fourth press: Shusher

Fifth press: Lullabies

Sixth press: Sound off

## TECHNICAL SPECIFICATIONS

Dimensions	Approx. 90 x 92 x 45mm
Weight	183g
Power: Input/Output	DC 5V 1A MAX.
Battery	3.7V 1200mAh
Timer Modes	ON 15/30/60 minutes
Accessories	USB Power Cord (power adapter not included) Operating Manual
Speaker Volume	<80dB
Red Light	3 settings

## THINGS TO NOTE

- The unit will not work without being sufficiently charged.
- The unit can be used while charging.
- Press buttons gently, do not use excessive force.
- If cleaning is required, use only a dry, soft cloth or slightly damp cloth without any solvent or cleaning products.

## PRECAUTIONS AND SAFETY WARNINGS

To ensure your unit stays in optimum condition and for safe operation, follow the below instructions:

**WARNING** Always use with adult supervision.

Do not leave baby unattended with unit.

**CHOKING HAZARD** May contain small, detachable parts.

Keep out of reach of children under 3 years and pets.

Do not attach to a cot or a car seat.

Do not cover unit with any material including blankets.

Ensure sufficient airflow around unit.

Ensure unit does not interfere with proper functioning of carrier or pram system.

Only for use when baby is in a harness or restraint.

This unit is not to be used by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction.

Do not use the unit if the USB cable has been damaged or the socket is loose.

Do not attempt to modify, dismantle or repair the unit. This will void the warranty.

Keep away from electronic equipment such as computer, TV and audio equipment.

Keep away from direct sunlight and heat sources. Do not place the unit in a hot or humid place. Do not use or store the unit above 70°C.

Keep the unit dry, do not get wet. Do not touch any part of the unit with wet hands.

Do not use a quick charger to recharge. This product contains a fully enclosed lithium battery. Do not remove battery from unit, it could damage the battery which could cause overheating, fire and injury. Keep out of reach of children and away from heat sources.

Due to the battery, the unit must be disposed of separately from household waste. Do not incinerate. To dispose of, drop off to an e-waste service or contact your local council.





# 1 YEAR WARRANTY

This product has been produced with the greatest care for normal, household use. Following directions carefully will ensure dependable operation. If you experience unsatisfactory operation or are dissatisfied with your Euky Bear Sweet Dreams Portable Sleep Aid, please contact our friendly Customer Service team at FGB Natural Products.

Modification to the product by the consumer or failure to follow the manufacturer's operating instructions will void the warranty.

If repair is required under the warranty period, the product should be returned with proof of purchase.

The purchaser assumes responsibility for the proper care and use of the product in accordance with the printed Operating Manual. The purchaser or user must make his or her judgment as to when to use the product and the length of use. Keep the Operating Manual available as it is your guide to safe, efficient operation.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement of the faulty unit or refund for a major failure.

**For warranty claims please call 1800 655 841 or contact us at [www.eukybear.com.au](http://www.eukybear.com.au)**