Smartglasses



Solos Smartglasses User Manual




Solos AirGo

Smartglasses



Warranty Registration

- 1. Open Solos AirGo App
- 2. Go to Setting > Profile > Warranty Registration
- 3. Tap Register Now
- 4. Enter warranty information

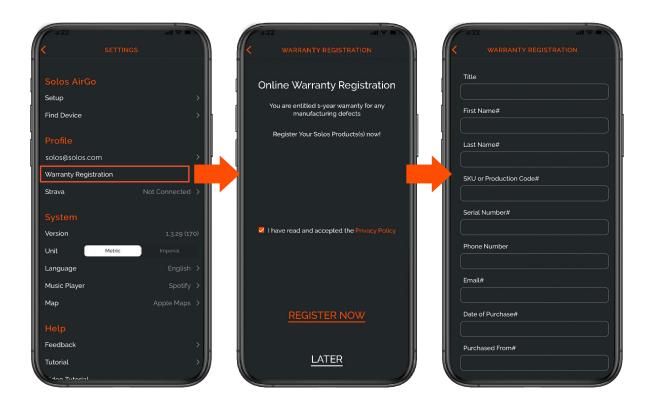




U Power On / Off

- Before power on, please confirm that the left and right temples are attached to the AirGo glasses frame.
- To power on § AirGo, long press multi-function button for 2 seconds until Power Status voice prompt is heard, and it's LED flashes in blue color *. AirGo will reconnect to last paired phone automatically.



• To power off AirGo \$\text{9}\$, long press Multi-function button for 3 seconds until "Power Off" voice prompt is heard, and its LED \$\display\$ will turn off.




• AirGo will power off ② automatically if it is not put on for 3 minutes.




* Bluetooth Pairing

- Long press multi-function button for 5 seconds to power on AirGo until its LED flashes in red/blue color * and "Pairing" voice prompt is heard.
- Turn on Bluetooth connectivity of your phone and put AirGo right next to your Phone
- Open Bluetooth settings on your phone and select "Solos AirGo xxxx". ("xxxx" is the unique device number)
- AirGo's LED will flash in blue color * only after it is paired to your phone. It is ready for call and music now.

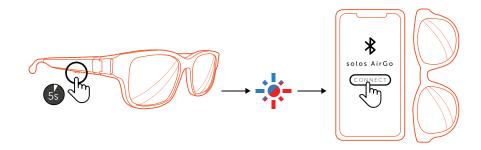


ê Operation Summary

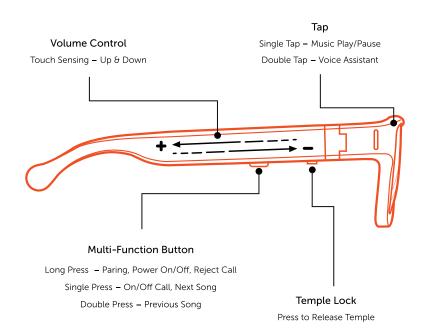




J Music Control

- To play music ▶, single tap on the frame.
- To pause music II, single tap on the frame.
- When playing music, short press on multi-function button to play next track. ▶
- When playing music, short press on multi-function button TWICE consecutively to play previous track. ▶



Phone Call

- To accept a phone call , short press Multi-function button or slide backwards on right temple.
- To reject a phone call ♥, long press Multi-function button for 1 second or slide forwards on right temple
- To end a phone call , short press Multi-function button





Phone Call (Call Waiting)

- To accept **\cup** the 2nd incoming phone call, short press Multi-function button. Current call will be ended.
- To reject **\circ** the 2nd incoming phone call, long press Multi-function button for 1 second




Volume Control

- To increase volume level, slide backward 5 on right temple during phone call or listen to music.
- Each slide backward or slide forward will adjust one step of the volume level.



Voice Assistant


- Double tap on the frame to enable voice assistant **9** of your phone (iOS or Android). After your double tap, you will hear the Voice assistant beep tone. You can start the voice command.
- Double tap on the frame again to end voice assistant. &





Charging

- Connect pogo pin connector of the charging cable to AirGo charging port.
- Plug USB connector 4 of the charging cable to USB charger 4 or laptop.
- AirGo's LED shows in red color * during charging and blue color * after fully charged. AirGo will be automatically power off when its under charging.
- When disconnect pogo pin connector from AirGo, AirGo will power on and reconnect to last paired phone automatically.

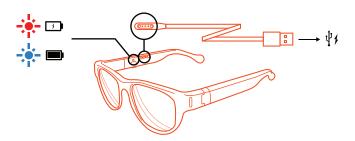

Mobile App

- · AirGo mobile app uses AirGo smart glasses to provide AI Care, AI Coach and many other features.
- Al Care takes care of your health with providing wellbeing features such as posture monitoring, posture/stretching exercise, personal reminders (drink water), etc.
- Al Coach calculates and coaches your jogging activities.
- AirGo mobile app is available for both iOS and Android















	OFF	Power off / AirGo is put on
2s	Blue color flashing in every 2 s	Waiting for Bluetooth connection to a phone
1s	Blue color flashing in every 1 s	Bluetooth connected to a phone
	Red/Blue color flashing	Pairing
FAST	Red/Blue color flashing fast	Receive incoming phone call
	Red color	Charging
	Blue color	Fully Charged