




UVC LED STERILIZER
S2-100WBX



USER MANUAL

INTRODUCTION

Powered by LED technology and UV light, the UVC LED sterilizer kills 99.9% of viruses and bacteria. When the RNA and DNA of pathogens are exposed to UVC light, the genetic material and molecular bonds are destroyed causing the pathogens to become inactivated, therefore halting its ability to replicate. The UVC LED sterilizer is a safe, fast, effective and eco-friendly sterilization box for everyday use. Utilizing the S2-100S/WBX makes disinfection simple and hassle-free.

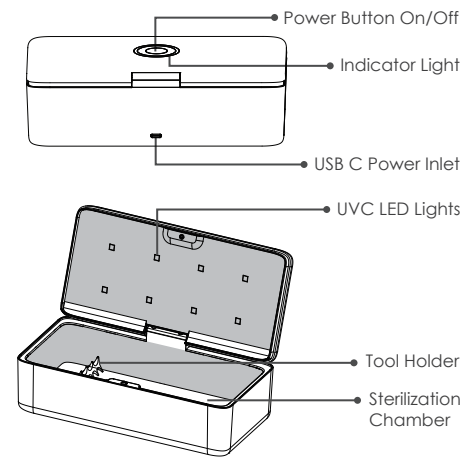


The packaging also includes a Power Adapter (USB Type-C) & User Manual.

INSTRUCTIONS

- 1 Plug in the USB C power adapter.
- 2 Open the box and place inside the items to be sterilized.
- 3 Close the lid. Press and hold until the indicator light switches on. Your UVC LED sterilizer is now ready for use.

Do not overlap items. Do not overload the sterilizer box and ensure that the sterilizer box can be closed properly.

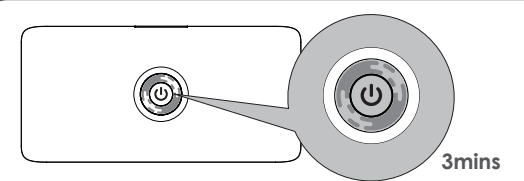

- 4 Press to begin the sterilization process. During sterilization, the indicator light on your box will flash continuously.
- 5 After 3 minutes, the sterilization process is complete and the device will automatically switch to standby mode. The indicator light will stop flashing and change to solid.
- 6 Open the lid and remove sterilized items.
- 7 The device will automatically enter sleep mode after 5 minutes.

Do not open the lid during sterilization. As a safety measure, the device will automatically turn off when lid is open.



Suitable for sterilizing phones, facemasks, glasses and everyday items.
Fast Sterilization | Ozone-Free | Chemical-Free

BACTERICIDAL PROPERTIES OF UVC LED TECHNOLOGY

When used correctly, this UVC LED Sterilizer is an effective bactericide that can inactivate bacteria such as Escherichia coli & Staphylococcus aureus. During sterilization, items placed at a distance of 3.7 cm or less from the LEDs will achieve a UV light intensity between 105 to 2154 μW/cm², killing 99.9% of microorganisms.

INDICATOR LIGHT STATUS

DISPLAY	LIGHT	ACTION
	Solid on	Sterilizer On/Standby Mode
	Flashing	Sterilizing
	Solid on	Sterilization Complete
	Light is off	Sterilizer Off/Sleep Mode

TECHNICAL SPECIFICATIONS

- Product: UVC LED Sterilizer
- Model: S2-100WBX
- Sterilizer Box: Rated Input 10V --- 700mA
- Power Adapter: AC Input 100-240V~0.15A 50/60Hz
- LED Qty: 8 pieces
- Dimensions: 216x105x70mm
- Net Weight: 420g
- Executive Standard: Q/YCHC 002
- UV Wavelength: 260-280nm
- Input Interface: Type-C USB
- LED Lifespan: 10,000 hrs
- Working Temperature: 0~40°C
- Storage Temperature: -20~55°C

CAUTION

- KEEP AWAY FROM CHILDREN
- DO NOT EXPOSE TO EYES AND SKIN
- KEEP AWAY FROM STRONG MAGNETIC FIELDS
- USE ONLY THE POWER ADAPTER SUPPLIED BY THE MANUFACTURER
- KEEP AWAY FROM DIRECT HEAT AND OPEN FLAMES
- KEEP AWAY FROM WATER AND MOISTURE
- DO NOT CRUSH OR STEP ON THE STERILIZER
- DO NOT OVERLOAD THE STERILIZER

HISTORY OF PHOTOTHERAPY

Niels Ryberg Finsen (15 December 1860 - 24 September 1904) was a Danish-Faroese physician and scientist. He is the first Nobel laureate from the country and the founder of modern phototherapy. Dr Finsen, received the 1903 Nobel Prize in Physiology for the application of light in medicine.

Diagnosed with Niemann-Pick disease, his condition served as a catalyst to further explore the scientific benefits of light. By 1893, Dr Finsen's research of light lead to the foundation of modern phototherapy. His laboratory work and subsequent clinical experiments successfully showed that rays of light such as red light and Ultraviolet (UV) rays were effective in treating smallpox and lupus vulgaris respectively.



Dr. Niels Ryberg Finsen
1903 Nobel Prize Winner in Physiology and Medicine

NIELS RYBERG LIMITED WARRANTY

Thank you for purchasing a Niels Ryberg Product.

A. WARRANTY
This Warranty is made by Niels Ryberg, LLC ("Niels Ryberg") and applies to all physical goods ("Products") sold by Niels Ryberg and purchased by you.

Niels Ryberg provides this Warranty in respect of all Products for a warranty period of 1 year (the "Warranty Period") from the date of purchase of each Product.

This warranty extends only to the original purchaser who has validly acquired the Product from Niels Ryberg, its subsidiaries, affiliates and authorized resellers. Niels Ryberg reserves the right to limit warranty coverage to the country in which the purchaser originally made the Product purchase.

B. COVERAGE UNDER THIS WARRANTY
Subject to terms below, including the limitations and exclusions, Niels Ryberg provides a limited warranty for the Products to be free from defects in material and workmanship for the Warranty Period, subject to any exclusions and limitations set out in this Warranty. Niels Ryberg reserves its sole right, to the extent permitted under applicable law, to determine whether a claim is eligible and/or whether the Product is defective. If an eligible claim on this Warranty is received by Niels Ryberg within the applicable Warranty Period, Niels Ryberg will, at its option:

- repair the Product or defective parts at no charge, using new or refurbished replacement parts;
- replace the Product with one that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original Product; and
- where Niels Ryberg has elected to replace the Product, and the Product is no longer in production by Niels Ryberg or if it is impractical for Niels Ryberg to replace the Product, Niels Ryberg may at its sole discretion replace the Product with a functionally equivalent substitute model from Niels Ryberg's current Product range.

To the extent permitted under applicable law, Niels Ryberg retains the sole discretion to provide any other type of remedy in addition to or in substitution of the aforesaid remedies.

Subject to applicable law, repaired or replaced Products shall be warranted under this Warranty for a further period of thirty (30) days after the date of repair or replacement (as the case may be), or for the remainder of the original Warranty Period, whichever is longer.

C. HOW TO CLAIM UNDER THIS WARRANTY AND/OR SEEK AFTER-SALES SERVICE
Niels Ryberg must be notified of any Warranty claim within 14 days of the discovery of the relevant defect in the following manner:

1. You must first contact us to determine the problem and the most appropriate solution for you. You can contact us by any of the following contact methods:
Toll-free number (U.S & Canada only): 1-888-898-1895
By email: Service@nielsryberg.com
By visiting our website: <http://www.nielsryberg.com>
2. For warranty claims, a valid proof of purchase of the Product must be submitted. Relevant photographs of the defects or other applicable documents (if any) may be attached to your warranty claim. Niels Ryberg may at its discretion require further documentary proof to determine whether a benefit under this Warranty may be claimed.

Niels Ryberg reserves the right to determine whether a benefit under this Warranty may be claimed. Any item requiring repair or replacement due to any of the exclusions set out in this Warranty will be at the purchaser's expense.

D. EXCLUSIONS & LIMITATIONS
This Warranty does not cover the following:

- Defects caused by Acts of God and any occurrence not within the reasonable control of Niels Ryberg (including failure or damage caused by natural disasters, earthquakes, lightning strikes, abnormal voltages, environmental factors).
- Cosmetic damage, minor cosmetic abnormalities, normal wear and tear, including (without limitation to), scratches, dents and chips.
- Claims arising from any unacceptable use or care of the Product, including (without limitation to) misuse, abuse, negligence, unauthorized modification or repair, unauthorized commercial use or any operation of the Product outside Niels Ryberg's recommended parameters.

• Damage caused by service performed by anyone who is not officially acting as an employee, representative or sub-contractor of Niels Ryberg.

• Re-posting, forging or altering the serial number of the product, or the barcode is damaged and the warranty period cannot be recognized.

• Problems with and/or damage to the Product caused by using accessories, parts or components not made by Niels Ryberg.

Niels Ryberg reserves the right at all times to refuse any claim under this Warranty in the event that Niels Ryberg reasonably assesses that such claim is arising due to fraud, dishonesty or cheating in any form.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NIELS RYBERG DISCLAIMS ANY STATUTORY AND IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. THIS WARRANTY AND THE REMEDIES DESCRIBED IN THIS DOCUMENT ARE THE EXCLUSIVE REMEDIES AVAILABLE FOR WARRANTY CLAIM, INSOFAR AS A WARRANTY CANNOT BE DISCLAIMED, NIELS RYBERG LIMITS THE DURATION OF SUCH WARRANTY TO THE DURATION OF THIS WRITTEN WARRANTY AND THE REMEDIES AVAILABLE TO THE REPAIR OR REPLACEMENT SERVICES OR THE REFUND OF THE PURCHASE PRICE. WHERE UNDER APPLICABLE LAW SUCH LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION MAY LAST ARE NOT PERMITTED, IN WHICH CASE THE LIMITATION DESCRIBED IN THIS PARAGRAPH SHALL NOT APPLY.

No Niels Ryberg supplier, dealer, agent, or employee is authorized to alter or extend the terms of this Warranty or to make any representation whatsoever. Niels Ryberg reserves the right to amend the terms of this Warranty at any time without notice, provided that the Warranty applicable to a Product shall be the Warranty in force at the time of purchase of the Product.

E. LIMITATION OF LIABILITY
TO THE EXTENT PERMITTED UNDER APPLICABLE LAW, IN NO EVENT WILL NIELS RYBERG BE LIABLE FOR ANY LOST DATA, LOST PROFIT, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES (OTHER THAN PERSONAL INJURY DAMAGES), HOWEVER CAUSED REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE A PRODUCT, EVEN IF NIELS RYBERG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL NIELS RYBERG'S LIABILITY EXCEED THE AMOUNT PAID BY

YOU FOR THE PRODUCT. The foregoing limitations will apply even if any warranty or remedy provided under this Warranty fails of its essential purpose. Where under applicable law the exclusion or limitation of incidental or consequential damages is not permitted, the above limitation shall not apply.

F. CONSUMER PROTECTION
Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.

.....

Manufactured for: Niels Ryberg, LLC
Address: Miami Tower, 100 SE 2nd Street, Suite 2000, Miami, FL, 33131, USA
Manufacturer: Shenzhen UVLED Optical Technology Co., Ltd.
Commissioned Manufacturer: Shenzhen UV Guard Technology Co., Ltd.
Factory Address: 3-4 /F, Building 2A, No.9, Bangkai Road, High-Tech Industrial Park, Guangming District, Shenzhen, China
Hygienic Licence: YWXZZ (2018)- 02- No.9142
Executive Licence: Q/YCHC 002

www.nielsryberg.com