



UV Sanitizing Wand



Instruction Manual FH7039

Read Me Prior to use:

- > **NEVER** interfere with this product's UV function or attempt to modify it in any way.
- > **NEVER** attempt to open or dismantle this product while UV light is active.
- > **NEVER** attempt to look directly at the UV LEDs while the unit is turned on. UV-C light can be damaging to the eyes and skin.
- > **NEVER** open, turn, or angle this product so that the eyes or skin are exposed to UV-C light.
- > **NEVER** look directly at this product's UV lights while active. Doing so risks irritation or damage to the eyes and skin. >NEVER place or drop this product into water or any other liquid substance.
- > **NEVER** expose this product to fire or excessive temperatures. Exposing it to temperature above 265°F may result in dangerous combustion.
- > **NEVER** charge this product while out of safe temperature range, defined as 32-104°F or 0-40°C.

SAVE AND KEEP THESE INSTRUCTIONS

Limited Warranty Card

The FirstHealth® Limited 1 Year Warranty guarantees the original purchaser that the product is free from any defect in material and workmanship in conjunction with the original purchaser using the product according to any accompanying labels and instructions. THIS GUARANTEE IS VALID FOR ONE YEAR FROM THE ORIGINAL DATE OF PURCHASE. FirstHealth® agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time period stated. This limited warranty does not cover any damage caused by accident, misuse, modification, or normal wear and tear, and is limited to the value of the product. There are no other express or implied warranties for battery-powered products. The limited warranty described herein is in addition to applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to • make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of FirstHealth®. The warranties described herein shall be the sole and exclusive warranties granted by FirstHealth® and shall be the sole and exclusive remedy available to the purchaser. Corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of firstHealth® to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall be liable or in any way responsible, for an incidental of consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS LIMITED WARRANTY, GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.


Where to ship product FirstHealth Returns Department 1 Rewe Street 2nd floor New York, NY 11211
 Enclose proof of purchase and \$5.95 for Shipping and Handling. If you have any questions, please contact FirstHealth at support@FirstHealthCorp.com or visit www.FirstHealthCorp.com

Thank you for choosing the UV Sanitizing Wand from FirstHealth. This user manual will provide instruction to help you get the most out of this product. Please read all instructions carefully.

How To Use:

To Disinfect:

1. Hold the Power On/Off button for 3 seconds to activate the device.
2. Hold the device in your hand with the light facing downward. If the device is turned upward, the light will shut off for safety. Turn it facing downward again to reactivate.
3. Hold the UV light over the intended area of desired disinfection for 20-30 seconds at a distance of 1cm this will begin the disinfect process. To kill 99.9% we recommend you repeat this process for a total of 5 min.

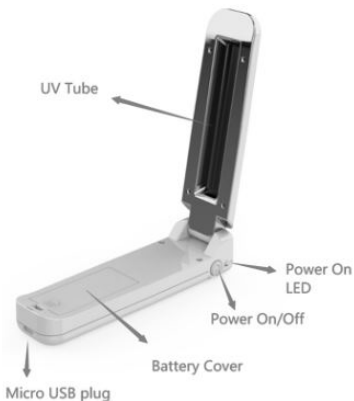

Replacing the Battery:

Please note: The included Micro USB plug does not charge this device, but allows for usage without AAA batteries while plugged in.

1. Open the battery cover by pulling in the direction of the printed arrows.
2. Insert 4 AAA batteries, making sure that the + and - terminals match.
3. Close the battery cover.

Please Note: The FH7039 has a safety feature built into the device that will cut the power off if you tilt the device toward your face while the UVC is on, in addition to this, it will not turn on when its not pointing in a downward position. The way that the device knows if its downward or tilting upward is it has this built in leveler which is a ball on a slide and when you tilt to the right the ball moves to the right causing the power to cut off. This is the noise you hear when you tilt the item, this is not broken please do not return this product for this reason.