



△ Check






Disclaimer: Delta-Q charger should only be used with AGM batteries.



The charger is located in the bottom left pocket of the machine when looking from the front.




Unplug the black connector with the orange and yellow wires from the black connector with the black and white wires.

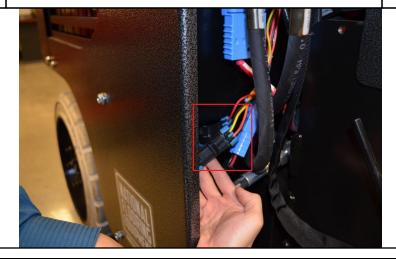

Unplug the connectors with the small red and black wires.



Unplug the long blue connectors with the large red and black wires.

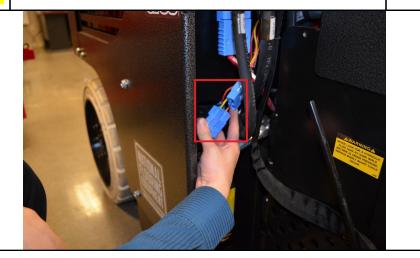




Check





Disclaimer: Delta-Q charger should only be used with AGM batteries.






To remove the mounting screws: (1) Remove the front screw first; allow the charger to pivot down. (2) Ensure fingers are not under the charger, then remove the back




Remove the charger from the machine. CAUTION: To avoid personal injury, be cautious while lifting the charger. It weighs approx. 42 lbs.



If machine has a four-pole connector (left), use the adapter shown (right).

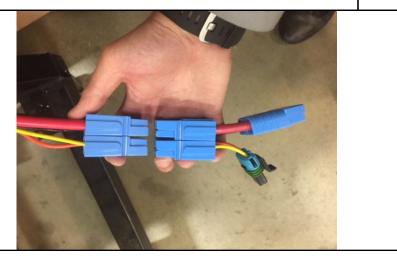

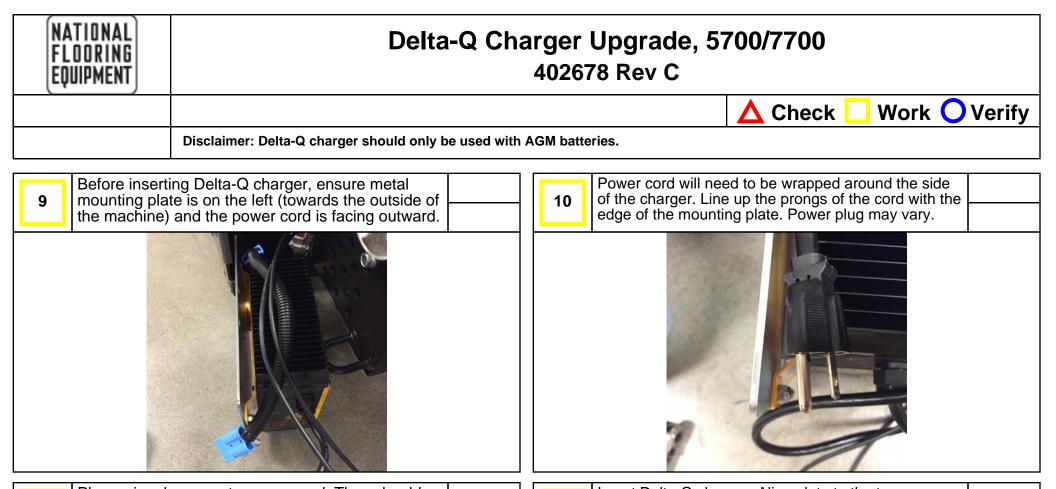





Page 3 of 11 12-07-2016





△ Check





Disclaimer: Delta-Q charger should only be used with AGM batteries.



Place all additional wires and cords on the right side of the charger. Make sure the following wires are sticking out of the charger.



14

Disconnect the (2) big blue connectors bolted on the front.




15


Lift hood of machine; unplug seat harness if applicable.



16

Disconnect (2) wires on the left valve bracket assembly.

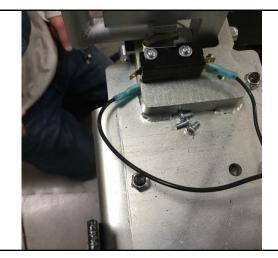

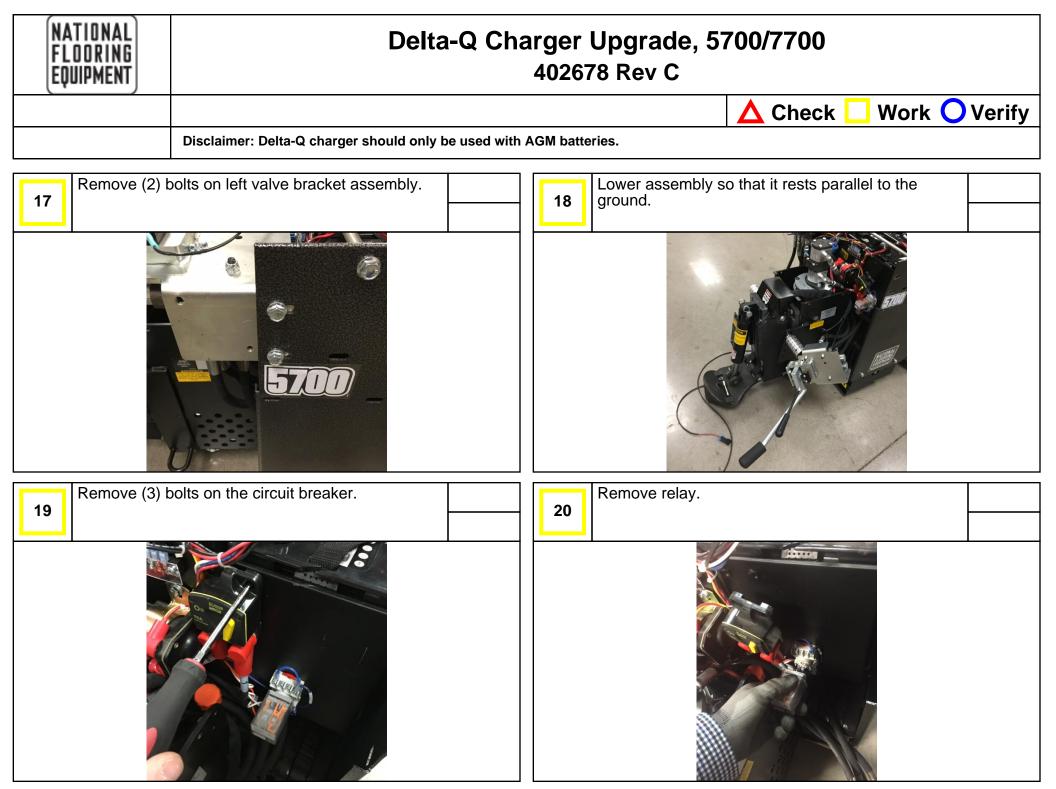

Page 5 of 11 12-07-2016





Check






Disclaimer: Delta-Q charger should only be used with AGM batteries.




Place LVI plate in between the frame and circuit breaker and orient as shown; screw (3) bolts back into place.



22



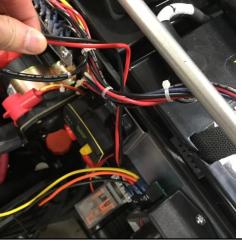




Locate the male metripack (red and black wires) from the LVI and the female metripack (red and black wires) pigtailed with the charger blue connector. Confirm that



24

Connect the two metripacks together. Confirm that the wire colors are correct.



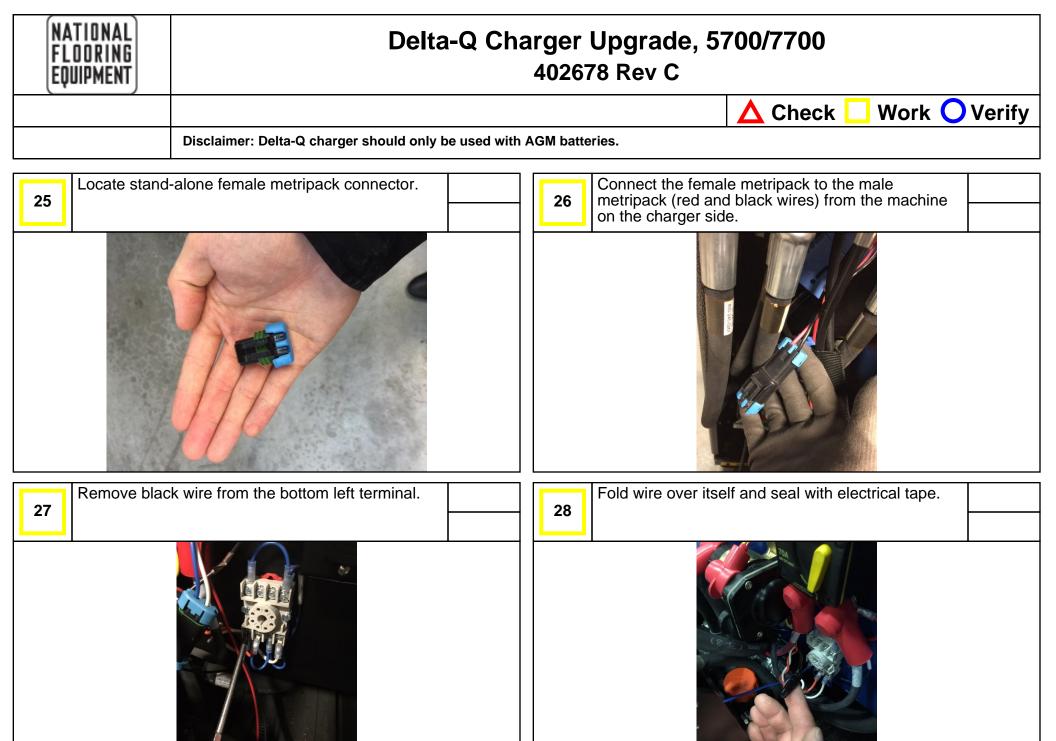

Page 7 of 11 12-07-2016





Check




Work **O** Verify

Disclaimer: Delta-Q charger should only be used with AGM batteries.




Attach the blue wire from the LVI to where the black wire was just removed at the bottom of the box.

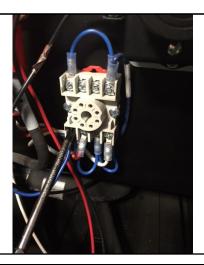

30 re

Run the white wire from the LVI behind the large red wire connected to the circuit breaker.

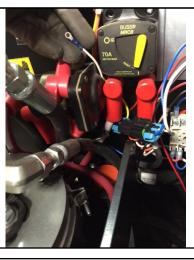


31


Unscrew furthermost right screw on the clear casing over terminal strip. Unscrew sixth screw from the left on the bottom half of the terminal.



32

Run the white wire to the sixth screw on the bottom half of the terminal. Re-place screw; tighten.

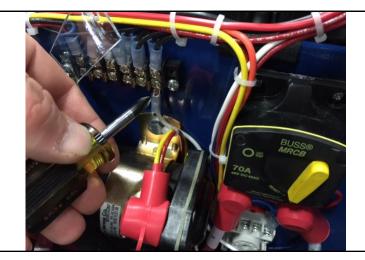

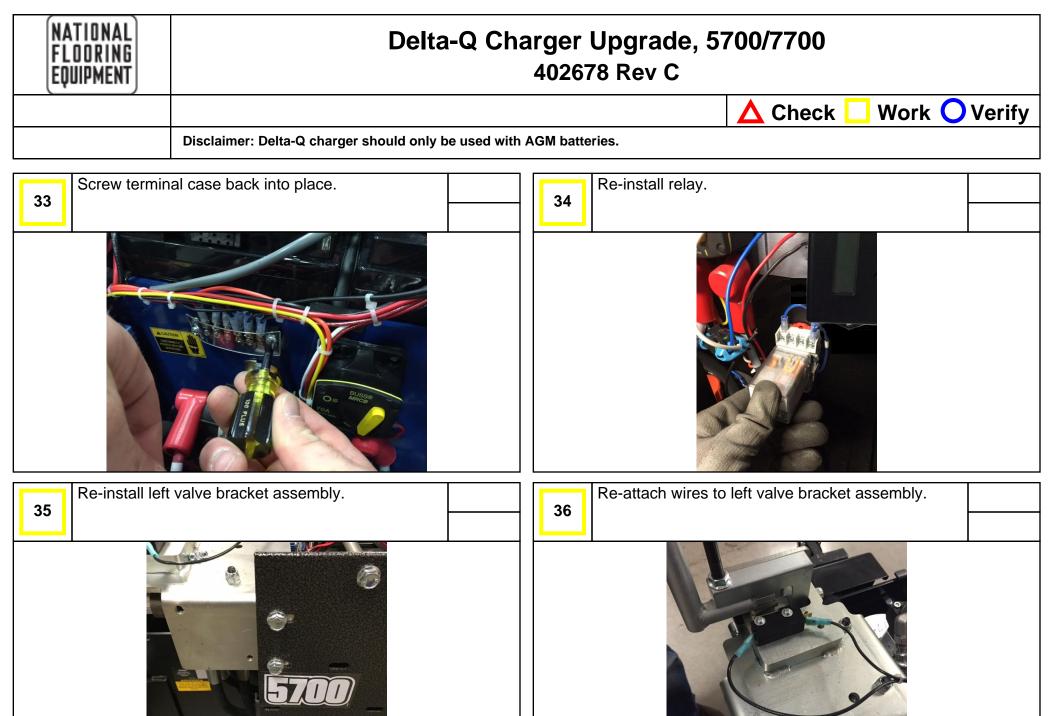

Page 9 of 11 12-07-2016



40



△ Check






Disclaimer: Delta-Q charger should only be used with AGM batteries.



Locate wire harness with the thermal probe from the Delta-Q charger.



Run the thermal probe behind the hoses and harness, under the metal bar and wires, then over the second bar 38 and up to the negative battery terminal with the black boot and zip ties

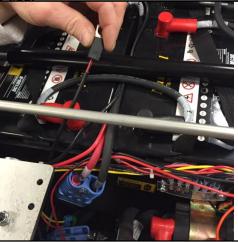


Cut zip ties on the battery boot. 39




Unscrew bolt and place thermal probe.



Page 10 of 11 12-07-2016

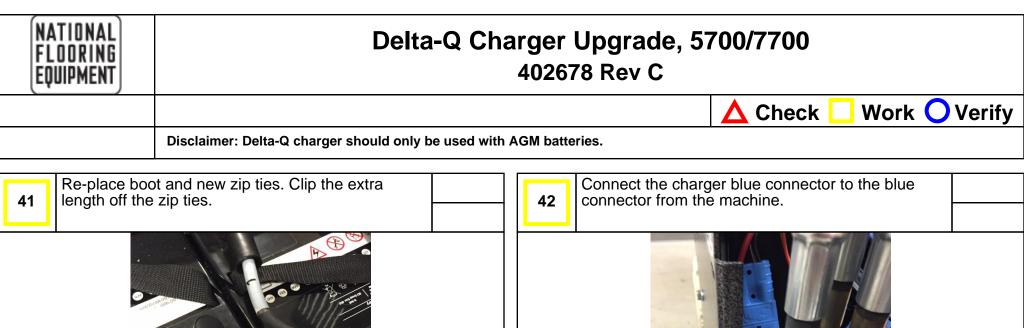



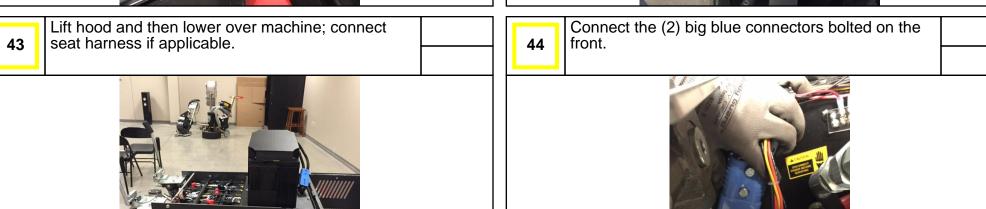

Page 11 of 11 12-07-2016