Exterior Wood Stain & Finishes

Lifeline Ultra-2™

Our Best Selling, Highest Performance Exterior Wall Stain

No other transparent fnish system lasts as long as *Lifeline Ultra-2* with a clear topcoat of *Lifeline Advance*. It is so durable that it is covered by a 5-year limited warranty. This advanced waterborn formula enriches the look of natural wood grain and protects against damaging UV from the sun.

Homeowners and contractors appreciate just how easy it is to apply with an airless sprayer or brush. Remember—not all water-borne stains are created equal. Call us and get a free sample of *Lifeline Ultra-2* and see for yourself.

- Unparalleled UV protection
- Lowest maintenance of any exterior finish
- Breathable film allows unseasoned logs to dryout



- High coverage rates
- Superior color retention
- Clearcoat with *Lifeline Advance* to complete the system
- Environmentally friendly
- Compatible with all *Perma-Chink*Systems wood care products

Surface Preparation:

Must be applied to clean, dry surface.

Application Rates:

1st coat - 350 - 450 sq.ft. per gallon. 2nd coat - 600-800 sq.ft. per gallon.

Application Temperature:

40° F to 90° F

Application Methods:

Airless sprayer. Brush.

of Coats:

Two coats application. Topcoat with Advance Gloss or Satin Clear Topcoat.

Drying Time:

Dry to the touch in 2 to 4 hours. Cures in 72 hours.

Clean up:

Soap and water.

Packaging:

1 gallon container. 5 gallon pail. Samples available.

Storage/Shelf Life:


Freeze/thaw stable. 1 year.



Application techniques, wood species and other factors will affect the actual color when finished. We supply samples for evaluation on your specific wood.



Washington 1-800-548-1231; Tennessee 1-800-548-3554; Montana 1-800-479-7090; Minnesota 1-877-244-6548; Colorado 1-800-433-8781 www.permachink.com

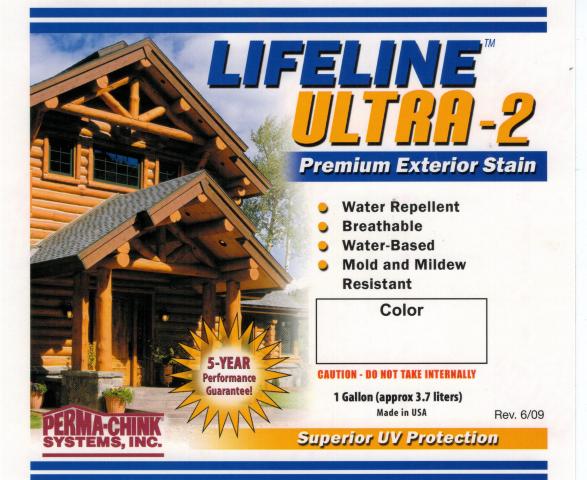

LIFELINE

USE LIFELINE ULTRA-2 ONLY ON EXTERIOR WOOD SURFACES

Directions For Use

STEP#1: INSPECTION

Check for deterioration and decay. Remove and replace or repair deteriorated wood. Unsound wood should be repaired prior to applying LIFELINE ULTRA-2. Contact any Perma-Chink Systems office for information about wood repairs.

STEP#2: SURFACE PREPARATION

All surfaces should be free from mill glaze and contaminates including dirt, dust, mold and mildew, old finishes, water repellents and wax. Use appropriate materials to clean and prepare surfaces. Request a copy of "Caring For Your Dream Home" from any Perma-Chink Systems office for information about cleaning and/or removing existing finishes from your logs. If a wood preservative has been previously applied, make sure it is completely dry before applying LIFELINE ULTRA-2. If the surface is tacky or there are visible deposits on the wood, wash the surface with water and allow to dry. DO NOT USE LIFELINE ULTRA-2 ON SURFACES THAT HAVE BEEN BRUSHED OR RUBBED WITH STEEL WOOL. IF YOU DO, RUST SPOTS MAYAPPEAR UNDER THE FINISH. If more than a week has passed since the surface has been stripped or cleaned, wash down the logs with Log Wash™, (2 cups of Log Wash per gallon of water), rinse well and allow to

dry before applying LIFELINE ULTRA-2.

If the surface has been media blasted or if the wood is rough and/or porous, apply a coat of Prelude™ Clear Wood Primer prior to the LIFELINE ULTRA-2 application. This will ensure proper color generation and add an extra measure of protection to the wood.

STEP#3: APPLICATION

COVERAGE RATE – Coverage is approximately 350 – 450 square feet per gallon for the first coat and approximately 600 – 800 square feet per gallon for subsequent coats depending on wood type and porosity. DO NOT USE THINNERS.

STIR THOROUGHLY before and regularly during use. Wear rubber gloves to avoid stains to the skin and fingernalis. If multiple containers are used on the job, they should be poured together to ensure color consistency. LIFELINE ULTRA-2 can be applied with a brush or airless sprayer. DO NOT APPLY TO HOT SURFACES OR IN DIRECT SUNLIGHT. Do not apply when the surface temperature is below 40° For above 90° F. Back brushing is required to work the finish into the wood for optimum performance. Always keep a "wet edge" to avoid learn marker. LIFELINE IL ITRA-2 is unified realists or click prome stains. It should always lap marks. LIFELINE ULTRA-2 is unlike paints or oil-borne stains. It should always be applied in thin coats. Wait for the first coat to dry (at least two hours depending on temperature and humidity) then apply a second coat. Always back brush to ensure even coverage and to avoid visible drips and runs.

CAUTIONS: PLEASE READ CAREFULLY!

DO NOT TAKE INTERNALLY. IF SWALLOWED, DRINK MILK. DO NOT INDUCE VOMITING. CONSULT A PHYSICIAN IMMEDIATELY. KEEP OUT OF REACH OF CHILDREN. KEEP CONTAINER TIGHTLY SEALED AFTER EACH USE.
USE IN WELL VENTILATED AREA. DO NOT INHALE VAPORS.

USE CAUTION WHEN APPLYING AROUND LAWNS AND SHRUBBERY.

Once the LIFELINE ULTRA-2 has dried and you are satisfied with the appearance, we strongly recommend the application of one coat of LIFELINE ADVANCE Gloss or Satin clear topcoat. LIFELINE ADVANCE exterior clear topcoats enhance the beauty of the finish and play a significant role in protecting the wood against water, mold, and UV light, thus extending the life of the entire finish system. Follow the product application directions when applying any topcoat.

SIEP#A: CLEANUP
Clean area and equipment immediately with warm, soapy water. For sprayers and other commercial equipment, follow the manufacturer's directions. For removing LIFELINE ULTRA-2 that has dried, soften with alcohol or mineral spirits and then clean with warm water. Please do not pollute our environment. Dispose of containers and unused material in accordance with local, state and federal

STEP#5: MAINTENANCE

STEP#5: MAIN I ENANCE
Periodic cleaning with an appropriate cleaner such as Log Wash™ helps extend the life of the finish and accentuates the beauty of your home. We recommend that log walls be washed down at least twice a year. Wood checking, cracking and shrinkage may eventually expose unprotected wood. Apply periodic maintenance coats as needed paying special attention to the south and west sides of the home as they may have greater exposure to the elements.

STEP#6: STORAGE

Store LIFELINE ULTRA-2 out of direct sunlight and protect from freezing. Although LIFELINE ULTRA-2 is freeze-thaw stable, if the product is accidentally frozen, allow to thaw, mix well and check for suitability of use before applying.

Contact any Perma-Chink Systems office for additional information about applying and maintaining LIFELINE stains and finishes.

LIMITED WARRANTY

LIMITED WARRANTY

Perma-Chink Systems, Inc. warrants and represents that Perma-Chink Log Home
Products will conform to the description and specifications previously set forth and be free
from defects in material and workmanship when shipped to the buyer. EXCEPT WHEN
HEREIN EXPRESSLY STATED, THERE ARE NO WARRANTIES, EXPRESSED OR
IMPLIED, BY OPERATION OF LAW OR OTHERWISE, APPLICABLE TO THIS
PRODUCT. PERMA-CHINK SYSTEMS EXPRESSLY DISCLAIMS ANY IMPLIED
WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO botain a conditional extended warranty for the protection provided by LIFELINE ULTRA-2and LIFELINE Advance Clear Topcoat, contact any Perma-Chink Systems office and request a warranty registration form.



Eastern Division 1-800-548-3554 Western Division 1-800-548-1231

Colorado 1-800-433-8781 Minnesota 1-877-244-6548 Montana 1-800-479-7090

Material Safety Data Sheet

IDENTITY (As Used on Label and List)

LIFELINE ULTRA-2



Section I

Manufacture's Name	Emergency Telephone Number:	
Perma-Chink Systems, Inc.	CHEMTREC 1-800-424-9300	
Address (Number, Street, City, State, and ZIP code)	Telephone Number for Information:	
1605 Prosser Road	865-524-7343	
	Date of Preparation	
Knoxville, TN 37914	8/17/09	
Preparer's Name	Signature of Preparer (optional)	
Sean Gahan		

Section II – Hazardous Ingredients/Identity Information

Hazardous Component (Specific	c Chemical Identity,	Common Name(s	5)		
	CAS #	OSHA / PEL	ACGIH TLV	Other Limits Recommended	% (optional)
Ethylene Glycol	107-21-1	50 ppm	100 mg/m ³		
Silicon Dioxide Crystalline free	112945-52-9	N/A	10 mg/m ³		

Section III – Physical/0	chemical Characteristics
--------------------------	--------------------------

Boiling Point:	Specific Gravity (H ₂ 0 = 1)
212 °F	1.02 – 1.06
Vapor Pressure (mm Hg.)	Melting Point
N/A	% Volatile (Volume) 78-83
Vapor Density (Air = 1)	Evaporation Rate
>1	(Butyl Acetate = 1) > 1

Solubility in Water

Miscible with water; insoluble in most petroleum solvents

Appearance and Odor VOC: 250 g/L MAX.

Milky white or pigmented liquid; characteristic latex order

Section IV – Fire and Explosion Hazard Data

Flash Point (Method Used)	Flammable Limitations
None	N/A
Extinguishing Media	
CO ₂ , dry chemical, foam	
Special Fire Fighting Procedures	
Use water spray to cool fire-exposed containers	

Unusual Fire and Explosion Hazards

Pressure may build up in closed containers that are exposed to fire or extreme high temperatures.

Section V – Reactivity Data

Stability	Unstable		Conditions to Avoid
	Stable	•	None Known

Incompatibility (Materials to Avoid)

None known

Hazardous Decomposition or Byproducts	Under extreme heat product may form oxides of nitrogen
	and carbon

Hazardous Polymerization May Occur Conditions to Avoid Will Not Occur None Known					
Will Not Occur None Known	Hazardous Polymerization	May Occur		Conditions to Avoid	
Thorse sass.		Will Not Occur	③	None Known	

Section VI – Health Hazard Data				
Routes of Entry Inhalation? NO Skin? YES Ingestion? YES Eye Contact? YES				
Health Hazards (Acute and Chronic)				
EYE CONTACT: May cause eye redness or irritation. INI	HALATION: Inhalation of vapors may cause headache or dizziness.			
INGESTION: May cause gastrointestinal irritation. SKIN:	May cause temporary redness or skin rash.			
	Monographs? NO OSHA Regulated? NO			
No long term adverse effect are known.				
Signs and Symptoms of Exposure: None known				
Medical Conditions: None known				
Emergency and First Aid Procedures:				
	at least 15 minutes; seek medical attention.			
Ingestion: Give two glasses of water or	milk to dilute. If irritation develops, seek medical attention.			
Skin contact: Wash affected area with s	oap and water.			
Inhalation: If vapors are inhaled, move in attention.	ndividual to fresh air. If respiratory irritation develops, seek medical			
Section VII – Precautions for Safe Handling a	nd Use			
Steps to be taken in Case Material is Released or Spilled				
Dike spill. Absorb with inert material and collect for	or disposal. Do not allow material or washings to enter waterways.			
Waste Disposal Method				
Dispose of material in accordance with all applical	ole Federal, State, and Local regulations			
Precautions to be taken in Handling and Storing				
	label KEEP OUT OF REACH OF CHILDREN			
Read and Observe all precautions on the product label. KEEP OUT OF REACH OF CHILDREN.				
Other Precautions				
Keep product from freezing.				
Section VIII – Control Measures				
Respiratory Protection (Specify Type)				
Wear a NIOSH approved organic vapor respirator.				
Ventilation Local Exhaust Provide adequate ventilation.	Special			
Mechanical (general)	Other			
Protective Gloves	Eye Protection			
Chemical resistant gloves are recommended.	Goggles or safety glasses			
Other Protective Clothing or Equipment				
Wear long pants and shirt while applying product to protect skin from direct contact.				

Work/Hygenic Practices: Wash hands thoroughly before eating, drinking, smoking or using the restroom.

The information contained herein is, to the best of Perma-Chink Systems, Inc. knowledge, accurate as of the data indicated. Since the information contained herein may be applied under conditions beyond our control and with which we may be unfamiliar, and since data made available subsequent to the date hereof may suggest modifications of the information, we do not assume responsibility for the results of its use. This information is furnished on the condition that the person receiving it shall make his own determination as to the suitability of the material for his particular purpose and on the condition that he assumes the risk of his use thereof.