


Adapter Set for:

Sticklers[™] MPO CleanClicker[™] 600 Fiber Optic Connector Cleaner

Read these instructions carefully to ensure the proper use of this product.

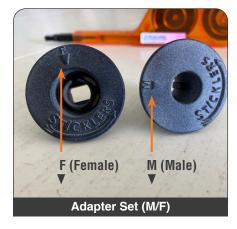



APPLICATION:

For use with Corning OptiTip® and CommScope® HMFOC Hardened MPO Connectors

STEP 1:

Take the F (Female) side of the adapter and the F hardened connector, slide together and rotate until the keyed slot inside the adapter is snug. The $F \blacksquare$ is the aligning spot with the keyed portion of the connector.

STEP 2:

Once properly fitted, take the Sticklers™ MPO CleanClicker™ and place cleaning end-side of the tool into the opposite side of the F adapter. Give the CleanClicker™ one fluid push to clean the MPO connector inside the hardened casing.

STEP 3

Repeat the above steps with the M (Male) side of the adapter and the M hardened connector.

The M ▼ is the aligning spot with the keyed portion of the connector.



DESCRIPTION	PART NUMBER
MPO CleanClicker™ Adapter Set (M/F) (for Hardened Connector Interfaces: OptiTip® and HMFOC)	MCC-CCMPO-A
MPO CleanClicker™ 600 Fiber Optic Connector Cleaner (sold separately)	MCC-CCMPO



SticklersCleaners.com

MicroCare Corporation

595 John Downey Drive New Britain, CT 06051 USA CAGE: OATV9 Tel: +1 860 827 0626

Toll Free: 1 800 638 0125 Email: TechSupport@MicroCare.com

MicroCare Europe BVBA

Vekestraat 29 B11 Industriezone 't Sas 1910 Kampenhout, Belgium Tel: +32 2 251 95 05 Email: EuroSales@MicroCare.com

MicroCare U.K. Ltd

Seven Hills Business Park, Morley, Leeds, West Yorkshire, UK LS27 8AT Tel: +44 (0) 113 3501008

Email: mcceurope@microcare.com

MicroCare Asia Pte Ltd

102E Pasir Panjang Road #03-01 Citilink Warehouse Complex Singapore 118529 Tel: +65 6271 0182 Email: TechSupport@MicroCare.sg

Follow Us!

SO 9001:2015 Registered Rev. 2001