

# WIRELESS ADAPTOR AUDIO TRANSMITTER AND RECEIVER




LE20BTT




USER MANUAL

## Function Overview:

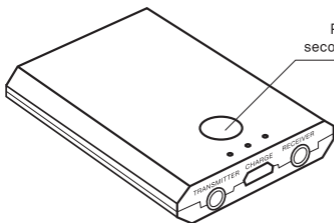



**Power On/Off:**  
Press button for 3 seconds to turn on/off

## Power Supply:

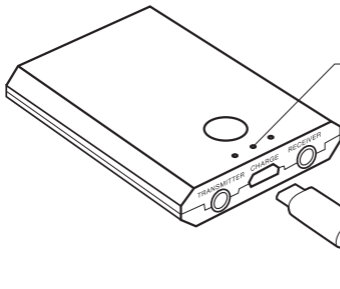


**Charging Status**  
Charging: red light is on constantly  
Red light will turn off when fully charged


**Low Power**  
Red light flashes 3 times

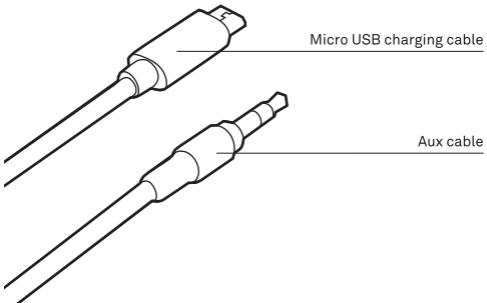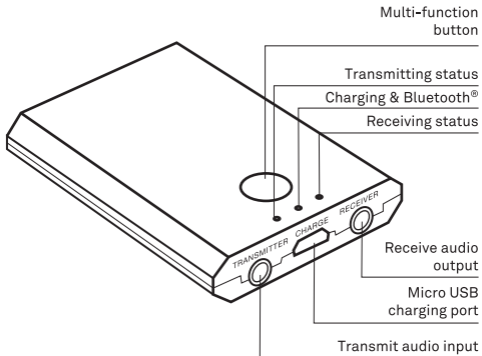

## Transmitter Function

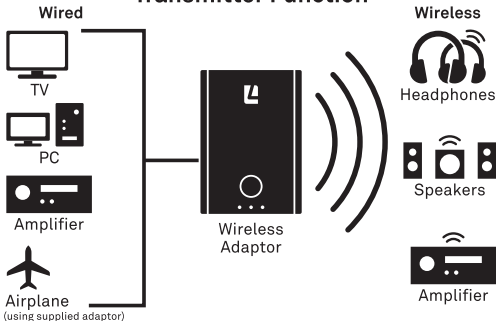


## Receiver Function

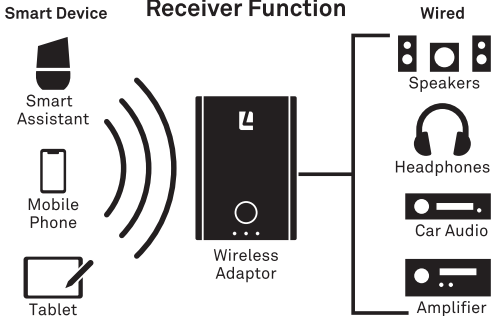


# Transmitter Function


**NOTE:** Transmitter and Receiver functions cannot be used at the same time

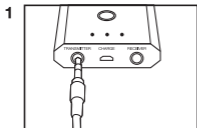

Insert aux cable into transmitter port

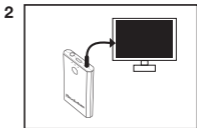


Connect transmitter to music device

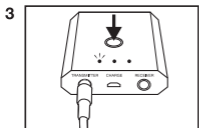


Press button for 3 sec to power on. Blue light will flash, searching for connection



Pair Bluetooth® headset. Should auto-connect in Bluetooth® pairing mode

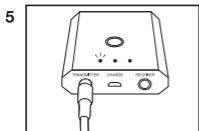


After a successful connection, the blue light will remain on

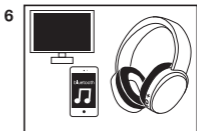


Play music from Bluetooth® device to your headphones or other amplifier


# Receiver Mode

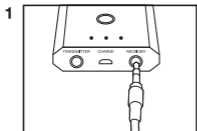


Insert aux cable into receiver port

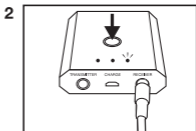


Press button for 3 sec to power on. Blue light will flash, searching for connection

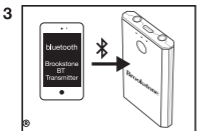

Connect Bluetooth® device. Search for “LE20BTT”

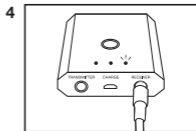

After a successful connection, the blue light will remain on

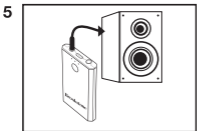

Connect receiver to speakers



Play music from Bluetooth® device through speakers, headphones or amplifier

## Specifications

Wireless Version:	Bluetooth V5.0+EDR
Battery Capacity:	300mAh Li-polymer
Wireless Range:	10m
Working Time:	Up to 5 hours
Charging Time:	1-2 Hours
Charging:	Micro USB
Output Mode:	3.5mm Interface
Input Mode:	3.5mm Interface
Includes:	Airline seat jack adaptor 30cm Micro USB cable 50cm 3.5mm Audio cable 50cm 3.5mm to 2 RCA AV cable

### **Precautions**

- *Don't put this product in strong direct sunlight*
- *Don't put this product in liquid or store in moist environment*
- *Avoid placing near fire*
- *To clean please use soft dry cloth without chemicals*



**Liquid Ears™**

PO Box 5658 Brendale QLD Australia 4500

Customer Support 1800 812 261

**[www.liquidears.com](http://www.liquidears.com)**

DESIGNED IN AUSTRALIA