

□ IQ*Air*

Atem Desk

User Guide

Benutzerhandbuch Mode d'emploi Guía del usuario 用户指南 用戶指南 ユーザーガイド 사용자 설명서는 Руководство пользователя ப்பூ பியாச்சு



Congratulations on your purchase of the IQAir Atem® Desk personal air purifier. Please study this User Guide carefully to familiarize yourself with the special features and functions of this IQAir® product. Retain this document in a safe place for future reference.

Herzlichen Glückwunsch zum Kauf Ihres persönlichen Luftreinigers IQAir Atem® Desk. Bitte Iesen Sie diese Bedienungsanleitung sorgfältig durch, um sich mit den Besonderheiten und Funktionen dieses IQAir®-Produkts vertraut zu machen. Bewahren Sie diese Anleitung zum späteren Nachlesen an einem sicheren Ort auf.

恭喜您購買了此IQAir Atem® Desk 高性能空氣淨化系統。請仔細閱讀本用戶手冊,以熟悉IQAir®系統的特性和功能,並將其保存在安全的地方以備將來參考。

恭喜您购买了此IQAir Atem® Desk 高性能空气净化系统。请仔细阅读本用户手册,以熟悉IQAir®系统的特性和功能,并将其保存在安全的地方以备将来参考。

IQAir Atem[®] Desk 개인용 공기 청정기를 구입하신 것을 축하드립니다. 본 사용자 설명서를 주의 깊게 읽고 본 IQAir[®] 제품의 특징과 특수 기능을 숙지하십시오. 나중에 참조할 수 있도록 본 문서를 안전한 장소에 보관하십시오.

产品组件 Компоненты **Product** 1 Atem®空气净化器 Components изделия 1 Atem® air purifier 2 PureJet™ diffuser 2 PureJet[™]扩散器 Очиститель 3 背板盖 воздуха Atem® 3 Back cover 支架头 Распылитель PureJet 4 Stand head 支架座 5 Stand base 3 Задняя крышка 6 HyperHEPA® 滤芯 6 HyperHEPA® 4 Верхняя часть filter 8 电源适配器和插头 Silencer 9 连接器盖 8 Power adapter 6 HyperHEPA® and plugs 產品組件 Фильтр 9 Connector 1 Atem®空氣淨化器 cover 7 Глушитель шума 2 PureJet[™]擴散器 8 Се́тевой адаптер 3 背板蓋 Produkt-4支架頭 9 Крышка komponenten 5支架座 Luftreiniger Atem® соединителя 6 HyperHEPA® 濾芯 2 PureJet 7 消音器 مكونات الجهاز 8 電源適配器和插頭 3 Abdeckung 1 منقّى الهواء Atem® 9連接器蓋 4 Standfuß-Ārm 2 موزع الهواء PureJet 5 Standfuß-Basis 製品の構成部品 HyperHEPA⁹ Atem® 空気清浄機 PureJet™ ディフュ Filter 4 رأس الحامل Schalldämpfer -ザ-8 Netzteil und バックカバ-6 مرشح HyperHEPA® Stecker スタンドヘッド 7 كاتم الصوت スタンドベ-HyperHEPA[®] 8 محول التيار والمقابس Composants 9 غطاء الموصّل du produit 消音機 電源アダプタとブ 2 PureJet™ コネクタカバー diffuseur 3 Plaque arrière 생성물구성 요소 Tête du support 1 Atem® 공기 청정기 5 Base du support ' 디퓨저 6 HyperHEPA 3 백 커버 4 스탠드 헤드 5 스탠드 베이스 8 Adaptateur élec 6 HyperHEPA® trique et fiches 9 Couvercle du 소음기 전원 어댑터 및 플러그 2 connecteur Componentes 9 커넥터 커버 del producto Purificador de aire Atem® 2 PureJet[™] difusor Cabezal del soporte 5 Base del soporte 6 HyperHEPA R Silenciador Adaptador y corriente



Important Safety Warnings

Before you start

The IQAir Atem® Desk personal air purifier is ideal for use anywhere you wish to create your own personal clean air zone.

The Atem should only be used in conjunction with the dedicated stand, power accessories, and/or hardware delivered in the package. Misuse can lead to injury, malfunction and/or damage.

Read these instructions for use carefully before using the product and save them for future reference.

• As with all electronic devices, please keep out of the reach of children under the age of 8. This device is not a toy!



• This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given

supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be performed by children without supervision.

To reduce risk of fire, electric shock, or injury please read these warnings before using this product.

- To avoid risk of electric shock or fire, only plug the product into suitable, easily accessible, mains power connections. Use only the IQAir provided power accessories.
- Use the power accessories only indoors and in dry environments.
- Do not use damaged power adaptor, cables or plugs. If damaged they must be disposed of and replaced with original IQAir Atem power accessories only.



- Do not allow any kind of liquid to spill on, or come into contact with the product. Including, but not limited to water, detergents or flammable solvents.
- To clean the device:
 - Disconnect from the power supply

Important Safety Warnings



- Use a soft, dry cloth only
- Cables and plugs: Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.


Never immerse the product or any of its components in water or under running water.

• Never cover the unit nor otherwise impede the air intake and outflow in any way.

 Do not introduce a foreign object or finger into air flow openings.



- This product contains highprecision technology. **Do not drop,** tamper with nor expose to impact.
- Lift and carry the purifier using both hands to grasp firmly.







- Only use this product in conjunction with its intended stand, as delivered in the original product packaging.
- Adverse use for this product would be in damp or wet environments such as bathrooms or kitchens.



- Use the purifier only in a dry environment.
- Do not use in an open window.
- Adverse use can lead to injury, malfunction and damage.
- Limits of use: Only use this product in an atmosphere appropriate for permanent human habitation. Not suitable for use in toxic or explosive environments, or for protection against hazardous airborne substances.

Electromagnetic Compatibility (EMC)

- The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.
- Electromagnetic radiation can cause disturbances in other equipment. Although the product meets the strict regulations and standards which are in force in this respect, IQAir cannot completely exclude the possibility that other equipment may be disturbed.

Environment

Help to preserve the environment. Do not discard the device with household waste. Bring it to the official waste recycling service near you. Filters may be disposed of with household waste.

Product Storage

When not in use, store your Atem in a clean dry place. Use the original packaging for optimal storage.

For Korea:

As an electromagnetic wave equipment for home use (Class B), this equipment is intended to use mainly for home use and may be used in all areas.

This radio equipment cannot provide a service relevant to the human safety, as it can be crossed.

For USA: FCC Statement

This equipment has been tested and found to comply with the limits for a **Class B digital device**, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- measures:
 Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



The location of compliance statements on the Atem air purifier is found under the back cover.

- Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Canada:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Product Components and Assembly Product Components

See product illustration on the inside cover.


- 1 Atem® air purifier
- 2 PureJet™ diffuser
- 3 Back cover
- 4 Stand head
- 5 Stand base
- 6 HyperHEPA® filter
- 7 Silencer
- 8 Power adapter and plugs
- 9 Connector cover

Assembly

After unboxing you will find the Atem air purifier (1) with the PureJet diffuser (2) attached.

Power adaptor and stand assembly


Remove and unpack the power adapter and plug box. Select the correct plug for your region and snap into place as shown. The power adapter adjusts itself automatically to the mains voltage and frequency within the rated voltage range and at the rated frequencies.

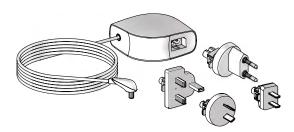

Select your region's plug





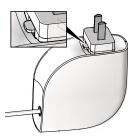

Assembled plug



Remove the connector cover

Take the stand head (4) and remove the connector cover (black part) (9) and set aside. Take the connector end of the power adapter cord (8) and snap into place. Replace the connector cover. Press the power cord into the channel on the stand head.




Snap in the power cord connector



Replace the connector cover



Press the cord into the stand channel






Connect the stand head to the stand base

Connecting the air purifier to the stand

Firmly grasp the air purifier and align with the stand head (4). Tilt and affix the air purifier onto the stand head. Snap the air purifier and stand together. With your air purifier, diffuser and stand assembled, you are now ready to use your Atem personal air purifier.

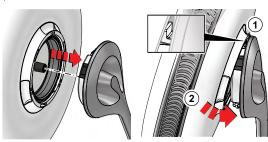

Align the stand head

Angle and snap into place




Air purifier assembled and powered on

Setting Up Your Personal Clean Air Zone

Place the Atem personal air purifier near you on a stable surface such as a desk or table. Point the PureJet diffuser toward your breathing zone.

For best results, place the Atem as close to you as possible.

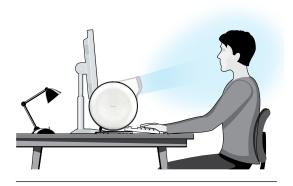

Using the Atem for the First Time

Upon initially connecting to the power supply, you will hear the Atem's power-on *chime* and see a red light.

User interface & touch point settings

To change fan speed, use two fingers to touch the front center. With every touch, you will hear a sound and see the light change. The size of the light corresponds to the air speed.



Red light and chime = standby






Small blue light and sound = low speed



Medium blue light and sound = medium speed



Full blue light and sound = high speed (Cooling Mode)

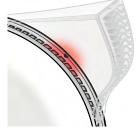

A double red flash with sound = change filter

Filter Replacement

The Atem will indicate a necessary filter change with a double red flash accompanied by a sound.

HyperHEPA filter

Follow steps 1-4 to change the filter in the Atem.

Disconnect the Atem from the power source before changing the filter!

Step 1: Remove the air purifier from the stand and place it face down on a cloth surface with the back facing up.



Opening direction



To unlock, turn the locking ring counter clockwise



Lift the back cover away

Step 2: On the back cover, note the direction indicators on the locking ring. Grasp the locking ring firmly and rotate in a counter-clockwise direction until the back cover (3) releases. You should be able to easily lift the back away.





Lift tabs to remove filter

Turn clockwise to lock

Step 3: Remove the old filter by pulling on the tabs and then dispose of it. Replace with a new IQAir Atem HyperHEPA® filter (6) and firmly press into place.

Step 4: Put the back cover on and gently rotate until the lock pins align into place. Grasp firmly and press down on the locking ring and turn clockwise to lock. The back cover should now be closed securely. Attach the air purifier to the stand for use.

PureJet Diffuser

To remove your PureJet diffuser, firmly grasp the air purifier and pull off the diffuser.



Removal of the diffuser

Align the large pins with the arrows

To attach your PureJet diffuser firmly grasp the air purifier and align the large pins on the diffuser with the arrows on the outlet vent. Note the outlet vent has larger openings.



Locate outlet vent arrows

Once the diffuser pins are aligned with the vent arrows press firmly into place while holding the air purifier.

Should the PureJet diffuser grille become dislodged, align the hook at the bottom of the diffuser grille with the bottom of the diffuser body and snap firmly into place.



Connector hook



Diffuser grille snaps into place

Cleaning the PureJet Diffuser

Completely remove the diffuser to facilitate safe cleaning.



Download on the App Store

IQAir Atem App

To enhance your user experience and to unlock additional features of the IQAir Atem personal air purifier, download and

install the IQAir Atem App for Apple or Android. App features and benefits include:

Smart on/off

Fan speed settings Filter life notifications Light and Sound settings

With the App, you will be able to access all the features and custom setting available for your Atem. Please remember that the Bluetooth® mode must be activated beforehand on your smart phone. To install follow the set-up directions on the App.

Bluetooth pairing

Pair your Smart Phone device with the Atem by using the IQAir Atem App. The Atem is automatically

in discovery mode and will appear in the Bluetooth section of the

Tap the Atem name to pair. Enter the Bluetooth code PIN found on the back of this User Guide, the back of the air purifier and on the packaging label.



The location of product information & specifications is found on the back.

Smart on/off

This feature in the App

can be set to sense proximity of the user's smart phone device to the Atem. This enables a powersaving automatic on/off function if desired.

Troubleshooting

Visit the Atem support section on the website.

Accessories and Filters

A list of available filters and replacement parts for the Atem Desk air purifier can also be found on the website at: www.iqair.com

Technical specifications

Model:

Atem Air Purifier

Power Rating: 12-24V == 1.5A max

Power Adaptor: Model: IQS27-1801500 Input: 100-240V ~ 50/60Hz Output: 18V == 1.5A

Dimensions (Air Purifier on stand):

 $L \times H \times W$ 330 x 330 x 145 mm

Weight (Air Purifier only): 1850g / 4.1lbs



13 x 13 x 5.8 in

Responsibilities, Warranty and Service Information

Manufacturer of the Product

IQAir AG, herein referred to as IQAir, is responsible for supplying the product, including the User Manual and original accessories, in a completely safe condition. The manufacturers of non IQAir accessories for the product are responsible for developing, implementing and communicating safety concepts for their products, and are also responsible for the effectiveness of those safety concepts in combination with the IQAir product.

International Limited Warranty and Service

The IQAir warranty will be honored, provided the product is handled in accordance with its intended use and operating instructions.

Tampering with the power adapter or the use of non-IQAir power accessories voids the warranty. This product is subject to the terms and conditions set out in the International Limited Warranty which you can download from the IQAir home page at www.iqair.com The foregoing warranty is exclusive and is in lieu of all other warranties, terms or conditions, express or implied, either in fact or by operation of law, statutory or otherwise, including warranties, terms or conditions of merchantability, fitness for a particular purpose, satisfactory quality and non-infringement, all of which are expressly disclaimed.

For detailed instructions on how to claim your warranty for a defective device, please visit the IQAir website, contact a IQAir distributor or your closest IQAir representative.

If you need information on IQAir products or if you have a problem with your product, please visit the IQAir website at **www.iqair.com** or contact the retailer where you purchased the product for further assistance.

Manufacturer: IQAir Germany GmbH

Karl-Maybach-Straße 18 88239 Wangen im Allgäu Germany

Distribution: IQAir North America

IQAir North America, Inc. 14351 Firestone Blvd. La Mirada, CA 90638 USA

IQAir International

Incen AG Hauptstrasse 104 9422 Staad Switzerland

IQAir China

DRC Liangmaqiao Diplomatic Office Building, Suite 1305B No.19 Dongfang Dong Road Chaoyang District 100600 Beijing Tel.: 400 108 5117