

100.00 mm

63.00 mm



**VERRATEK**  
NIMBLE 2


Quickstart Guide



verratek.com support@verratek.com

SCAN ME

### 1. Introduction: Appearance & Function

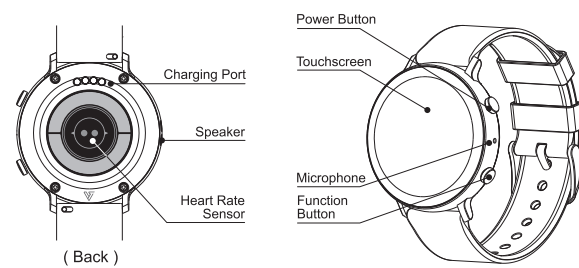

Touch Instructions:	<b>Long Press</b> Long press on the watchface to switch watchfaces.	Swipe left/right to choose new watchface, then tap 'OK'.
	<b>Swipe Down</b> Swipe down on the display to browse the shortcut menu.	Hit Brightness icon to change brightness. Hit Do Not Disturb icon to toggle Do Not Disturb mode.
From the Home screen >	<b>Swipe Right</b> Swipe right on the display to browse the sport/activity menu.	Swipe up/down to find the desired sport/activity then tap icon to select.
	<b>Swipe Left</b> Swipe left on the display to browse the Apps menu.	Swipe up/down to find the desired App then tap icon to select.

### 2. Power Button

#### To turn ON the smartwatch

- Long press the power button to turn the smartwatch ON.
- If the smartwatch is powered off due to low battery, charge the smartwatch of minimum 30 seconds before powering on.

#### To turn OFF the smartwatch

- Long press the power button to turn the smartwatch OFF.
- After the ultra-low battery vibration reminder, the smartwatch will automatically power off.


#### To RESET the smartwatch

- Swipe left Apps > **Settings** > **Reset** (watch will automatically restart).
- Warning: Resetting the smartwatch will unpair the smartwatch from your phone and all user data will be cleared.

### 3. Charging Instructions

The smartwatch package comes with a magnetic charging base. Connect the USB plug of the charging base to a USB charger to computer. Align the charging feed point of the watch with the metal contacts of the charging base until the charging interface appears on the watch screen.

**Note: When the battery is ultra-low or the watch is off, the watch will need to continue charging for about 30 seconds before the charging status will be displayed on the screen.**

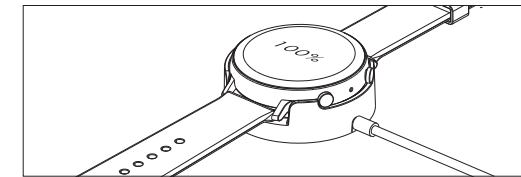

Please use the special charging base included in the box to charge. Make sure the charging contacts of the watch are clean before charging.

### 4. Download and Install the App

Android Users: Download and install the Fundo App from the Google Play Store.


iPhone Users: Download and install the Fundo App from the Apple App Store.

Or scan the QR Code below or the QR Code found on your smartwatch in the Apps menu.



### 5. Pairing Your Smartwatch With Your Phone

1. Turn on the phone's Bluetooth.
2. Connect Bluetooth data function: Open the Fundo app and grant the necessary permissions in the pop-up boxes. Click More > + Add Device > Add Available Device and select NIMBLE2 in the device list. The smartwatch and phone will automatically start pairing and synchronizing data.
3. Connect the Bluetooth calling function. Open the search Bluetooth interface on the phone (Settings>Bluetooth), select and click NIMBLE2, and confirm.

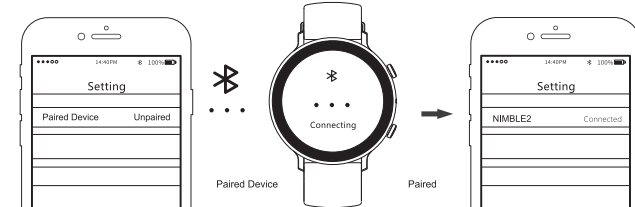

### 6. Important Information

The health information related to the heart rate, ECG, body temperature, blood pressure, blood oxygen, etc. from the smartwatch are for reference only and not for medical diagnosis.

#### Care and Maintenance

1. The watch meets the ISO 22810: 2010 standard IP68 protection level requirements and is suitable for daily use such as hand washing and rain. It is not suitable for water sports such as diving or long-term swimming in pools or coastal swimming.
2. Do not use in hot showers, hot springs, saunas, steam rooms, diving, water skiing, or other water activities and deep water activities with fast water flow.
3. Not suitable for extra dusty environments.
4. Do not use strong chemicals, detergents to clean the device or its accessories.
5. Keep the watch and its accessories dry. Do not dry with external heating equipment such as microwave ovens or hair dryers.
6. Use clean water at room temperature to clean the watch to avoid dirt and bacteria build-up.
7. Do not expose the smartwatch and its accessories to strong shocks or vibrations.
8. Avoid exposing the smartwatch to high temperatures, humidity, and open flames.

\* The information in the guide is for reference only and is subject to change without notice.