

**ROBIC SC-500E**  
**Operating Instructions**


**To Time Single Events**

Press “A” to **START** timing.

Press “A” to **STOP** timing.

After reviewing the time reading,  
press “B” to **RESET** timer to all  
zeros.

Note: You may take as many consecutive  
single event times as necessary by  
repeating this procedure.

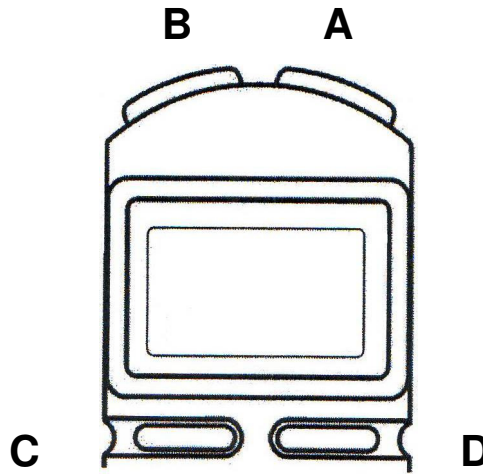

**Silent or Audible Operation**

Pressing “C” will change from silent to audible operation. You may change this function at any time.

The SC-500E will time up to 10 hours with 1/100 second resolution.

**PLEASE NOTE: The “D” (right front) pushbutton DOES NOT provide any function. Please avoid pressing this button.**