



# Quick Start Instructions

## Transmitter

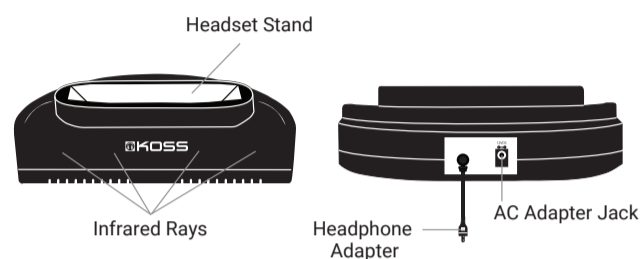

## Headset

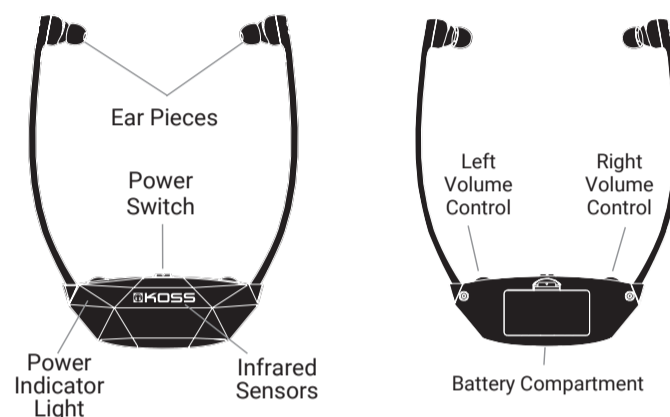

### Setting Up the System

- 1 Connect the transmitter to your television or audio device.



- 2 Plug the AC adapter (C) into the jack marked "12VDC" on the back of the transmitter and plug the adapter into an electrical outlet.




- 3 The headset (B) requires two AAA batteries (Not included). To access the battery compartment, remove the battery cover on the back side of the headset. Insert two AAA batteries.



### Operating the System


- 1 Place the transmitter at or close to your eye level when you are sitting. There should be nothing obstructing the transmission of the infrared light rays from the transmitter to the receiver in your headset. The transmitter must be within 18 feet (6 meters) in front of the headset for the system to work properly.

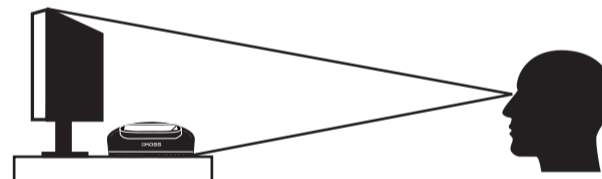

- 2 The transmitter will automatically turn on when the AC adapter is plugged in and when audio signal is detected. Turn the headset on by sliding the power switch to the "ON" position.

NOTE: The transmitter will go into sleep mode within 3 minutes if no audio signal is detected. To prevent possible damage to your hearing, please reduce the volume controls to the minimum level before putting on the headset.

- 3 Put the headset on. The headset should hang under your chin with the "KOSS" logo facing away from you (refer to figure below). Adjust the volume for each ear to a comfortable listening level using the volume control dial.

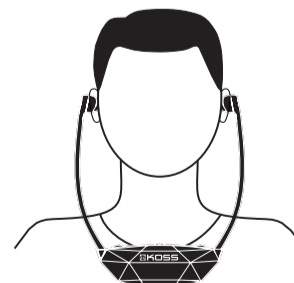

- 4 Turn the headset off after each use.