


COLBOR

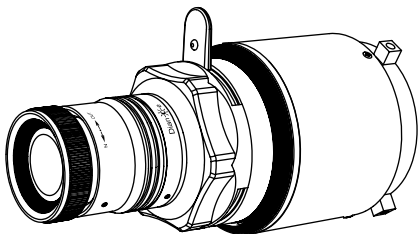

CPL-80 Projection Lens

User Manual

Thank you for choosing COLBOR product. Please read this manual carefully before use and follow all instructions mentioned herein.

Caring For Your COLBOR Product


- Keep corrosive chemicals, liquids, and heat sources away from the product to prevent mechanics damage.
- Please wear protective gloves for adjustment while working to avoid burn damage, and release it after it is cooled down.
- Do not leave the product unattended while in use. Keep out of reach of children.
- Do not attempt to disassemble or modify the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Malfunction may be caused by dropping, impact of external force.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.

Operation Instructions


1. Installation and Removal of Projection Lens

Align the projection lens with the groove around the lamp head and clip it in, turn the projection lens in the direction of the arrow, and the reflector installation will be completed after the top rod rebounds.

Removal of projection lens: Please follow the instructions below.

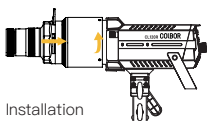

Installation

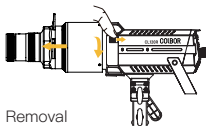


Removal

2. Attaching the Gobos


Mount the gobo on the clip-attached side of gobo holder in place, then insert the holder into the slot of the projection attachment, the holder will be fixated by the magnet inside.

*Please keep the clip attached side towards the front.

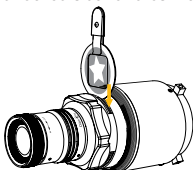


3. Attaching the Colored Gel Filter

Place the colored gel filter into the colored gel filter holder, then mount the holder on the frontside of the projection lens.



4. Focus Adjustment


Hold the gear-shaped part as the grip to prevent the heat, then turn the frontside of the projection lens to adjust the focus.



Specifications

Product	CPL-80
Size	Fold: $\Phi 122 \times 230\text{mm}$ Unfold: $\Phi 122 \times 305\text{mm}$
Material	Aluminum Alloy
Weigh	Net Weight: 1.3Kg Accessory: 125.6g
Compatibility	CL220 Series; CL330 Series

Packing List



80° Projection
Lens x1



Gobo Holder x1



Colored Gel Filter
Holder x1



Warranty Card x1



Gobo x12



Colored Gel Filter x4

WARRANTY

Warranty Period

Thank you for purchasing COLBOR products.

1. Customers are entitled to free replacement or repair service in case of quality defect(s) found in the product under normal use within 30 days upon receipt of the product.

2. Original COLBOR products are entitled to 12-month limited warranty service. The warranty period begins on the date of purchase of brand new, unused products by the first end-user.

Within the warranty period, if product defect or failure is attributable to material defection or technological problem, the defective product or defective part will be repaired or replaced without charge (service and materials fee).

Warranty Exclusions and Limitations

1. Faults resulted from inappropriate use of a product without following its operation specification

2. Artificial damage, e.g. crash, squeeze, scratch, soaking, exposing to rain or damp

3. Modifications to a product by its user or a third party without prior written consent of COLBOR, e.g. replacement of element or circuit, label alteration

4. The code on product is inconsistent with that of warranty certificate, or the code on the product or warranty certificate is altered or torn off

5. All consumable accessory attached to a product, like cable, cover

6. Faults as a result of force majeure, such as fire, flood, lightning, etc.

Warranty Claim Procedure

1. If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact COLBOR's customer service through email.

2. Please retain your sales receipt and warranty certificate as proof of purchase. If any of these documents is missing, only sales return or chargeable service will be provided.

3. If the COLBOR product is out of the warranty coverage, the service and the parts cost will be charged.

Guangzhou Zhiying Technology Co., Ltd

📍 Room 2401, 24 / F, South Tower, Lisheng Plaza, No. 68 Huadi Avenue, Liwan District, Guangzhou, China, 510000

✉ support@colborlight.com

🌐 www.colborlight.com