

## Purafide XP280 - Cleaning the sensor

Cleaning the sensor on the XP280 is simple and should only take 5 minutes.

Helpful items if you have them: a can of compressed air or a hairdryer.



Tip: Power off the unit and unplug it from the wall. Place unit on a table or countertop so it easy for you to access.

Step 1: Turn unit around and remove the back panel.




Step 2: Locate the access hole to the internal sensor.

It is above the filter, right of center.



Step 3: With compressed air, a hairdryer or your mouth, blow air into the hole for 10-15 seconds.

If by mouth, try to blow 2-3 dry breaths.

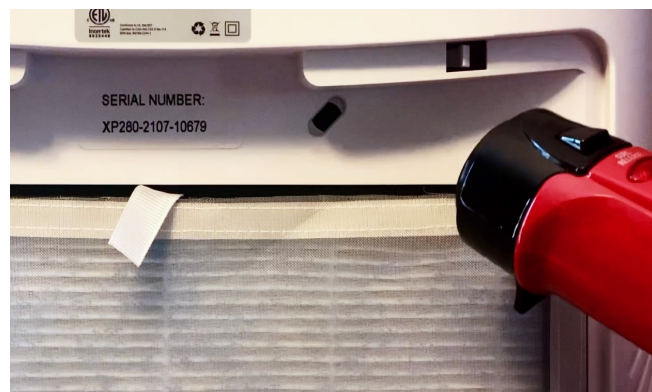

Step 4: Replace back panel, plug in and restart the unit. Please allow the unit 20-30 minutes to recalibrate.

If needed, repeat the process.

If issues with the unit continue, please contact us.