



# PHANTOM 1000

## User manual

### INTRODUCTION



Welcome to the Wings Wireless Generation with the all-new Wings Phantom 1000. We hope you are as excited as us to feel and flaunt your latest sound wear. But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to.

FEEL IT!  
FLAUNT IT!

### In the box

- 1) Wings Phantom 1000 neckband
- 2) User manual
- 3) Warranty card
- 4) Extra ear tips
- 5) Detachable Mic

### Phantom 1000

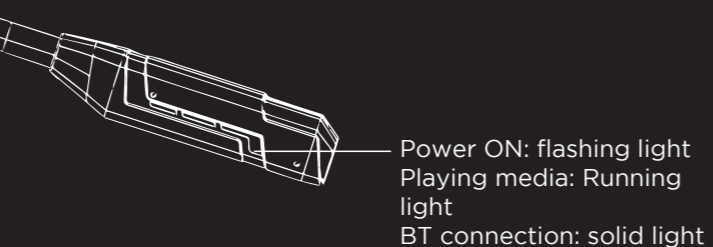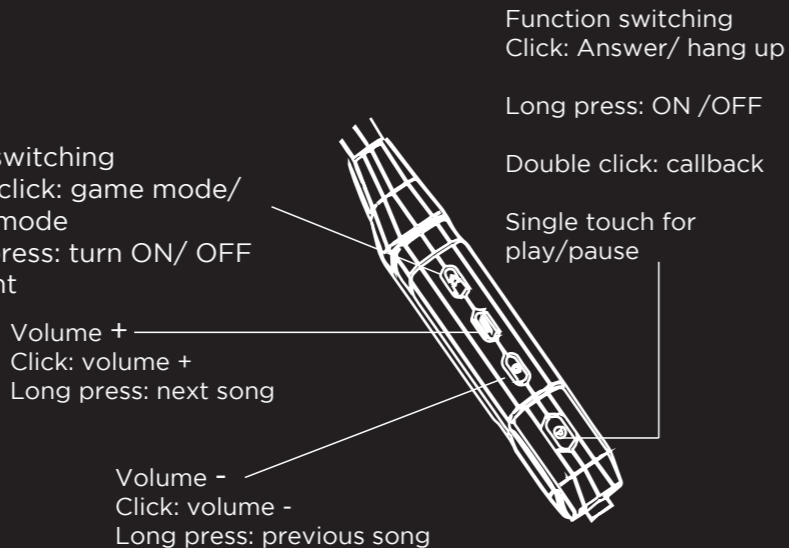

Power ON	The four green lights are ON, and the LED lights are running.
Power OFF	All four green lights are OFF.
Pairing	Four green lights will flash.
Connection succeeded	Four green lights are always ON at the same time.
Music playing	The four green lights are ON, and will be running.
Music pause	The four green lights are always ON.
Call	The four green lights are ON, and will be running.
On the phone	The four green lights are ON, and will be running.
Charging	The lights will flash after every second. One LED represents 25% of charge.
Fully charged	The four green lights are always ON.

### How to pair

**Step 1:** Keep the distance between the earphone and mobile phone (or other devices need to be connected) within 1 meter. The closer, the better.

**Step 2:** Press and hold the Power ON button for 3 sec. A voice prompt will confirm that the neckband has entered the pairing mode.

**Step 3:** Initiate Bluetooth function of mobile phone (or other device that needs to be connected). Then earphone-pairing name "Phantom 1000" will appear on your phone.

**Step 4:** Select "Phantom 1000" and the earphone will automatically connect with your mobile phone.

**Step 5:** Switch ON the Bluetooth search function in your mobile phone or other devices need to be connected. Then the earphone will automatically reconnect with the mobile phone which has connected last time.

**Attention:** Generally, there are 120 seconds at maximum to pair earphone with your mobile phone, or the Bluetooth Pairing mode will stop when the lights go out. Please retry steps 1 to 4 to pair again if your operation doesn't work.

### Controls

#### Button control usage

**Power ON:** Press and hold the Power button for 3 sec. A voice prompt will confirm that the neckband is ON and has entered the pairing mode.

**Power OFF:** Press and hold the Power button for 3 sec to turn the neckband OFF. A voice prompt will confirm the same.

**Play/Pause the music:** Single press the Power button to play/pause the music.

**Volume Up/Down:** Press the "+" button to turn volume up. Press the "-" button to turn volume down.

**Change Music:** Long press "+" button for next track. Long press "-" button for previous track.

**Gaming Mode:** Single press mode button to switch to gaming mode. Single press again to switch to music mode.

**Lights ON/OFF:** Long press mode button to turn OFF lights, long press again to switch them ON.

**Dual Pairing:** To connect Phantom 1000 to two devices simultaneously, please go through the below steps

**Step 1:** Connect the earphone to one of the devices. Then switch both the earphones and the device OFF.

### Technical Specifications

**Step 2:** Now connect the earphone to the second device, and again switch the first device ON. The earphone will get connected to both devices. If not then, connect the first device manually once again to activate dual pairing.

**Voice Assistant:** Press and hold multifunction button for 2 sec to activate voice assistant.

**Call control**  
**Answer incoming call:** When there is an incoming call, the earphone will start ringing, press the Power button once to answer the call, or use your mobile phone to answer it.

**Reject a call:** When there is an incoming call, the earphone will issue a voice message, press the power button for 2 sec to reject the call, or use your mobile phone to reject the call.

**Hang up a call:** Press the Power button once or use your mobile to hang up your call.

**Last call redialing:** Double press the Power button to redial your last call.

**Charging function**  
**Charging:** Before connecting Type-C charger, make sure the headset has been switched OFF.

**Bluetooth Version:** V5.2  
**Profile Support:** HSP,HFP, A2DP, AVRCP  
**Talk Time:** 55 hours  
**Music Play Time:** 60 hours  
**Charging Time:** 2 hours  
**Charging Voltage:** DC5V  
**Ambient Temperature:** -20 C/+60 C  
**Transmission Distance:** 15m  
**Driver Unit:** 12 mm dynamic  
**Sensitivity:** 95±3dB  
**Impedance:** 32±10%  
**Frequency Response:** 20Hz-20 KHz