

Brookstone® BK-550

Installation Manual

Brookstone®



BK-550 Assembly Instructions

1 The BK-550 Massage chair arrives in 1 box.




2 **Open the box and remove all contents.** Remove the packing materials. Put the footrest down and take the chair out of the box. Collect all the accessories and put them aside.



3 Put the seat cushion down. Locate the zipper heads on both sides and zip up the zippers.



4 Zip up the zipper between seat cushion and the base. Zip up the zipper between seat cushion and footrest. According to the requirements of the UL standard for safety (UL1647), the zipper pull must be removed and discarded.

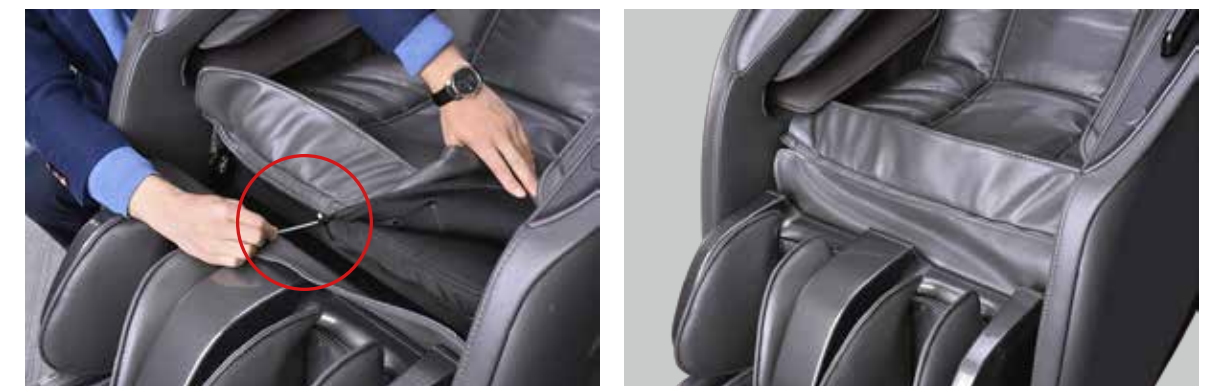



5

Turn on the chair. Place the remote control into the groove in the left side board. Connect the chair to a power supply and turn on the power switch. Now your massage chair is ready to go!

