

# INSTALLATION INSTRUCTIONS

## BATHE SURROUND FOR KALDEWEI OVAL BATHS

#### IN THIS DELIVERY:











LEG SYSTEM

**BATH SURROUND** 

### THIS INSTALLATION REQUIRES:

- 1. Flexible Waste Kit
- 2. Flexible Hose (for Multifiller Installation)

#### ALSO NEEDED FOR INSTALLATION:



**SILICON** 



**BATH PROTECTION** (DROPSHEET/CARDBOARD/BLANKET)



LEVEL








2 STRAIGHT PIECES TIMBER



1 IMPORTANT
MAKE SURE THE FLOOR IS LEVEL.



2 INSTALL LEGS ON BATH PER PER MANUFACTURER'S INSTRUCTIONS INCLUDED WITH THE LEG UNIT.

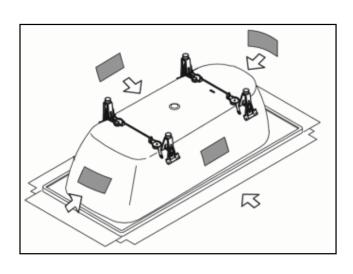

3 INSTALL SOUND PADS PER MANUFACTURER'S INSTRUCTIONS. NOTE: EXACT LOCATION IS NOT CRITICAL.



4 FIT WASTE AND OVERFLOW AS PER MANUFACTURER'S INSTRUCTIONS.



WITH ASSISTANCE, PLACE SURROUND UPSIDE DOWN ONTO CORRECT LOCATION ON THE BATH.



6 ADJUST LEG HEIGHT TO FLOOR LEVEL +2mm.



7 CONNECT THE FLEXIBLE WASTE TUBE TO BATH WASTE OUTLET.



8 ENSURE THERE IS ADEQUATE CLEARANCE UNDER THE BATH FOR THE WASTE.




9 WITH ASSISTANCE, TURN BATH & SURROUND OVER AND SUPPORT BATH ON TIMBER



10 IMPORTANT FOR ALL BATHS OR WARRANTY WILL BE VOID
SEAL JOIN WITH SILICON AND
LEAVE FOR 24 HOURS



**11** PREPARE FLOOR OUTLET

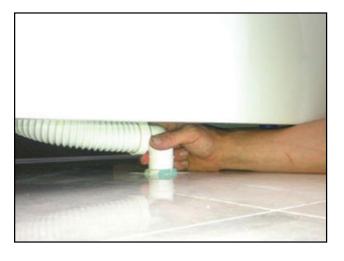

12 CONNECT THE FLEXIBLE WASTE PIPE TO THE PREPARED FLOOR OUTLET.



13 TEST FOR JOINT INTEGRITY AND LEAKS.



14 WITH ASSISTANCE, GENTLY LOWER THE BATH INTO ITS FINAL POSITION.



15 SEAL THE BASE WITH SILICON AND CLEAN AWAY EXCESS SO SEALED NEATLY TO THE FLOOR. ALLOW 24 HOURS FOR SILICON TO CURE.

**DISCLAIMER of Liability:** Bathe does not assume responsibility and expressly disclaims liability for loss, damage or expense arising out of or in any way connected with installation, operation, use or maintenance by using these instructions. The information in this manual is believed to be reliable but does not constitute an expressed and/or implied warranty. Bathe reserves the right to make changes to the product, specifications, data sheets and this manual without prior notice.

AFTER SALES SERVICE: Email: service@bathe.net.au ORDERS: Email: orders@bathe.net.au

www.bathe.net.au