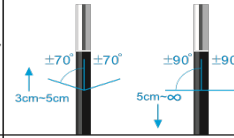

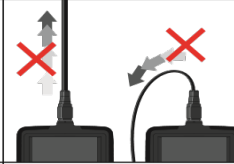
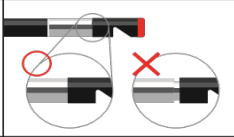

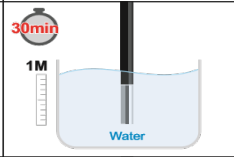
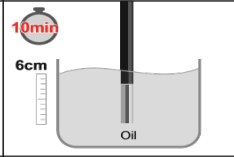


### Cautions for Use

- \* To avoid danger, do not put the probe into any flammable liquid or gas.
- \* The probe contains a series of small wires that control the optics and electronics of the camera tip.
- \* This product is designed for industrial use only. Do not use the system for human or any other biological inspection.
- \* Do not use any corrosive liquid for cleaning, such as alcohol.
- \* Do not try to disassemble the product, it might cause damage or electric shock.
- \* Please use only recommended components or accessories, unapproved accessories and components may cause damages.
- \* Avoid direct sun exposure and store the system in a cool, dry and well-ventilated place.
- \* In order to protect camera module, be sure to have a thread protective ring on the top of camera head if no accessories are used.

1	DO NOT bend the probe end of 3cm at the lens front. DO NOT bend over $\pm 70^\circ$ under the first 5cm. DO NOT bend over $\pm 90^\circ$ on the whole tube.	
2	DO NOT bundle the insert probe less than a 15cm internal diameter circle when using and storing.	
3	DO NOT crash the connector and don't pull the tube after the tube connects with the main system.	
4	DO NOT tighten the accessory anymore when screw complete.	
5	DO NOT crash the crown head.	
6	DO NOT immerse the insert probe deeper than 1M depth and over 30 minutes.	
7	DO NOT immerse the insert probe deeper than 6cm depth and over 10 minutes.	
8	Oil Pass: Leadless Gasoline, Machine Oil, Diesel, Brake Oil (DOT 4), Transmission Oil, Neutral Cleanser.	