


WAYPUMP02  
WAYPUMP03  
WAYPUMP04  
WAYPUMP05  
WAYPUMP06

## Manual Transfer Pump

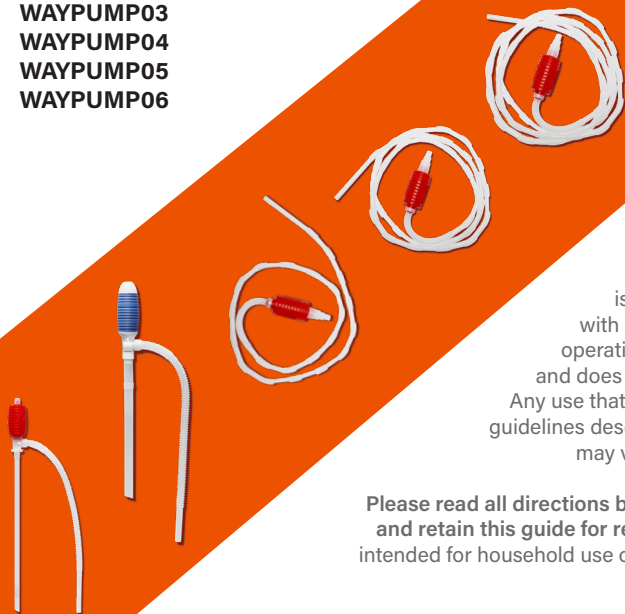

Thank you for purchasing the **DeWay™**

### **Manual Transfer Pump.**

This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

**Please read all directions before using the product and retain this guide for reference.** This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.


## Safety Precautions

- Only use compatible liquids with this pump.
- Do not allow children to operate the product.
- Make sure to remove any liquid left in the hose after use.
- Do not use the pump for transferring the following liquids: acetone, benzene, cresol, ethyl, phenol, methyl ethyl, concentrated caustic soda liquid, nitric acid, hydrochloric acid, or sulfuric acid.
- Do not refuel directly while the vehicle or other equipment is turned on.
- Do not leave pump unattended when in use.
- Do not use corrosive chemicals in this pump.

## Operating Instructions

NOTE: Siphoning action will automatically stop when the liquid level in the supply tank goes below the level in the receiving container.

for  
**WAYPUM04/  
WAYPUM05/  
WAYPUM06**


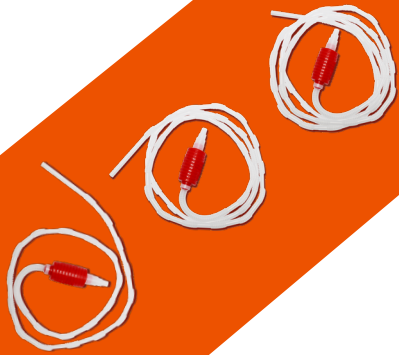


- 1 ➤ Insert the suction pipe of the pump into a supply tank or container full of a compatible liquid.
- 2 ➤ Place the drain spout into the receiving container.
- 3 ➤ Squeeze the operation bulb near the drain spout to start the flow.

### To stop the siphoning action:

- 1 ➤ Lift the suction pipe out of the supply tank to stop the flow of liquid and allow the remaining liquid in the pump to drain out from the spout.

for  
**WAYPUM02/ WAYPUM03**

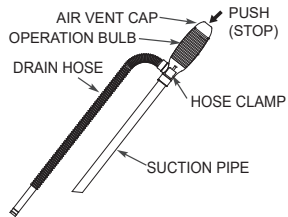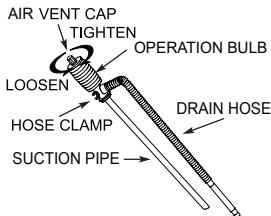

- 1 ➤ Insert the non-flexible suction pipe into a supply tank or container full of a compatible liquid.
- 2 ➤ Insert the flexible drain hose into the receiving container.
- 3 ➤ Tighten the air vent cap by turning it clockwise to close vent.
- 4 ➤ Squeeze the operation bulb a few times to start siphoning the liquid.

### To stop the siphoning action:

- 1 ➤ Stop the liquid flow by turning the air vent cap counterclockwise.  
*NOTE: For WAYPUM03, press and hold down on the air vent cap for a few seconds to stop the flow of liquid.*
- 2 ➤ Lift the flexible drain hose slowly above the receiving container allow the remaining liquid to drain out.
- 3 ➤ Remove the suction pipe from the supply tank. Then, clip the flexible drain hose to the hose clamp.

## Compatible Liquids

- ▶ Gasoline
- ▶ Kerosene
- ▶ Diesel
- ▶ Non-potable water
- ▶ Deodorants
- ▶ Antifreeze
- ▶ Windshield washer fluid
- ▶ Thinner
- ▶ Toluene
- ▶ Chemical insecticides
- ▶ Agricultural chemicals

## Specifications

WAYPUMP02 Flow Rating: 1.9 gpm (7 Lpm)  
WAYPUMP03 Flow Rating: 3.2 gpm (12 Lpm)  
WAYPUMP04/05/06 Flow Rating: 1.1 gpm (4 Lpm)  
WAYPUMP02 Total Length: 2.06 ft. (630 mm)  
WAYPUMP03 Total Length: 2.5 ft. (780 mm)  
WAYPUMP04 Total Length: 5.9 ft. (1788 mm)  
WAYPUMP05 Total Length: 8.9 ft. (2738 mm)  
WAYPUMP06 Total Length: 10.6 ft. (3238 mm)  
Pump Type: Manual  
Material: Polyethylene plastic



## **Questions or Concerns? Contact Us!**

telephone: 888-375-6700

email: [info@supportcbp.com](mailto:info@supportcbp.com)

DeWay is a trademark of C&A IP Holdings, LLC, in the U.S.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837. Made in Korea.

© 2020. C&A IP Holdings, LLC. All Rights Reserved.