



## WIRELESS SLEEP MASK WITH HEADPHONES



sleep-dreams.com.au

Thank you for purchasing Sleep Dreams Wireless Sleep Headphones. Please read these instructions carefully before use.

### Intended Use

- The Wireless Sleep Mask is suitable for Bluetooth compatible device such as mobile phones, iPads etc. Users can listen to music, conduct phone calls hands free and interact with Siri.
- The product is for personal use only and is not intended for commercial applications.

### Safety Instructions

- Before using the product, please read the instructions through carefully and keep them for future reference.
- If you pass the product on to a third party, it must always be accompanied by this User Manual.

#### Dangers of Injury


- Keep product and packaging away from children and animals, as they may cause harm.
- Always supervise children using the product. This item is not indented for use by children.
- Always maintain a gap of at least 10cm between the headphones and a pacemaker or an implantable cardioverter defibrillator (ICD) as the product generates magnetic fields.

#### Dangers of Fire and Explosion

- Caution! Do not expose the headphones to any high temperatures over 70°C (such as a hair dryer, heating, prolonged sunlight etc.) The battery inside of the headphones may overheat.
- Only charge up the headphones in an ambient temperature of from 10°C to 40°C.

- Do not crush or pierce the battery. Do not expose the battery to high pressure, as this may cause an internal short-circuit and overheating.
- The headphones and the battery must not be taken apart, thrown into a fire, immersed in liquids or short circuited.
- If the headphones are not used for a prolonged period of time, recharge them regularly (roughly every 3 months).

### Interface

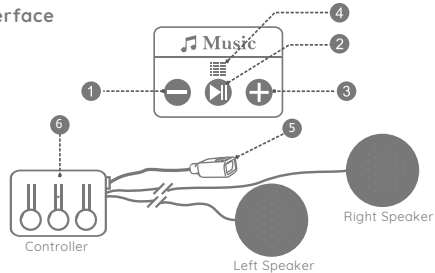

- 1 Volume Down/Previous Song
- 2 Play/Pause/Answer/Hang Up/Redial
- 3 Volume Up/Next Song/Siri
- 4 LED Status Light/Microphone
- 5 Micro USB Charging Port
- 6 Bluetooth Controller

### Instructions For Use

#### Pair with a Bluetooth Device

Before you can use this product it needs to be paired with your device.

- Long Press the button for 3 seconds until the LED Status Light [4] starts to flash red and blue alternately.
- Turn Bluetooth on your phone or other Bluetooth enabled device.
- Search and select **"Musical Eye Mask"** from the list of found devices.
- If a pass code is required, enter "0000".

- After it's paired successfully, only the blue light will flash slowly.
- When switched on next time, it will automatically search and attempt to re-connect with the last paired device.

#### To Pair with a New Bluetooth Device

- Make sure the product is disconnected with the previous paired device.
- Follow the "How to Pair with a Bluetooth Device" instructions from step 1.  
NOTE: To save power, it will switch off automatically if there s no Bluetooth connection for 3 minutes.

#### Playing Music

- Play/Pause: Quick Press the button to play or pause music.
- Adjust Volume: Quick Press the button or button to adjust up or down.
- Music selection: Long Press the button or button to select previous or next songs.

NOTE: Play/Pause and Music Selection functions will only work on devices which support Bluetooth profile AVRCP.

#### Call-Handling

- Answer a call: When a call is incoming, the ringtone will play. Quick Press the button to answer. During the call, you can increase or decrease the volume by Long Pressing or buttons.
- Reject a call: When a call is incoming, the ringtone will play. Long Press the button for 2 seconds to reject it.
- End a call: During a call, Quick Press the button to end the call.
- Re-dial: Double Press the button in quick succession to redial the last number.

#### Activate/Deactivate Siri (iOS Only)

- Activate Siri: Double Press the button in quick succession to activate Siri.
- Talk through the microphone [4] to communicate with Siri.
- Deactivate Siri: Double Press the button to deactivate Siri.

### How to Charge

- Make sure the product is switched off, open the zipper on the eye mask and locate the the Charging Port [5].
  - Connect the Micro USB Charging cable to the Charging Port [5] and the other end to a power source like PC or mains charger.
  - The LED Status Light [4] will turn to red whilst charging. It will turn to blue when the battery is fully charged.
- It takes approx. 2 hours to be fully charged.
  - If the product is under used, it may stop functioning when charging.
  - If the product crashes, it will reset during charging.

### LED Indicators

STATUS	INDICATOR
Pairing Mode	Flashing red and blue lights
Bluetooth Connected	Slow flashing blue light
Charging	Solid red light
Charging Complete	Solid blue light

### How to Roll Up the Eye Mask



- Turn the strap pocket inside out, to hide the velcro
- Roll up the eye mask.
- Fix the eye mask in place with the strap.

### Troubleshooting

If you cannot connect the product with your device, please try the following:

- Ensure the product is charged, switched on, paired with and connected to

- your device.
- Check if the product is in range (20 meters/66 feet) with your device and there are no obstructions like walls or other electronics devices between the product and the device.
- Only one device can be connected with the product at a time, ensure there is no other Bluetooth device already connected with the product.
- If you receive an intermittent signal, please ensure the product is in the effective range from your device.

### Washing Guidelines

Please remove all the electronic components from the Eye Mask before washing. Hand wash only.

	Wash with cold water		DO NOT dry clean
	Hand wash ONLY		DO NOT use bleach
	DO NOT tumble dry		DO NOT iron

### Specifications

- BT Version: V5.2
- Frequency: 2.402 Ghz - 2.480Ghz
- Transmission Range: 20M / 66FT
- Rated Power: RMS 10mW X 2
- Speaker Unit: 32 / 20mm
- Battery: 3.7V 180mAh Rechargeable Li-polymer Battery
- Charge Time: 2 Hours

### Package Contents

- Wireless Musical Sleep Eye Mask
- Micro USB Charging Cable
- User Manual



WARNING: Avoid excessive volumes, particularly over extended periods or in the case of frequent use. Listening to music at maximum volume for prolonged periods can lead to hearing damage. It's best to avoid extreme volume when using this product, especially for extended periods. For your own safety, please be aware of your surroundings when using this product.

Made in China

