


USER MANUAL

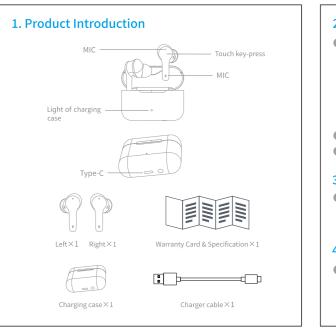

Search and download the "WasTrans" app in the App Store/ Google Play. \( \) may also scan the OR code to download App Store Google Play 2 Open the app and allow the permissions for the proper use of the device After downloading the APP, you need to register with your email address before you can use it. 3. Turn ON / OFF Take the earphones out of the charging box, and the earphones will turn on automatically. During the process, you will hear the "Pairing" voice prompt. After the earphones are placed in the charging box, they will shut down automatically. Product choice A Open the WasTrans App and select M6.

photo Translation \_+ Photo translation

2 Turn on Bluetooth and select "WAS-M6" to pair. After the connection is successful, you will hear the "Connected" prompt from the earbud, and the interface will display that the device is connected. Bluetooth pairing request Bluetooth To pair with:

Non-discoverable as "sphore".

WAS-M6 WAS-M6 Not connected ① Cancel Pair Note: If the earbud has been paired with the mobile phone, it will try to automatically reconnect to the device the next time the earbud is turned on. According to different application scenarios, you can choose the following five different modes: touch mode, speaker mode, free talk mode, offline mode and One person wears earbuds and the other holds a mobile phone, which is

 Touch mode Two people each wear one earbud, click the earbud to translate in real time. Suitable for acquaintances who are willing to wear your earbud L English 🖀 Chicago B 🖃 Hello, nice to meet you! 你好,但真对认识你! Select the touch mode on the main interface; 2) Give one of the earbuds to the other party; Select the language of the left and right earbuds; 4) Tap one side of the earbuds to speak continuously, and both earbuds can hea simultaneous interpretation. If the other side wants to speak, tap his or her earbud to start speaking. To end the translations, just touch the earbud again. Or set it to end translation automatically in the APP. (The default is to automatically end translation. If you want to end translation manually, please turn off "Automatic end pickup" in the Setting) Speaker mode

suitable for strangers who are inconvenient to wear your earbuds

 On the main interface, select "Speaker Mode": 2) Select the language for the earbud and the phone; 3) Tap the earbuds (or click the lower half of the phone screen) to start speaking the mobile phone speaker will play the translations; Tap the top half of the phone screen, the other person starts speaking to the phone, and you will hea the translations through the earbuds. Free talk mode Both wear an earbud to translate in real time, release their hands, and communicate freely

 "Free Talk Mode" on the main interface; 2) Hand over one of the earbuds to the other party; 3) Select the language of the left and right earbuds; 4) Click the mobile APP to start a conversation. In this mode, there is no need to touch the earbuds. During the conversation, both earbuds will hear the translated content in real time. After the conversation is over, click the button a the bottom of the mobile APP or tap the earbud to end the translation. Offline translation Offline translation means that you can use translation function withou Internet, such as at airplanes and underground garages

Operation method:

Internet connected

4) After the exchange is successful, download the offline translation language pack on the "Redeem&Download" interface. Photo translation Use the mobile APP to automatically scan the picture and translate the text into the specified language On the main interface, select "Photo Translation"; 2) Select the corresponding language for photo translation.

[Volume adjustment] Adjust the volume of the playing sound Play/Pause: Tap once on any earbud

Automatically end pickup: According to the speaking interval (2-3s), the earbud Next song: Tap 2 times on the right earbuds

@Manually end pickup: You need to touch the back of the earbud to end pickup [Rotate the upper half of the screen] In the external playback mode and offline

mode, you can choose to rotate the upper half of the translation interface by 180 degrees, so that the other party can view the translation results conveniently

[Adjust font size] Adjust the font size of APP text Click the icon [ ∧ ] in the upper right corner of the home page, select "Offline [Prompt opening and closing] Open/close the instruction pop-up window after

[Choose automatic/manual end pickup]

automatically ends the pickup

Select the language you want to download and download it now;

Management", and click "Redeem&Download";

3) Prompted that the offline time is insufficient, you can recharge directly; if you [Playback settings] Choose to play/not play the translated voice results, only the have an " Translation time redemption card ", please select "Translation time translated text is displayed redemption card" on the "Offline management" interface, and enter the [Clear the translation conversation record] Clear conversation records with one 20-digit redemption code to recharge;

> [Unbind] If you want to lend the earbud to other people, you need to click "Unbind" in the settings, then other people can use it

Calling answering: Tap once on any earbud

Reject incoming call: Press & hold the left or right earphone for 1 second

Makephonecalls

# T Listen to music

Previous song: Tap 2 times on the left earbuds

(III) Voice assistants ("Hey Siri or OK Google")

Start the voice service: Triple click on any earbud Leave voice service: Wait for about 5 seconds to exit automatically

When the earbuds are charging the

Red light on for one min \*

When charging, the indicator light o

Green light slow flashing

Green light on

charging case display:

Red light out

indicator light of charging case display:

### Earbud (left or right) No audio?

frequency interference.

by touching the earbuds?

Restart the APP then reconnect Bluetooth.

1) Check the battery of the earbuds. Putting the earbuds back into the charging

2) If the battery power is sufficient, reset the earbuds by put them back into the

charging case, close the case for 20 seconds then take earbuds out and

1) Take the earbuds closer to the mobile device, make sure there is no radio-

• After Bluetooth connection is completed, translation cannot be started

2) Reset the earbuds by putting them back into the charging case, close the case

before they can be searched & connected by other phones.

for 20 seconds then take earbuds out and try again for pairing.

2) Reset the earbuds by putting them back into the charging case, close the case

box. Red light indicates that the earbuds need to be charged before using. Green light means they are fully charged. or other dangers.

product damage. reconnect to your mobile device. 3) Do not expose to high temperatures or around heating equipment such as Bluetooth not stable or can't find the device?

Order Number

Member ID

Phone Number

microwaves or ovens. Circuit Board O O O O O

circuit board | 5 | 5 | 5 | 5 | 5 -20°C ~ 45°C. If the temperature is too high or too low, it will cause the device to malfunction.

for 20 seconds then take earbuds out and try again for pairing. 3) For earphones with connection records, take them out and wait 20 seconds caused by the use of unofficial approved accessories.

> × Indicates that this hazardous substance contained in at least one of the homogeneous 1. After-sales Service And Support

Return/Change Return Reason

### Please read the following safety and warning information before

2) Do not deliberately drop, burn, penetrate, squeeze or immerse in liquid to avoid

4) Use the device within the range of 0°C ~ 35°C and store within the range of

The form is compiled according to SJ/T11364

this part is below the limit requirement in GB/T 26572.

## materials of this part is above the limit requirement in GB/T 26572.



If you need to return or change the goods, please contact customer service

Hazardous Substance

After confirmation, please fill in this form in detail, and return it with the product

Indicates that this hazardous substance contained in all homogeneous materials of

This product meets RoHS environmental protection requirements, it was not affect the health of users under normal use. (At present, there is mature technology in the world to replace or reduce lead content in electronic ceramics, optical glass, steel and copper alloys.)