


User Manual



Bone Conduction Headphones Bluetooth

Summary of button functions

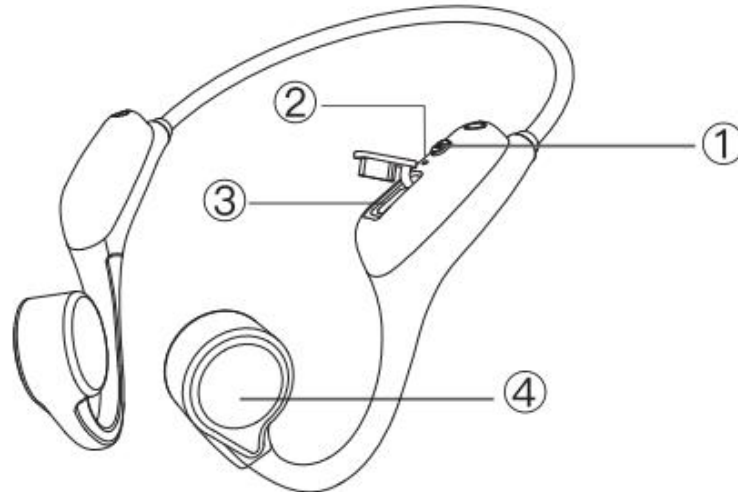

-
- ① Power Button ② Microphone and LED Indicator
③ Micro USB Charging Port ④ Multi-function Button
-

Packing list



Bone Conduction
Headphones



Charging Cable



Ear Plugs




User Manual

How to wear

Hang the headphone behind your neck with both speakers clinging to your cheekbones.


After that, adjust it until you feel comfortable.

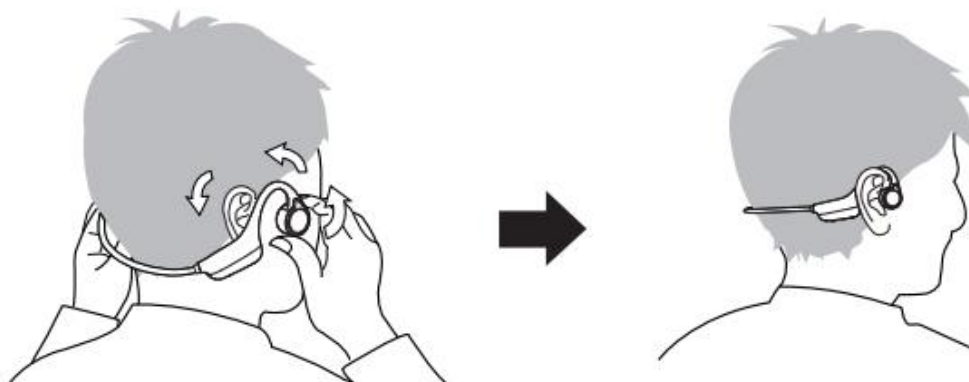

Controls

Power on

When the headphone is in a power-off status, press and holds the power button for 3 seconds with blue and red LED flickering alternately 3 times, reminding tone “Power on”.

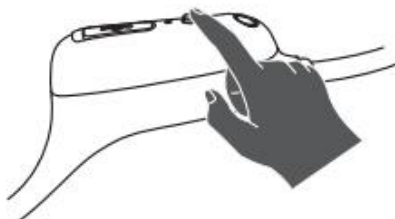


Power off

When the headphone is in a power-on status, press and holds the power button for 3 seconds with red LED flickering 3 times, reminding tone “Power off”.

How to connect:

When the headphone is off


- 1) Press and hold the power button for 3 seconds to turn on the headphone, the headphone will automatically pair and flash red and blue lights alternately.
- 2) Find the headphone name with “BS03 PLUS” on the Bluetooth list, and click connect. After the connection is successful, the blue LED flickers with a reminding tone “Connected”.
- 3) When using the headphone again. Just turn on the headphone and it will be automatically connected with the Bluetooth device. (The last connected device)

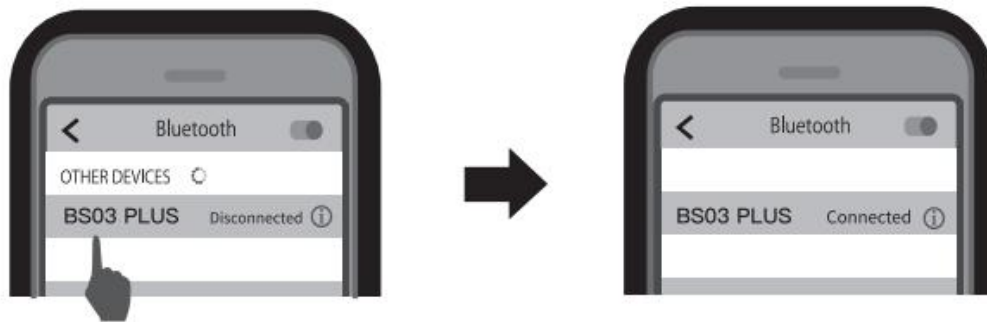

How to connect other devices:


Disconnect the Bluetooth of the currently paired device, the headphone will flash red and blue lights alternately with reminding tone “Disconnected”. After that, find the headphone name “BS03 PLUS” on another device’s Bluetooth list and click connect.

Operating function

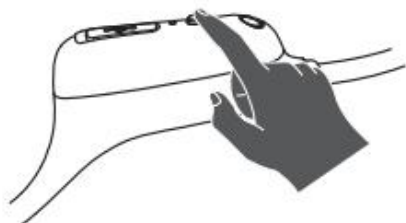

Power Button

- Power On/Power Off–Long Press for 3 Seconds.
- Volume Up–Single Click.
- Volume Down–Double Click.

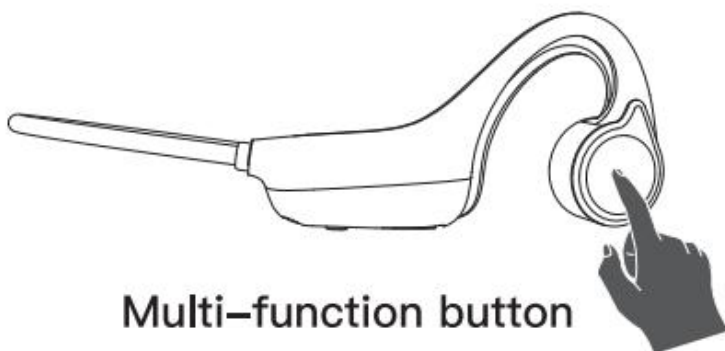

Multi–function button

Play status


- Single–click to play/pause music.
- Double–click to previous song.
- Triple–click to next song.
- Long press for 3 seconds to enter voice assistant mode.

Incoming call status

- Single–click to answer and hang up.

How to charge

When the headphone connects to the phone, the phone will display the battery level of the headphone. If the battery level is displayed in red, it means that it needs to be charged. Just plug in the USB charging cable to the USB charging port to charge.

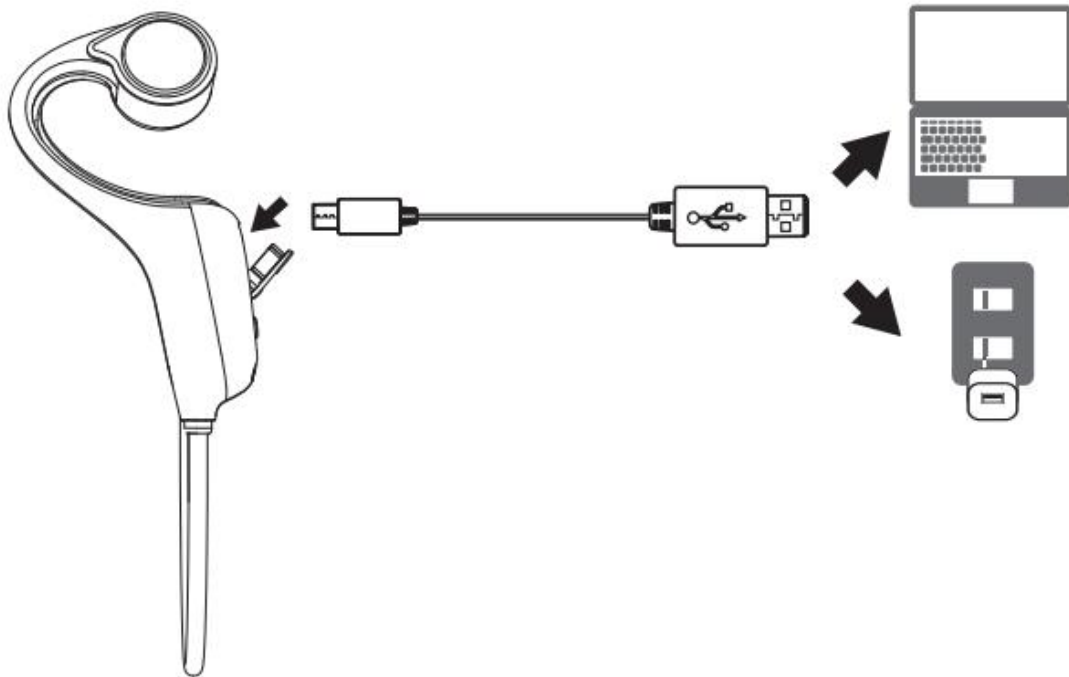

Indicator light Instruction

- Red and blue light flickering: Paired
- Red light on: Charging
- Blue light on: Fully charged

Specifications

Product model	BS03 PLUS
BT version	V5.0
Product weight	25.6g
Headphone battery	240mAh
Charging time	1.5 hours
Music play time	10H (at 70% volume)
Speaker impedance	-42dB
Waterproof	IPX67
Connect distance	10 meters
Input	5V-1A
Support profile	A2DP/AVRCP/HSP/HFP

Attentions

- The headset should be stored in a cool and dry place. The working temperature should be 0–45°C.
- This machine can be used for daily cleaning, but it cannot be flushed and soaked against the microphone hole and charging port.
- Please cleaning the headset with a soft and dry cloth.
- Please do not charge immediately after exercise, so as to avoid possible residual sweat in the charging port to damage the earphone circuit.

Customer service

We provide all our customers a 365–days warranty from the date of purchase.

Any problem, please contact our after–sales for solutions.

- ① Open the Product Details Page → Find and Click Sold by “XXX” Store (Seller Name) → Click “Ask a question” to contact us.
- ② Open your Amazon Account → Click “Your Orders” → Find the problematic Order → Click “Get Help with Order” to Contact us.

Made in China 
FC CE RoHS  