




ACTIVE OXYGEN IONIZER

AOG10



# Contents

1.Safety Information	-----	02
2.Product Overview	-----	04
3.Installation Instruction	-----	05
4.Operating Instruction	-----	06
5.Product Specifications	-----	07

# 01/Safety Information


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision
- Read this user manual carefully before you use the device and save it for future reference.
- Instructions for class III appliances state that it must only be supplied at SELV.



- The appliance has a non-replaceable rechargeable battery. When the appliance cannot be used, please put it into the appropriate dust bin and do not throw it away at will.
- Do not use the device if the plug, the power cord, or the device itself is damaged.
- Do not use this device if an abnormal condition or malfunction occurs and disconnect the device from the power supply.
- Do not use this device in a place where a ventilation system is not available.
- Ensure that there are no individuals or pets in the room when using this device independently, i.e., not together with an air purifier.
- Do not breathe in Active Oxygen directly.
- Please stop using this device and ventilate the room if you feel a change in physical condition such as a headache.
- Person who has asthma or related medical history, please consult your physician before use.
- Keep the device out of the reach of children.

- Do not place the device in an unstable place.
- Do not place the device in a humid or dusty place.
- Do not place the device in direct sunlight or an extremely high-temperature environment or near gas appliances, heating devices or fireplaces.
- Do not use this device when using indoor smoke-type insect repellents or in places with oily residues, burning incense or chemical fumes.
- Do not use in rooms with a highly functioning air humidifier.
- Do not let water or any other liquid or flammable detergent get into the device to avoid electric shock or fire.
- When using in the refrigerator, avoid taking the device out frequently. If you take it out, use a paper towel or dry cloth to wipe the device immediately to prevent the temperature difference that makes the water vapour in the air condense on the device and shorten the service life of the metal parts.
- Do not put your fingers or any objects into the air inlet or the air outlet to prevent physical injury, electric shock or malfunctioning of the device.
- Do not cover the air inlet or outlet with clothes or other obstacles.
- Do not use at a voltage other than specified power supply voltage.
- Unplug the device from the electrical socket before checking or cleaning.
- Do not use alcohol, gasoline or other volatile mixed solvents to wipe the device.
- Do not disassemble, repair or modify this device on your own.

## 02/Product Overview

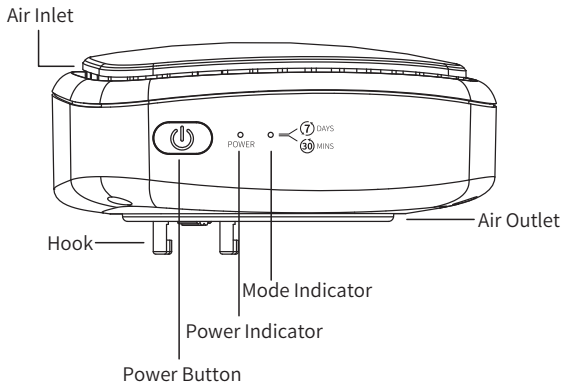

RHT Active Oxygen Ionizer is a newly developed air purification auxiliary product that can be used together with air purifiers to improve air purification and anti-bacteria ability. It can also be used alone in small confined spaces, such as shoe cabinets and refrigerators, to deodorize and inhibit bacteria.


# 03/Installation Instrwtion

## I. Attach to air purifiers


1. Rotate to open the hook



2. Buckle the hook into the cover

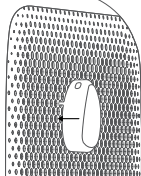

3. Ensure the device is securely buckled in the cover

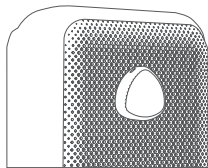


## II. Mount to a wall or flat surface


1. Use the screws or Velcro strips to mount the base adapter to wall or flat surfaces



2. Insert the hook of the device into the slot of the base adapter

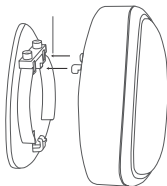


3. Tighten the screws to secure

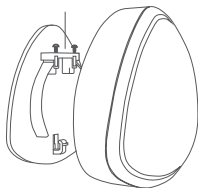


## 04/Operation Instruction

### Power On

Long Press the Power Button  and the device makes a short 'Bi' sound, indicating the device is power on successfully and enters into Ready Mode.

### Mode switch

Press the power button  again to switch between automatic mode and single mode

#### Auto Mode (7 Days)

The mode indicator lights up in blue and the machine starts running after 5 seconds of flashing . The light turns into a breathing light until the power is used up. The power indicator remains on for 100 seconds.

#### Single Mode (30 Mins)

The mode indicator lights up in green and the machine starts running after 5 seconds of flashing The light turns into a breathing light and the machine runs for 30 minutes. The machine is power off and makes a 'Bi' sound after 30 minutes running.

### Power Off

Long Press Power Button  and the device makes a long 'Bi' sound, indicating the device is power off successfully.

#### Power On / Ready Mode

Continuous Blue: High Power  
Flash Red: Low Power 60min later, the device makes a long 'Bi' sound, stops running, automatically powers off and all indicators are extinguished.

#### Power OnState

Flash Blue: Charging  
Continuous Blue: Fully Charged

\*The product cannot be used during charging



## 05/Specification & Parameter

Product Dimension:	88.6 x 88.5 x 36.4mm
Net Weight:	141g
Operating Environment:	-10°C~+50°C
Effective Range:	0.25m <sup>3</sup> —3m <sup>3</sup>
Battery Capacity:	3.7V/650mAh
Rated Power:	DC 5V 1A
Operating Power:	3W
Endurance:	7 days

\*The actual endurance may differ depending on the operating environment.



Address: Block B, 2/F, Goodwill Industrial Building, 3  
6 - 44 Pak Tin Par Street, Tsuen Wan, N.T., HK  
Tel : (852) 3895 8488  
Fax : (852) 2415 9349  
[www.ncco-group.com](http://www.ncco-group.com)

Address: No. 3, 8 Shengqi Road, Shahukoucun, Changping town,  
Dongguan, Guangdong province  
Tel : 0769-2211 3323