

PEAK

RADIX

WIRELESS FOOTSWITCH

MANUAL



IT'S TIME FOR BETTER TATTOOING...
FROM THE GROUND UP.



2 PEAK RADIX DIAGRAM




3 TECHNICAL SPECIFICATIONS

3 KEY FEATURES

4 HOW TO USE YOUR PEAK RADIX

5 WARRANTY INFORMATION



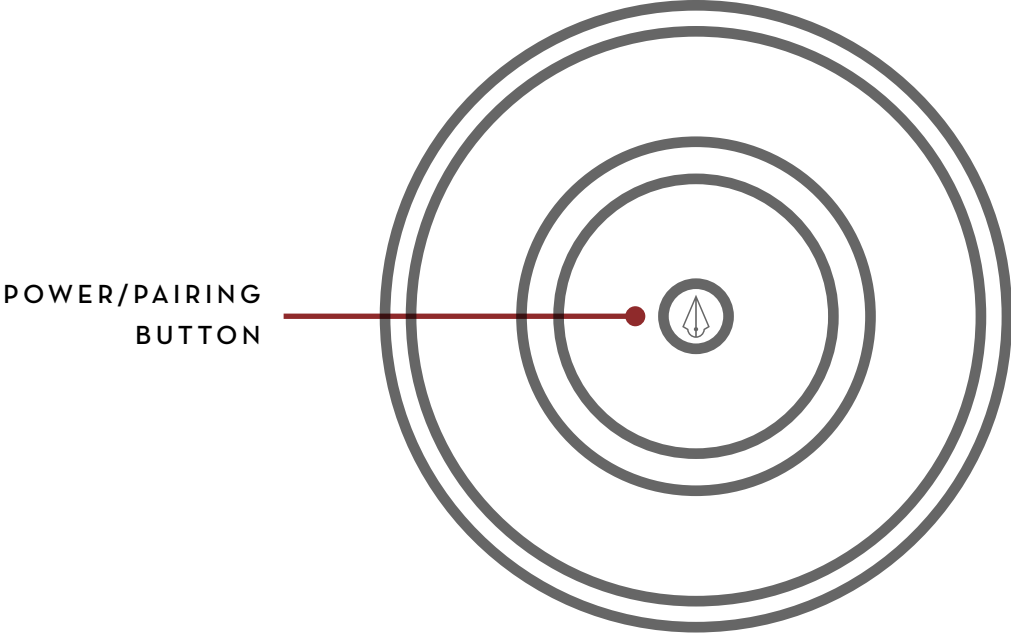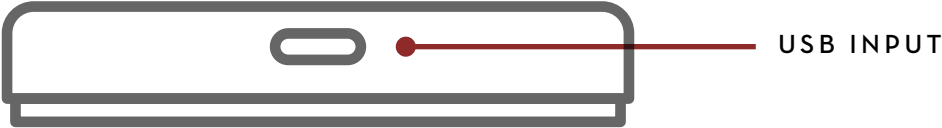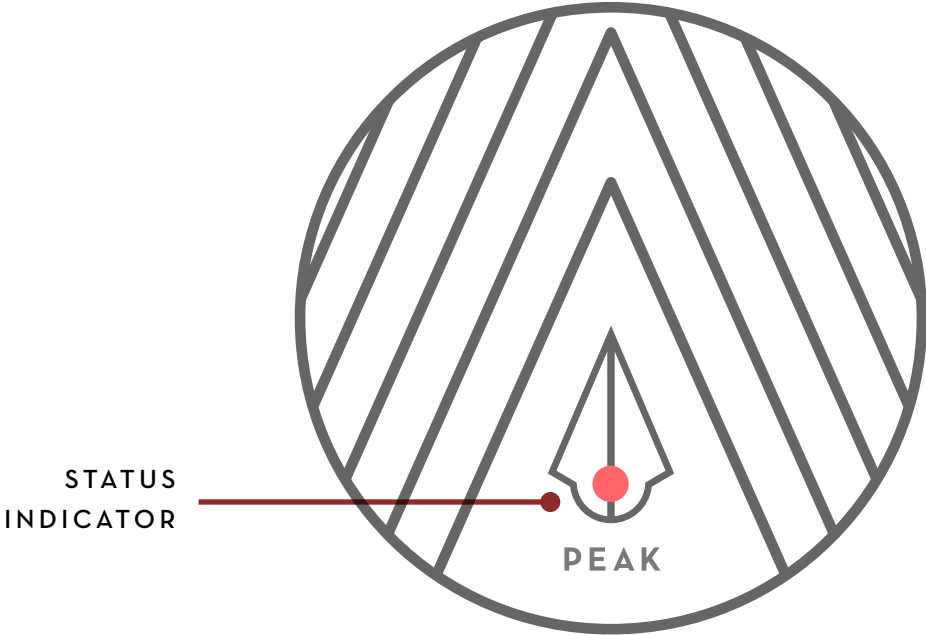

TECHNICAL SPECIFICATIONS

Net Weight: 160g

Dimensions: 4" diameter

Pairs to Surge Power Supply with RF signal

KEY FEATURES

Durable zinc alloy puck

Wirelessly compatible with the Peak Surge Power Supply

Rechargeable with USB-C cable

Charges fully in 1 hour

Operates for up to 2 months on 1 full charge

Lightweight and compact

CONNECTING YOUR RADIX TO THE PEAK SURGE POWER SUPPLY

- 1 Press your Radix footswitch down, then rapid double-press the button on the bottom of your Radix power supply to turn it on. A slow blinking red light will indicate your Radix is ready for pairing.
- 2 Press and hold the **+/- buttons** on your Surge power supply. Wait until the display screen shows “**LN.**”
- 3 Press your Radix footswitch down and hold the button on the bottom of the footswitch to turn off and complete the pairing.
- 4 When your Radix has successfully paired with your Surge, you will hear a beeping sound. The screen of your Surge power supply will then return to the home screen.
- 5 To turn your Radix footswitch back on, press down and hold the button on the bottom of your Radix.

UNPAIRING THE RADIX FROM THE SURGE

- 1 Make sure your Radix footswitch is on, then press and hold the **+/- buttons** on your Surge power supply. Wait until the display screen shows “**AF**”
- 2 Press the power button on your Surge. The screen will say “**CL.**”
- 3 Once unpaired, the screen of your Surge power supply will return to the home screen.

WARRANTY INFORMATION

If you experience any technical issues or your Peak Radix footswitch requires repairs, please contact our customer service team at 410-712-0145. After our customer service team provides you with a return authorization, you can download and fill out our **Peak Repair Order Form**:



Mail your completed repair order form, footswitch, and invoice as proof of purchase to 7410 Coca Cola Dr STE 108, Hanover, MD 21076. You can also direct any questions or concerns regarding issues with your Peak Radix footswitch to **info@peakneedles.com**.

If you purchased your Radix less than a year ago, we will replace it with a brand new model. If your item is older than a year, it is unfortunately no longer protected under our one-year warranty.