

## Wall Mount Electric Toothbrush Holder Installation






**WARNING: Always turn off power to electrical outlets before removing wall plate, check walls for electrical wiring, water pipes, etc. if drilling into wall.**

- For wall plate style holders, remove the existing wall plate from the outlet, please keep the screws for installing the new holder.
- For the blank wall mounting plate style holders, use the holes in the plate to mark the location on the wall where the holder is to be installed. If using the wall anchors in drywall, drill a  $\text{Ø}1/4$  hole and install the anchors. If the wall anchors are not required, drill a  $\text{Ø}1/16$  pilot hole for the screws.

- The charger will sit facing up on the top of the holder, with the plug end of the cord exiting through the rectangular opening in the bottom. To install the chargers first feed the plug end of the cord through the charger opening and through the rectangular opening so it passes all the way out the bottom of the holder.

Pull the excess cord out the bottom and fit the charger into the top opening facing up.


- Reach into the cord storage pocket on the back of the holder and pull the cord out the back side of the holder. Pull the cord all the way until just a short length of the plug end of the cord exits out the bottom, just enough to reach the outlet when installed.

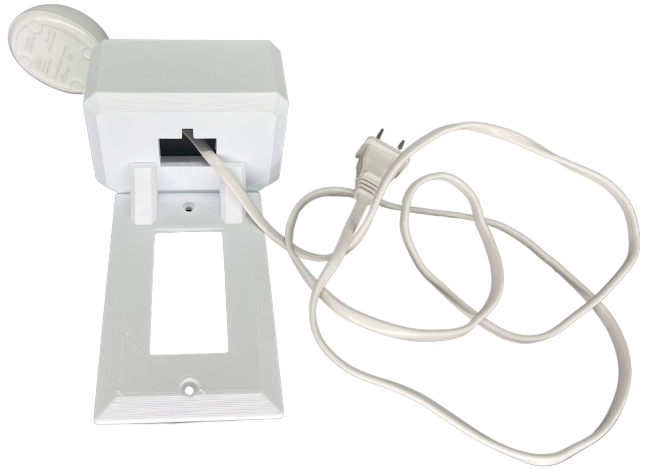

- Coil up the remaining cord length and tuck it into the opening in the back of the holder. Repeat for the other chargers.



- Install the holder with chargers installed on to the wall outlet or to the wall with the blank mounting plate.
- Some of the larger chargers will have an extra mounting screw hole at the top of the base for added support. If using the wall anchors in drywall, drill a  $\text{Ø}1/4$  hole and install the anchor. If the wall anchors are not required, drill a  $\text{Ø}1/16$  pilot hole for the screws.

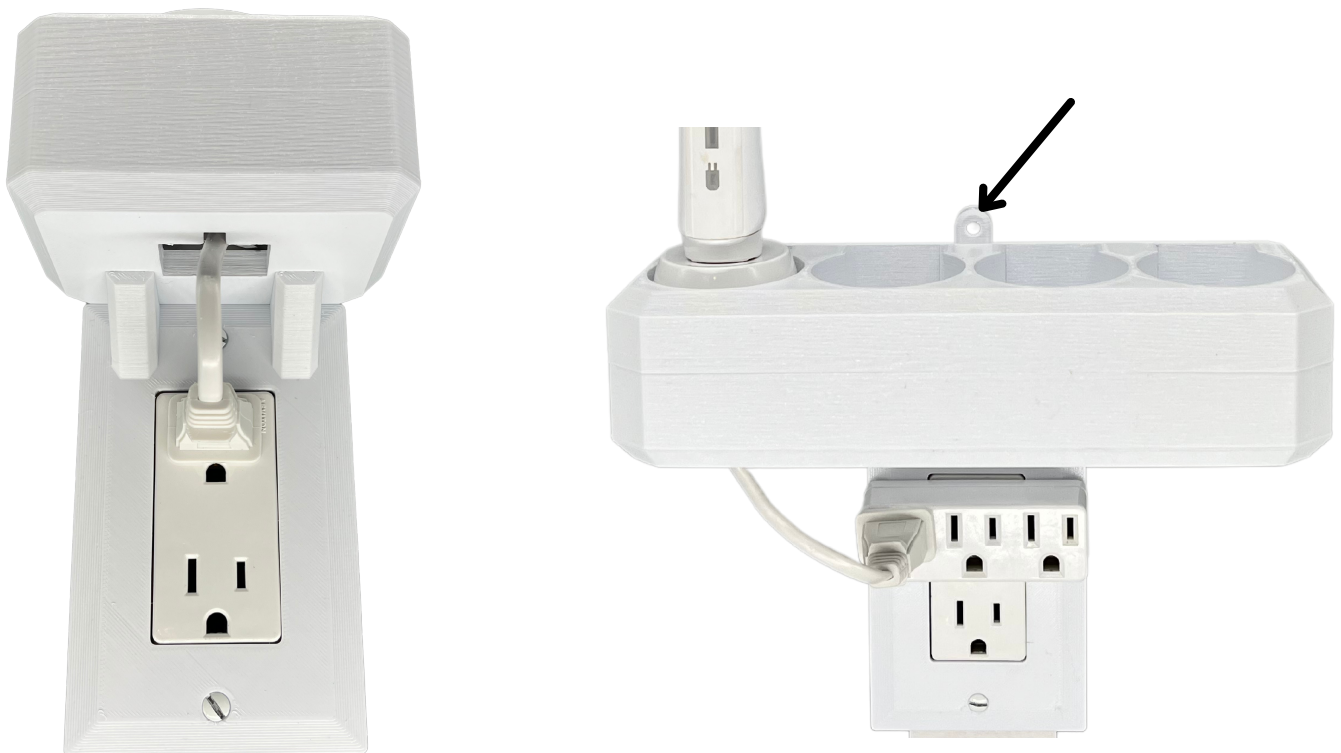

# Notes:

- Always fully dry off the toothbrush before placing back into the holder. This will prevent water from dripping inside and help reduce the calcium buildup on the charger.
- DO NOT PUT IN DISHWASHER, to clean, wipe down or wash with warm soapy water and dry. Can also be cleaned with Lysol type wipes or spray and paper towels.
- The wall plates on the holders are interchangeable, please visit the online store at [www.hoytdesign.com](http://www.hoytdesign.com) to order replacements if needed.
- For Oral-B iO Models, after installing the charger install the threaded charger collar into the opening.
- For Philips Sonicare DiamondClean models, after installing the charger place the matching charger cover on top of the charger.

***Thank You  
For Your Purchase!  
If you have any questions please contact:  
[hoytdesign@gmail.com](mailto:hoytdesign@gmail.com)***

[www.hoytdesign.com](http://www.hoytdesign.com)