

ROKIT | EYE Q

SMART GLASSES
Classic Design : solos



User manual

For more information, please visit www.rokitlife.com

STATEMENT

Thank you for purchasing ROKiT EYE Q.

'Art of Craft and Technology, in the service of a better life' is our value. We develop products and services to improve customers personal health, quality of live, and enhance their daily life experience.

Model No.

IC01
Classic Design - Solos
Open Ear Smart Glasses.

For further information about
Premium Collection - Concerto & Limited Edition - Fantasia.
Please visit www.rokitlife.com to find more.

CONTENTS

Confirm that the following parts are included:



ROKIT Eye Q Smart Glasses



Manual



Charging cable



Cleaning cloth



Bag



Carry case

NOTE

If any part of the product is damaged, don't use it. Please contact rokitsupport@aacrbrand.com.

The frames are rated IPX4 water resistant. Designed to be sweat and weather resistant against drops of water but aren't meant to be submerged under water.

CAUTIONS


- Do NOT swim or shower with the frames
- Do NOT submerge the frames



NOTE

IPX4 is not a permanent condition, and resistance may decrease as a result of normal wear .



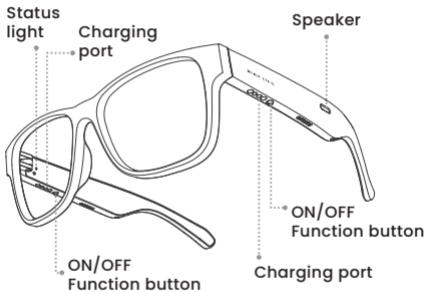

CHARGE THE FRAMES

1. Align the pins on the charging cable with the charging ports on the left and right of the frame.
2. Connect the other end to a USB charger (not provided)

NOTE

- Please turn off your audio glasses before charging.
- The frames don't play audio while charging.
- Don't wear the frames while charging.



The frames status light is located on the inside of the left and right temple.



BLUETOOTH CONNECTION STATUS

Shows the Bluetooth connection status of mobile devices


LIGHT ACTIVITY	SYSTEM STATE
No light	Connected
Alternating red and green flashes	Ready to connect

POWER ON

Long press the function button for 2 seconds to turn on the glasses, the left and right temples turn on separately.

POWER OFF

Long press the function button for 5 seconds, and the Left and right temples turn off simultaneously. After 5 minutes without a Bluetooth connection, the audio glasses will automatically turn off.

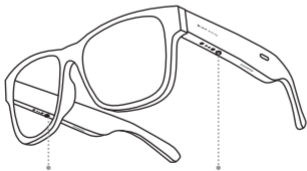

CONNECT USING THE BLUETOOTH MENU ON YOUR MOBILE DEVICE

NOTE:

- The Bluetooth feature is usually found in the Settings - Connections menu.
- You can connect and play audio from only one device at a time.
- The device must be within range (30 ft or 9 m) and powered on.
- When connecting other models of ROKiT EYE Q products, please ignore the previously connected Bluetooth first and then reconnect.

1. With the frames powered on, enable the Bluetooth feature on your device.
2. Select ROKiT Eye Q from the Bluetooth devices list and tap connect.



Use the function button to control media playback, phone calls, and voice control.



MEDIA PLAYBACK

Sound level can be increased or decreased using the volume controls on the media device connected to the glasses.

FUNCTION	WHAT TO DO
Play/Pause	Press the button
Skip forward	Double-press the button
Skip backward	Triple-press the button

PHONE CALL

FUNCTION	WHAT TO DO
Answer/End a call	Press the button
Decline incoming call	Long press for 2 seconds



ACCESS VOICE CONTROL

Long press for 2s and release the button after hearing a prompt tone of 'Di' to turn on the voice assistant.

Click to exit voice assistant.



LOW LATENCY MODE

With the frame powered on, four clicks to enter low latency mode.



RESTORE FACTORY SETTINGS / CLEAR PAIRING RECORDS

With the frames powered off, press and hold the Function button for 8 seconds to clear the pairing records.



LOW BATTERY VOICE PROMPT

When the glasses' batteries reach low power levels, a voice prompt will warn the user every one minute.



Technical Specifications

Frame Material	TR90
Lens	TAC
Bluetooth	BLE5.0
Speaker Driver	16mm
Battery Capacity	90mAh×2
Play Time@100% Volume	Up to 5 Hours
Play Time@60% Volume	Up to 8 Hours
Charging Time	90min
Charging Voltage / Current	5V / 160mA
Product Weight	44.8g
Waterproof Level	IPX4
Working Temperature	0-45(°C)

Precautions for use

Sunglasses (nonprescription) are devices that consist of spectacle frames or clips with absorbing, reflective, tinted, polarizing, or photosensitized lenses intended to be worn by a person to protect the eyes from bright sunlight but not to provide refractive corrections.

**Refer to instructions for use
Please read and keep all safety, security, and
use instructions.**

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Note and consider all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.

WARNINGS/CAUTIONS

- Do NOT use the frames at a high volume for any extended period.
- To avoid hearing damage, use your frames at a comfortable, moderate volume level.
- Turn the volume down on your device before wearing the frames or placing them near your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Use caution while driving and follow applicable laws regarding the use of a mobile phone.

IMPORTANT SAFETY INSTRUCTIONS

- Focus on your safety and that of others if you use the frames while engaging in any activity requiring your attention, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad, etc. Remove the frames or adjust your volume to ensure you can hear surrounding sounds, including alarms and warning signals.
- Do NOT use the frames if they emit any loud unusual noise. If this happens, turn the frames off and contact Rokitlife customer service. Email rokitsupport@aacbrand.com.
- Do NOT submerge or expose the frames for the extended period to water, or wear while participating in water sports, e.g., swimming, waterskiing, surfing, etc.
- Remove frames immediately if you experience a warming sensation or loss of audio.
- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquid, or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency-approved power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like.).
- Do NOT wear the frames while charging.
- After each use, wipe both sides of the lenses and all parts of the frame with the cloth provided or a dry cloth.

Certified Product



SRRC

