

## How to clean the scroll wheel on the RollerMouse Red & Red plus:

First, make sure the mouse is unplugged from the computer, if it's a Rollermouse Red/Red plus Wireless then remember to turn it off on the back (On/Off button).

Next step is to remove the wrist pad. If you have never taken the pad off before, a simple twist in this notch here with this tool that came with the mouse, or a flathead screwdriver if you no longer have that tool, and the pads should come right off.



Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

I Phone: +45 70 27 02 27





These two middle screws need to come out from the underside.


I Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

Phone: +45 70 27 02 27




Flip over your RolleMouse, and the buttons can now be pried off using a small flat screwdriver. Lift up the button housing from right to left as there are 2 plugs on the left side.

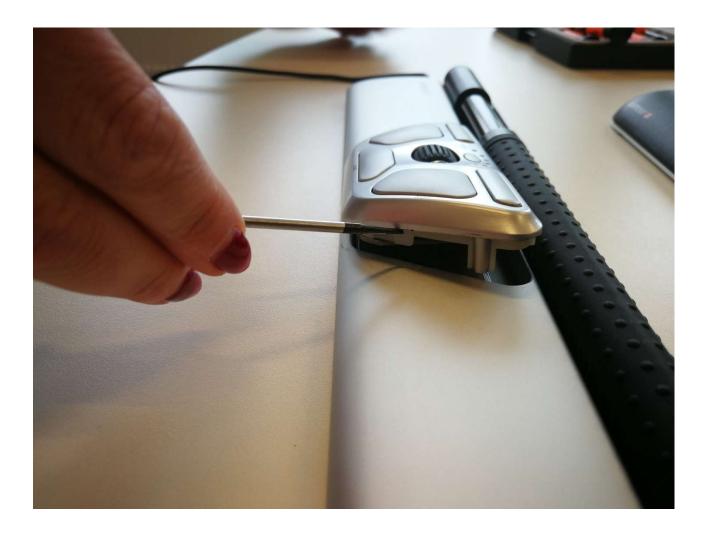


Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

I Phone: +45 70 27 02 27



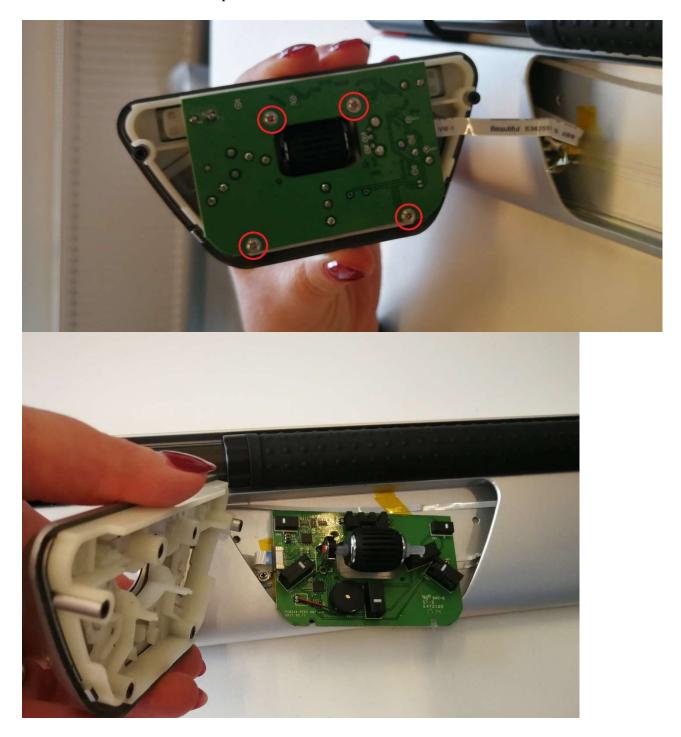


Unscrew these 4 screws to separate the board from the buttons.

## Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

Phone: +45 70 27 02 27



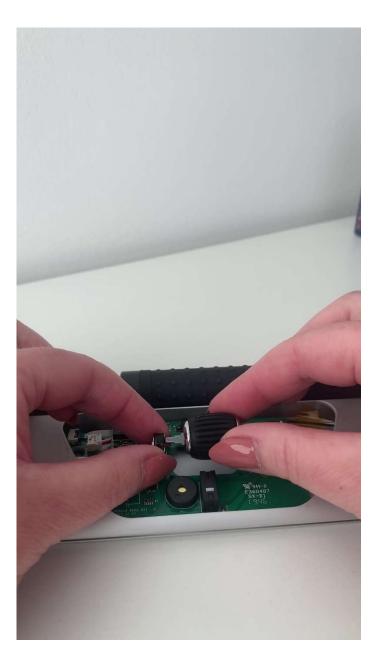


Remove the scroll wheel, by slightly pulling and lifting to the right, it will become loose of the 2 holes that holds It in place.

Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

Phone: +45 70 27 02 27



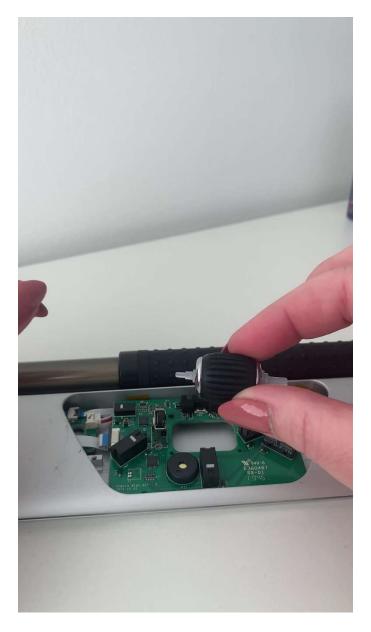

Now you can clean the scroll wheel from dust particles as well as other unwanted dirt that has been accumulated by time, its recommended to use an air duster and a dry cloth.

Now all you need to reassemble the Rollermouse again is to reverse the process.

Best regards / Med venlig hilsen / Med vänlig hälsning / Med vennlig hilsenCustomer Service

Contour Design Nordic A/S Borupvang 5B st.tv 2750 Ballerup Denmark

## Contour Design Nordic A/S

I Borupvang 5B, st.tv. I 2750 Ballerup I Denmark

I Phone: +45 70 27 02 27