



Please press and hold for  
2 seconds to turn on.

Please press and hold for  
15 seconds to turn off.





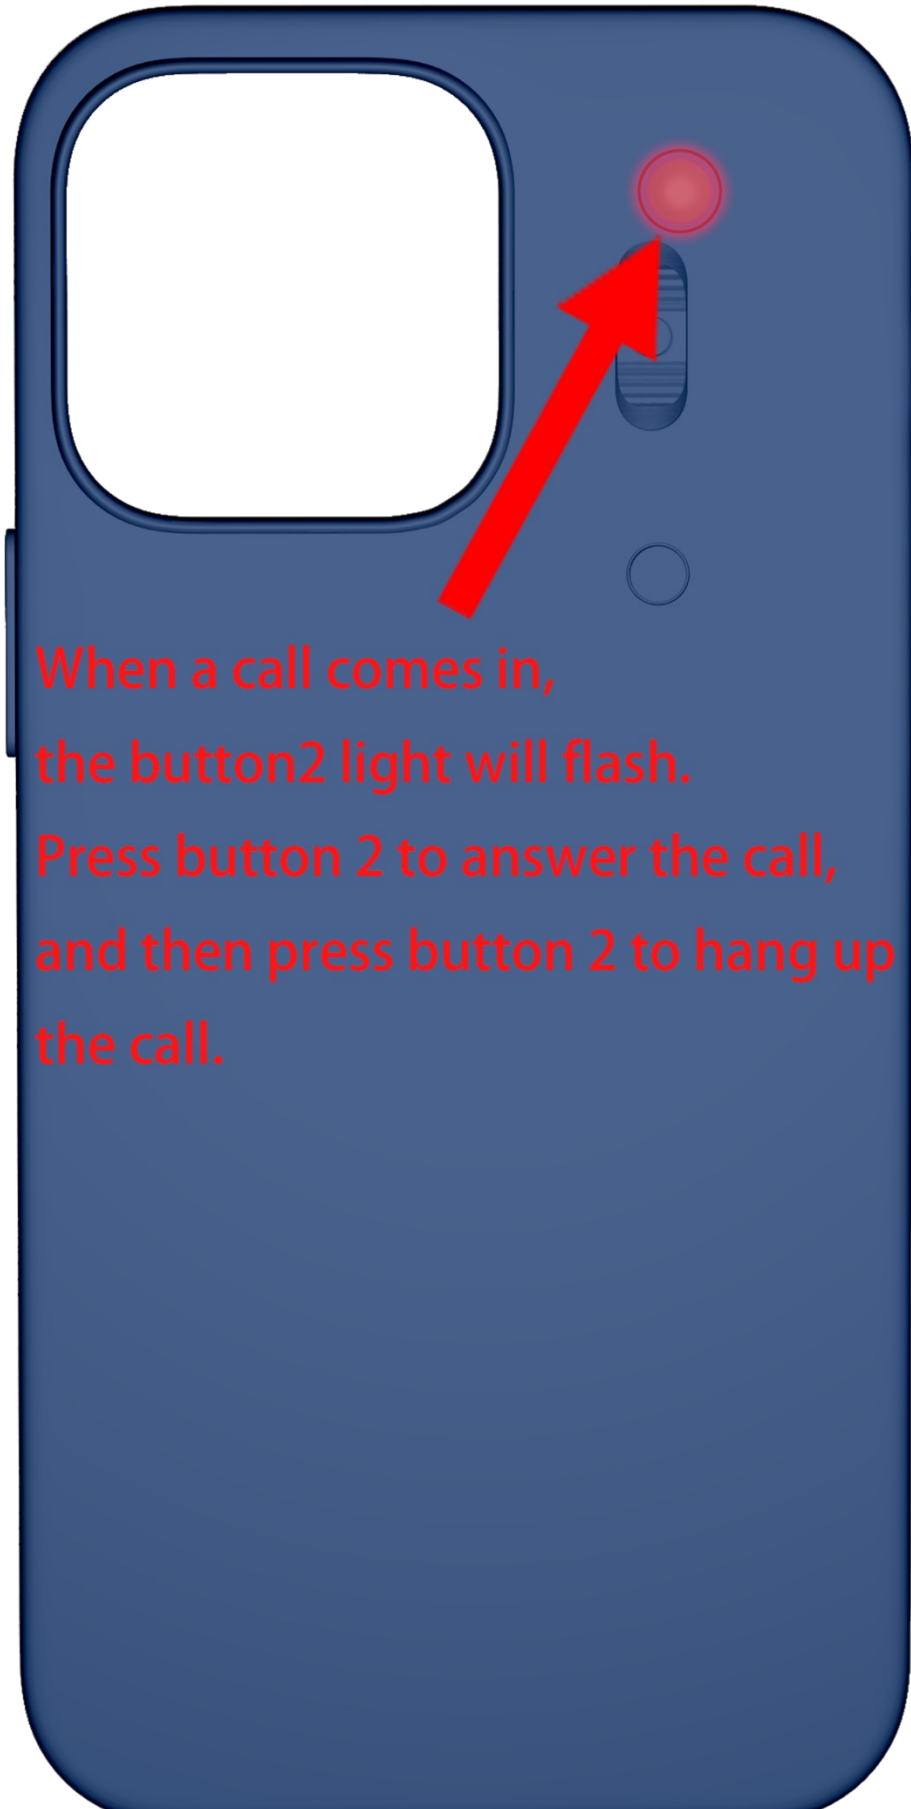

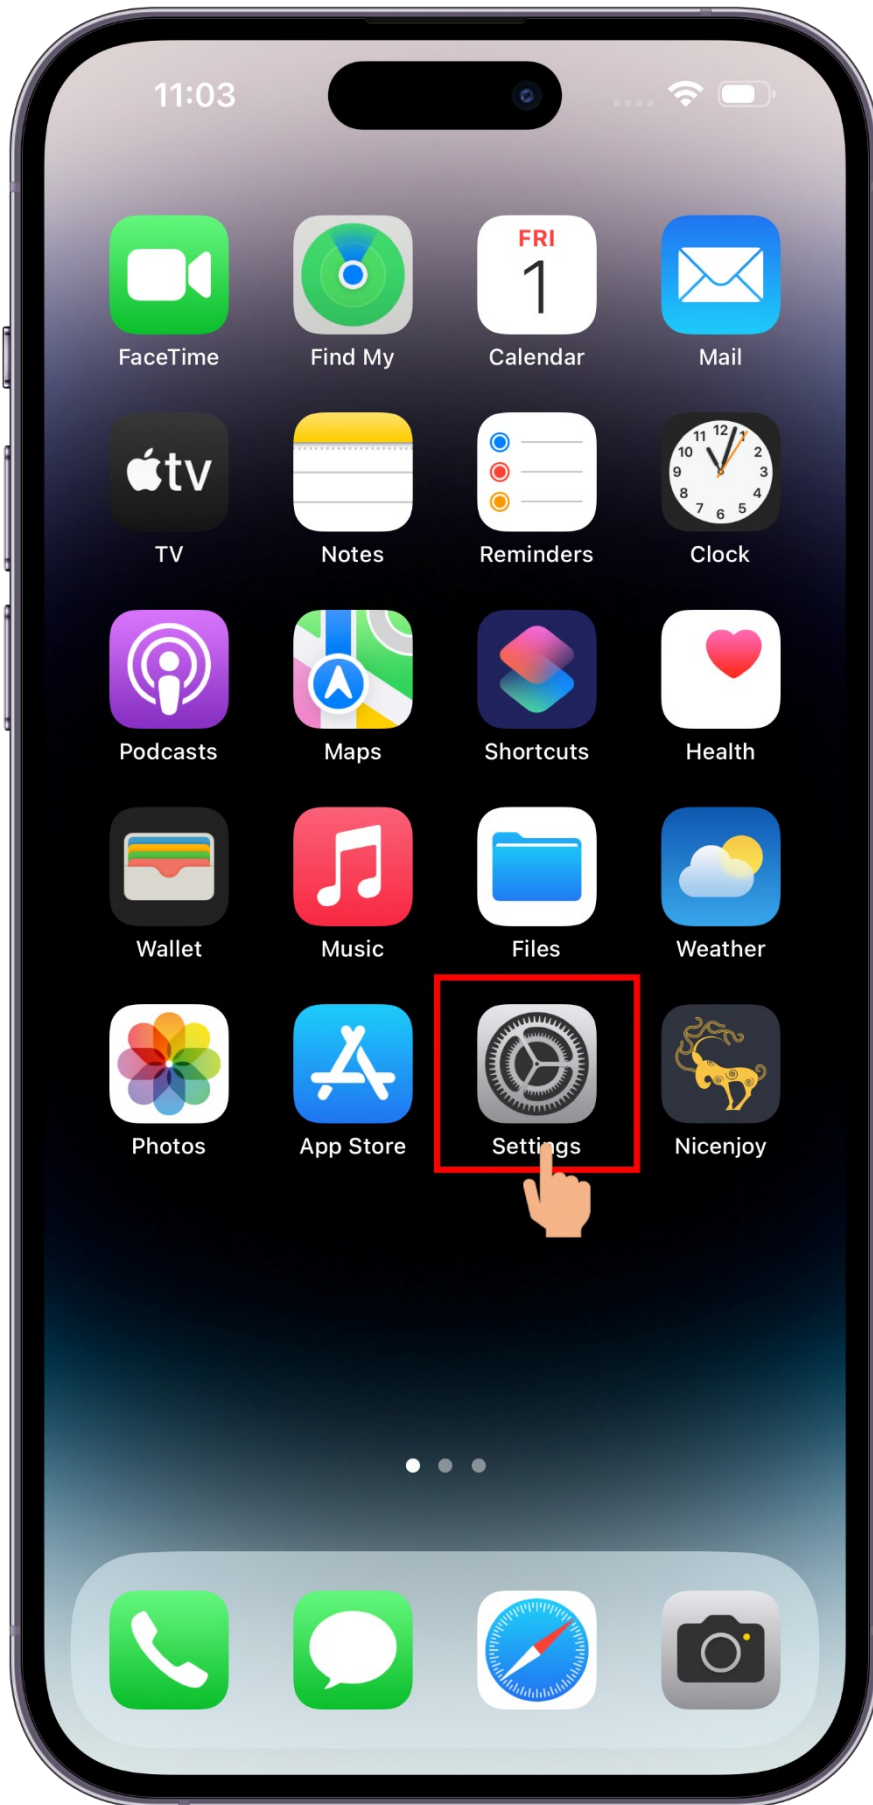When a call comes in,  
the button2 light will flash.





Press button 2 to answer the call,  
and then press button 2 to hang up  
the call.












13:51

## Settings

-  Airplane Mode
-  Wi-Fi NKU >
-  Bluetooth On >
-  Cellular No SIM >

-  Notifications >
-  Sounds & Haptics >
-  Focus >
-  Screen Time >

-  General >
-  Control Center >
-  Display & Brightness >
-  Home Screen & App Library >
-  Accessibility >
-  Wallpaper >
-  StandBy >
-  Siri & Search >
-  Face ID & Passcode >

13:59



< Settings

## Bluetooth

Bluetooth



This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.

DEVICES 

果子皮\_1462

To pair an Apple Watch with your iPhone, go to the [Apple Watch app](#).

15:48

 Settings

## Bluetooth

Bluetooth



This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.

### MY DEVICES

果子皮\_1462





Connected 





### OTHER DEVICES





To pair an Apple Watch with your iPhone, go to the [Apple Watch app](#).

13:51

## Settings


-  Airplane Mode
-  Wi-Fi NKU >
-  Bluetooth On >
-  Cellular No SIM >

-  Notifications >
-  Sounds & Haptics >
-  Focus >
-  Screen Time >

-  General >
-  Control Center >
-  Display & Brightness >
-  Home Screen & App Library >

-  Accessibility >

-  Wallpaper >

-  StandBy >

-  Siri & Search >

-  Face ID & Passcode >







14:01











< Settings

## Accessibility


### VISION

-  VoiceOver Off >
-  Zoom Off >
-  Display & Text Size >
-  Motion >
-  Spoken Content >
-  Audio Descriptions Off >

### PHYSICAL AND MOTOR

-  Touch >
-  Face ID & Attention >
-  Switch Control Off >
-  Voice Control Off >
-  Side Button >
-  Control Nearby Devices >
-  Apple TV Remote >
-  Keyboards >

### HEARING

-  Hearing Devices >





14:02



[Accessibility](#)

## Keyboards

### HARDWARE KEYBOARDS

Full Keyboard Access Off >

Use an external keyboard to control your iPhone.

Key Repeat On >

Sticky Keys Off >

Slow Keys Off >

Customize the typing experience when using an external keyboard.

### SOFTWARE KEYBOARDS

Show Lowercase Keys

This affects keyboards that use the Shift key to switch between uppercase and lowercase letters.

14:12



< Keyboards Full Keyboard Access

Full Keyboard Access



1



Use an external keyboard to control your iPhone.

- To show Help: → H
- To move forward: →
- To move backward: ⇧ →
- To activate: Space
- To go Home: Fn H
- To use the App Switcher: Fn ↑
- To use the Control Center: Fn C
- To use the Notification Center: Fn N

Commands >

APPEARANCE



Auto-Hide

15s >



2

Increase Size




High Contrast



Color

Default >

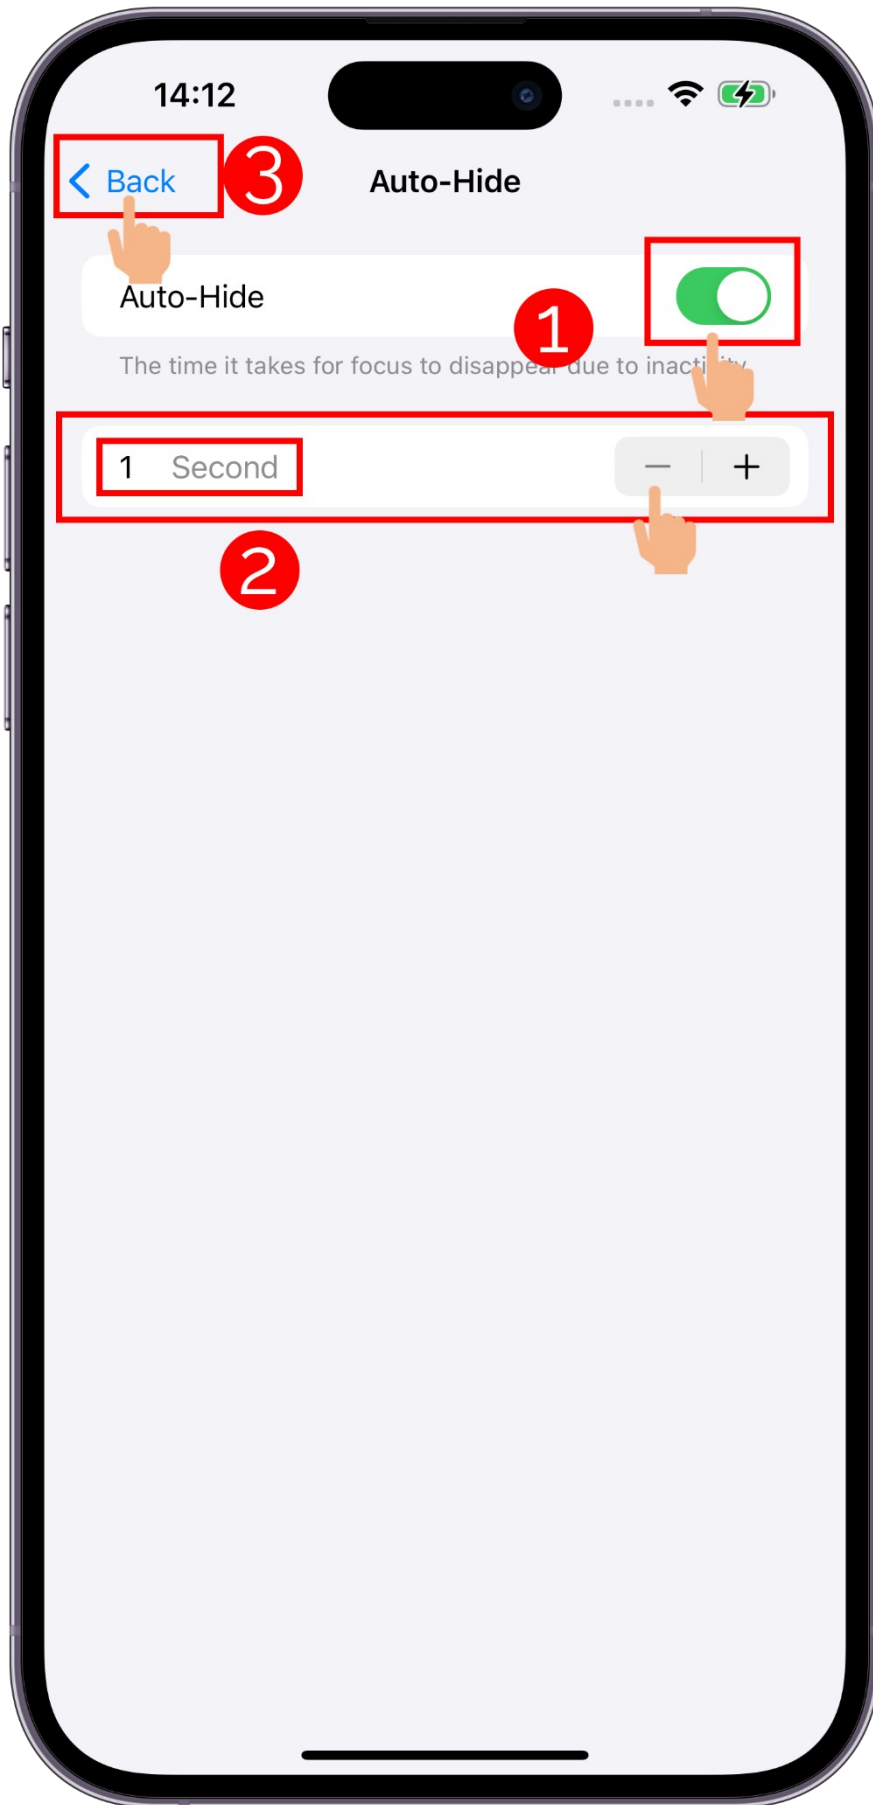

14:01









< Settings









Accessibility

Back to Accessibility


VISION

-  VoiceOver Off >
-  Zoom Off >
-  Display & Text Size >
-  Motion >
-  Spoken Content >
-  Audio Descriptions Off >

PHYSICAL AND MOTOR

-  Touch >
-  Face ID & Attention >
-  Switch Control Off >
-  Voice Control Off >
-  Side Button >
-  Control Nearby Devices >
-  Apple TV Remote >
-  Keyboards >

HEARING

-  Hearing Devices >

14:26



< Accessibility

Touch

AssistiveTouch

Off >

AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.

Reachability



Swipe down on the bottom edge of the screen to bring the top into reach.

Haptic Touch >

Press on the display using a different length of time to reveal content previews, actions and contextual menus.

Touch Accommodations

Off >

If you have trouble using the touch screen, adjust the following settings to change how the screen will respond to touches.

Tap or Swipe to Wake



Wake and unlock iPhone when you tap the display or swipe up from the bottom edge of the Lock screen.

Shake to Undo




If you tend to shake your iPhone by accident, you can disable Shake to Undo to prevent the Undo alert from appearing.

Vibration



When this switch is off, all vibration on your iPhone will be disabled, including those for earthquake, tsunami and other emergency alerts.

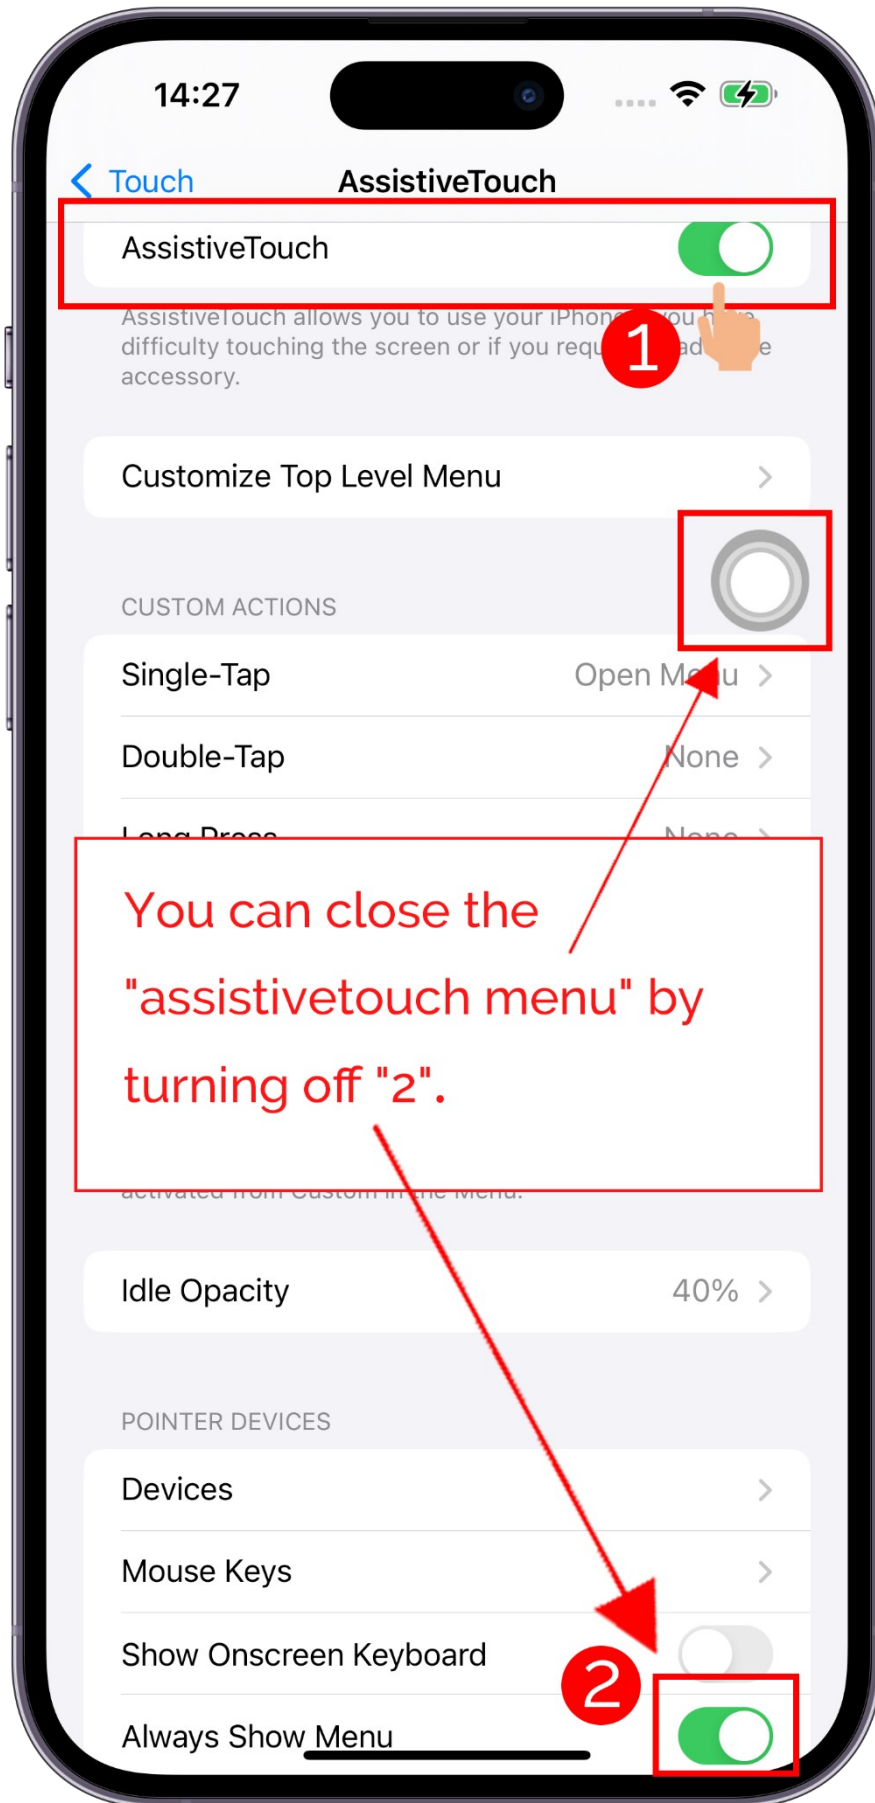

AssistiveTouch

AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an accessibility accessory.

Customize Top Level Menu >

CUSTOM ACTIONS

Single-Tap Open Menu >

Double-Tap None >

Long Press None >

You can close the "assistivetouch menu" by turning off "2".

Idle Opacity 40% >


POINTER DEVICES

Devices >

Mouse Keys >

Show Onscreen Keyboard

Always Show Menu

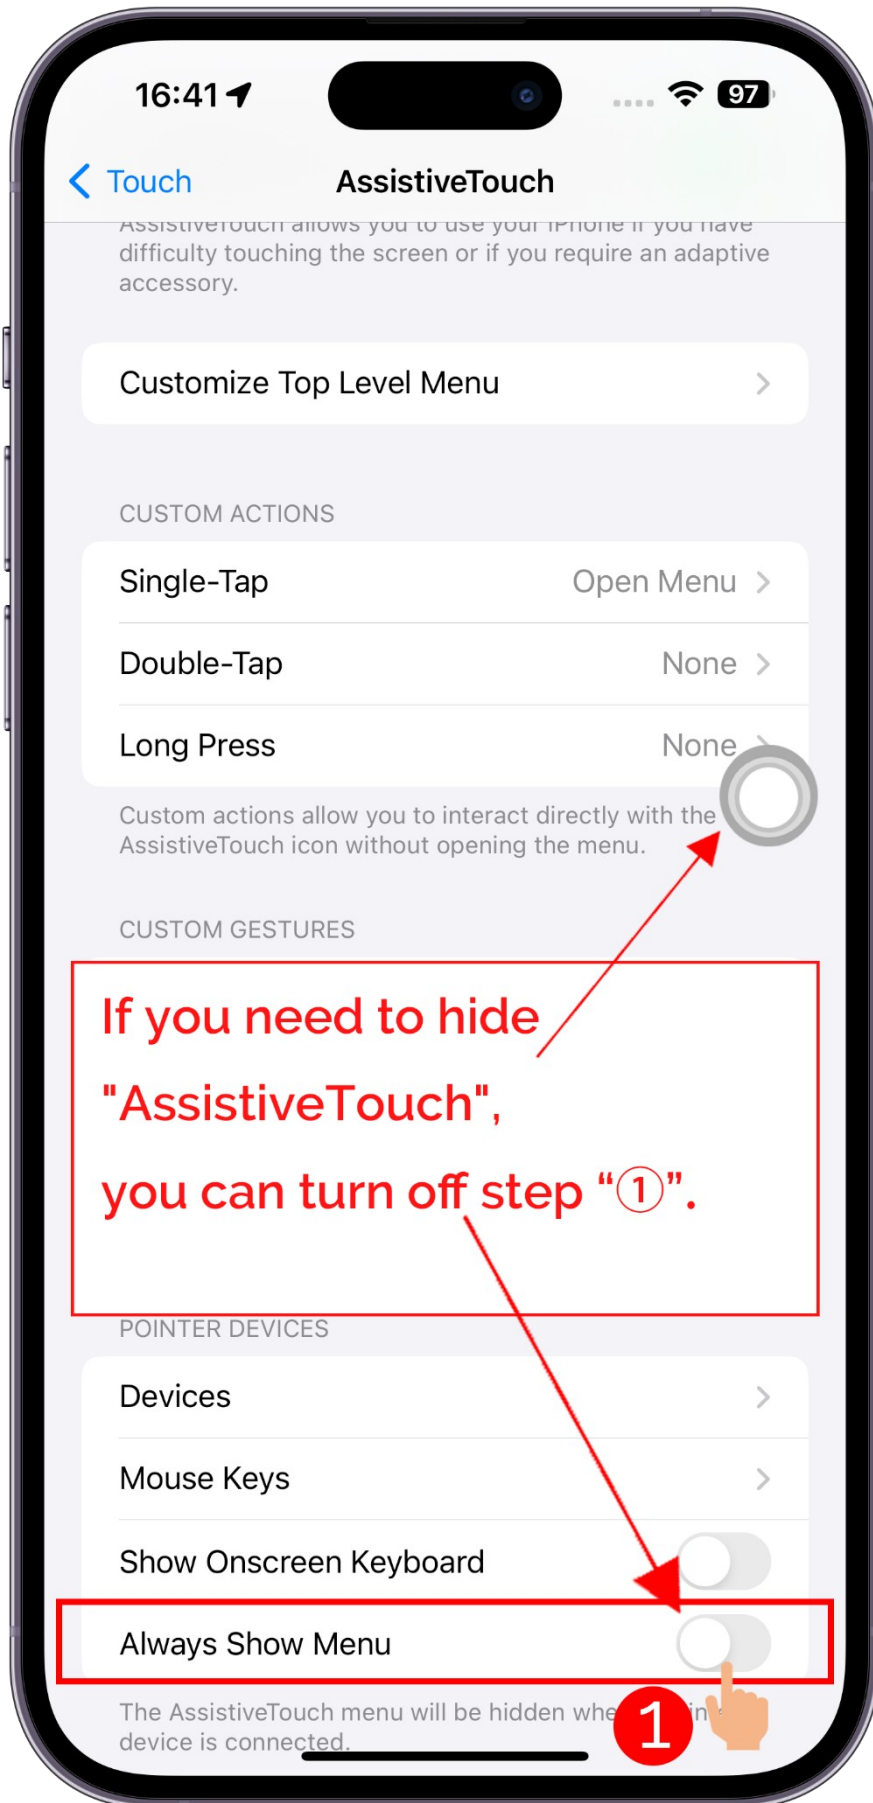

If you need to hide "AssistiveTouch", you can turn off step "1".

Always Show Menu

1

14:28



< Touch

## AssistiveTouch

Show Onscreen Keyboard



Always Show Menu



Show the AssistiveTouch menu when a pointer device is connected.

Perform Touch Gestures



Simulate a finger when performing gestures with a pointer device. When enabled, apps may recognize some gestures differently. For example, scrolling may be preferred over text selection.

Use Game Controller



Allow AssistiveTouch to be controlled by Game Controllers.  
[Learn more...](#)

### TRACKING SENSITIVITY



Dwell Control



Fallback Action

Tap >

Movement Tolerance



Hot Corners



2.00 Seconds



When Dwell Control is enabled, holding the cursor still for the specified amount of time will perform the selected dwell action.



14:29



< Touch

## AssistiveTouch

AssistiveTouch



AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.

Customize Top Level Menu >

### CUSTOM ACTIONS

Single-Tap

Open Menu >

Double-Tap

None >

Long Press

None >

Custom actions allow you to interact directly with the AssistiveTouch icon without opening the menu.

### CUSTOM GESTURES

Create New Gesture... >

Custom gestures allow you to record gestures that can be activated from Custom in the Menu.

Idle Opacity

40% >

### POINTER DEVICES

Devices >

Mouse Keys >

Show Onscreen Keyboard



14:29



< AssistiveTouch

Devices

CONNECTED DEVICES



果子皮\_1462



Bluetooth Devices...



AssistiveTouch allows you to connect Bluetooth and USB assistive pointer devices, such as joysticks and mice.

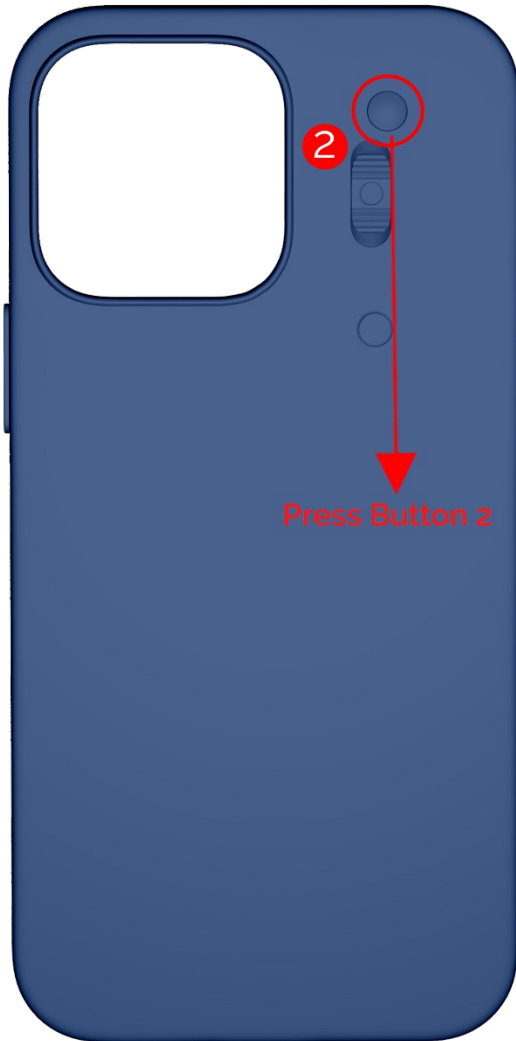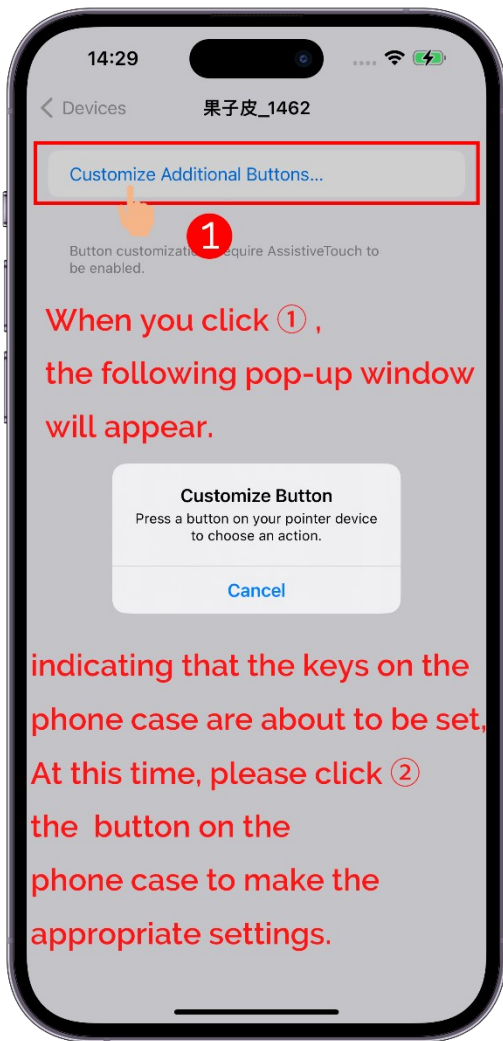

14:53



< 果子皮\_1462

Button 2

Scroll Right

2

Scroll to Bottom

Scroll to Top

Scroll Up

DWELL CONTROLS

Enable/Disable Fallback

Move Menu

Tap

Toggle Pause/Resume Dwell

You can choose any function

SHORTCUTS

Horoscope



Shazam shortcut

1


Take a Break

Text Last Image

Text Tools

What's a shortcut?

YouTube

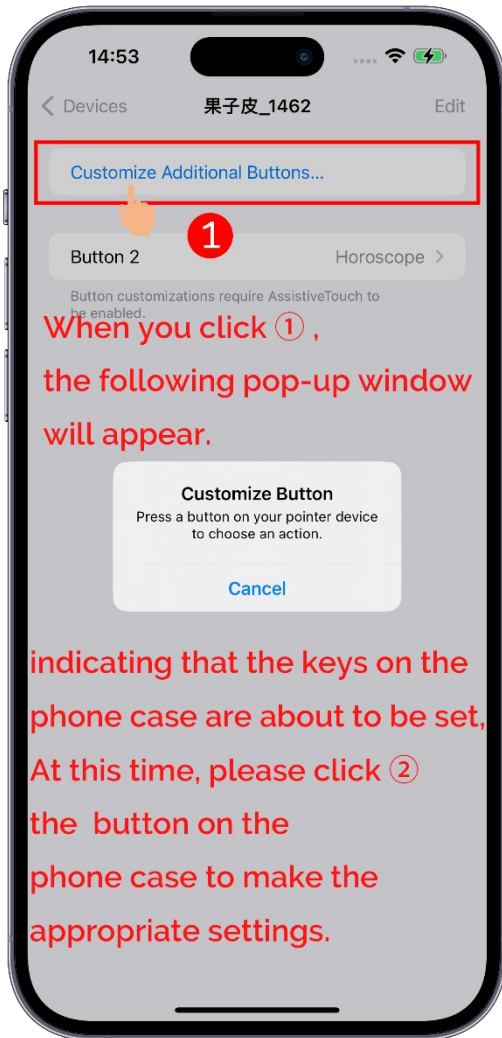

When you click ① ,  
the following pop-up window  
will appear.

indicating that the keys on the  
phone case are about to be set,  
At this time, please click ②  
the button on the  
phone case to make the  
appropriate settings.



14:56



< 果子皮\_1462

Button 1

Dimming Flashing Lights

Live Captions

Live Speech

Speak Screen

SCROLL GESTURES

Continuous Horizontal Scroll

Continuous Vertical Scroll

Scroll Down

Scroll Left

Scroll Right

Scroll to Bottom

Scroll to Top

Scroll Up



You can choose  
any function

DWELL CONTROL

Enable/Disable Fallback


Move Menu


Tap

Toggle Pause/Resume Dwell



1

2

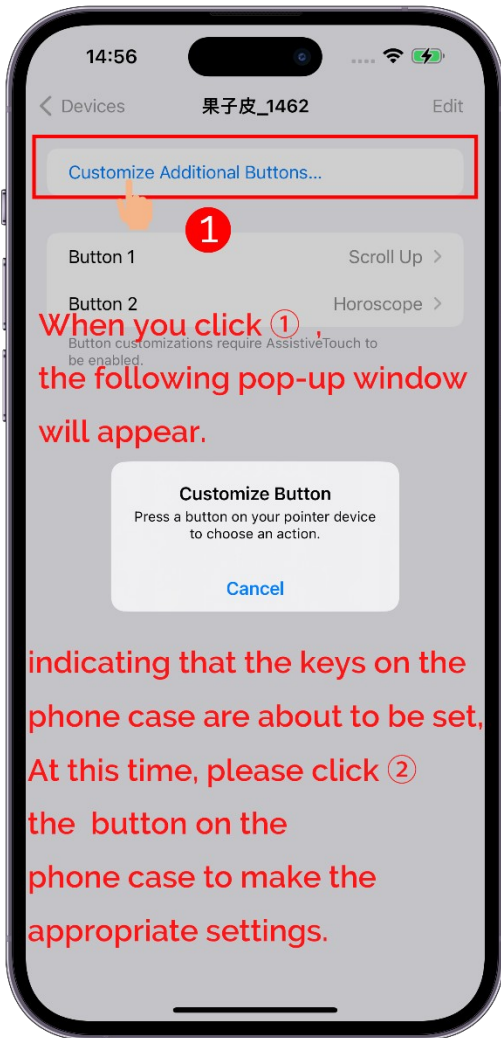

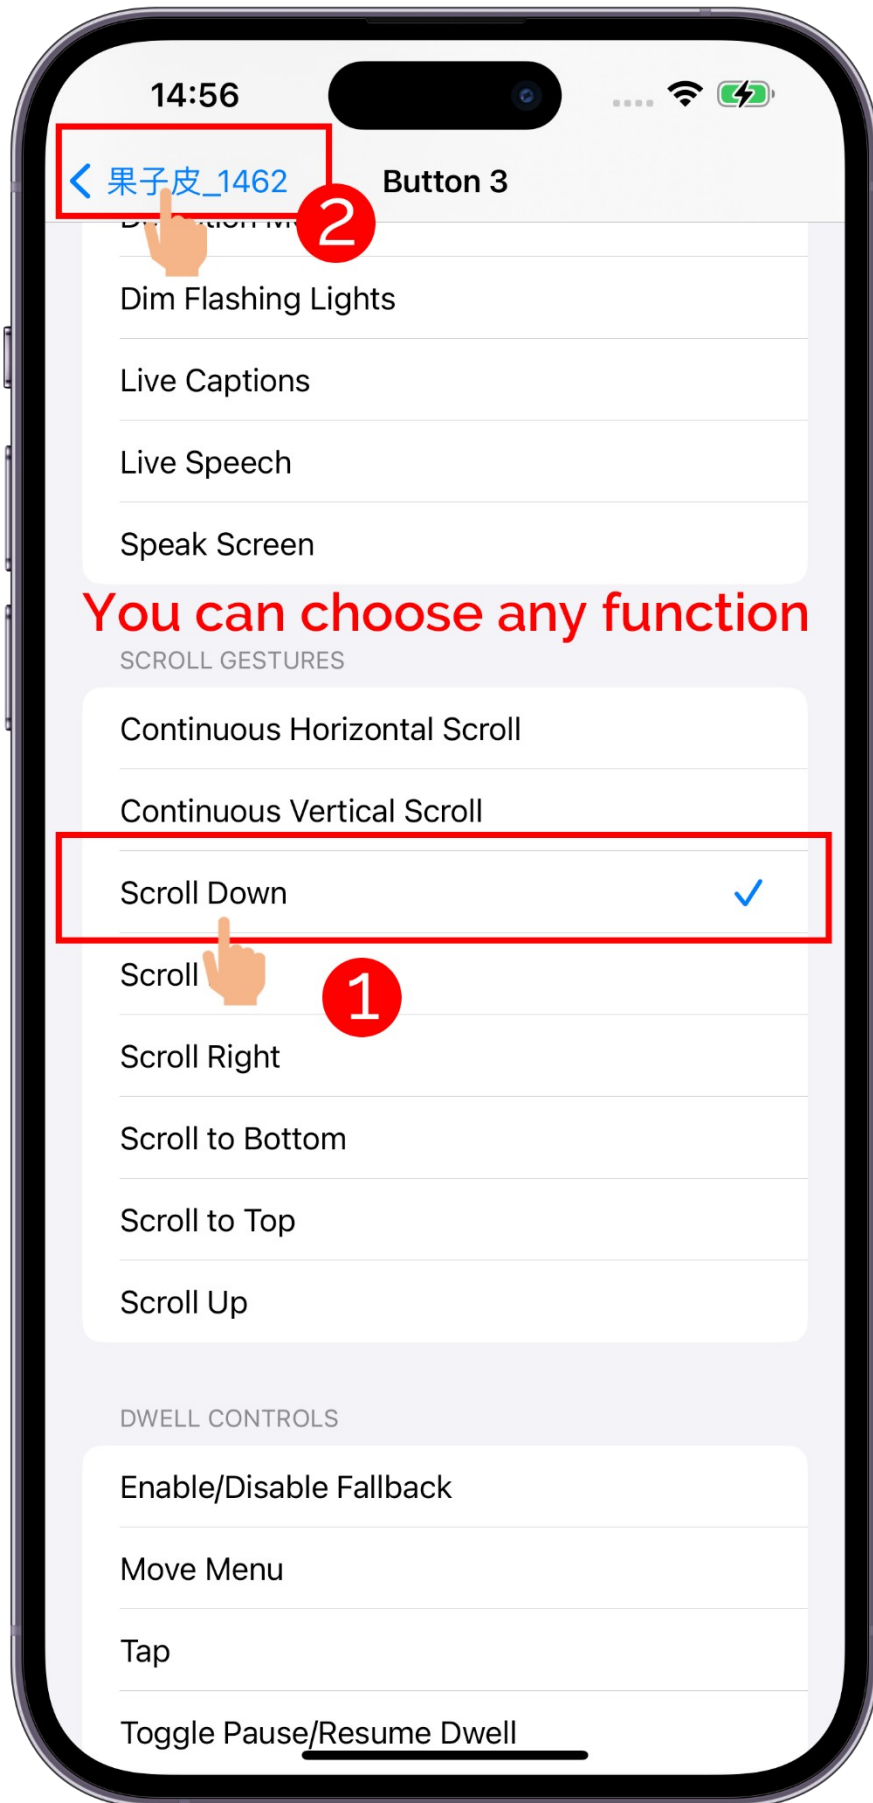



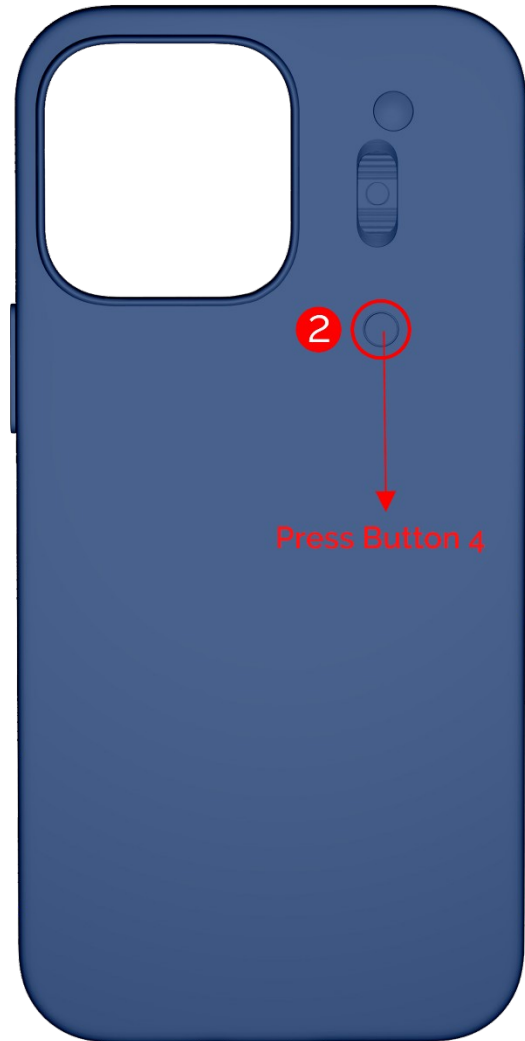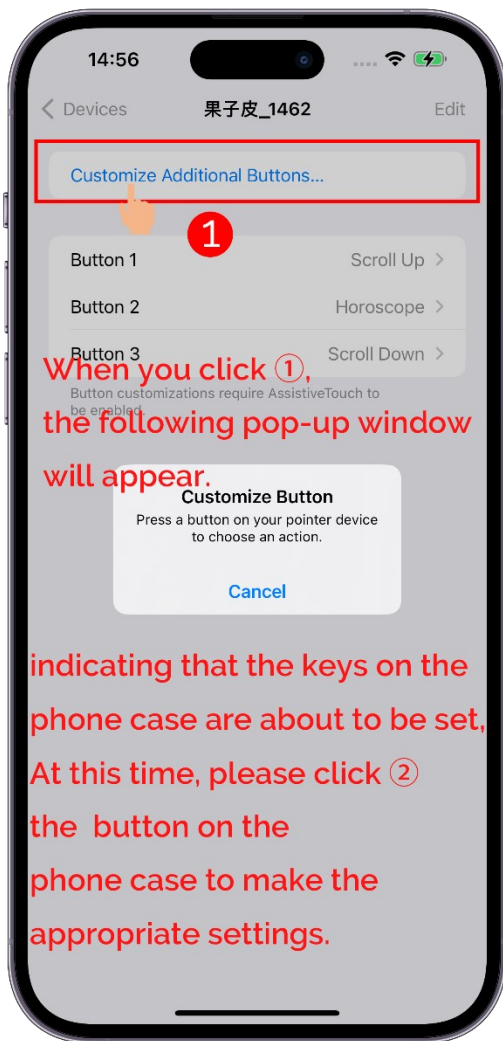

14:58



< 果子皮\_1462

Button 4

- No
- Single-Tap
- Secondary Click
- Open Menu
- Analytics
- App Switcher

You can choose  
any function

Camera



Control Center

- Double Tap
- Hold and Drag
- Home
- Lock Rotation
- Lock Screen
- Long Press
- Move Menu
- Mute
- Notification Center
- Pinch
- Pinch and Rotate

14:58



< Devices

果子皮\_1462

Edit

Customize Additional Buttons...

Button 1 Scroll Up >

Button 2 Horoscope >

Button 3 Scroll Down >

Button 4 Camera >

Button customizations require AssistiveTouch to be enabled.

**Complete**