

AMPRO^{plus}

USER MANUAL FIRMWARE UPDATE

 Bluetooth®



since 1984®

AIR fair

EMISSION MONITORING SYSTEMS

Distributed By:



625 Peachtree Street
Cocoa, FL 32922
Phone: 1-321-223-7500

info@diamondsci.com
www.DiamondSci.com




AMPROplus Firmware update




You have received a zipped file (ALL_1083) per email.

Copy this file onto your PC or Laptop.

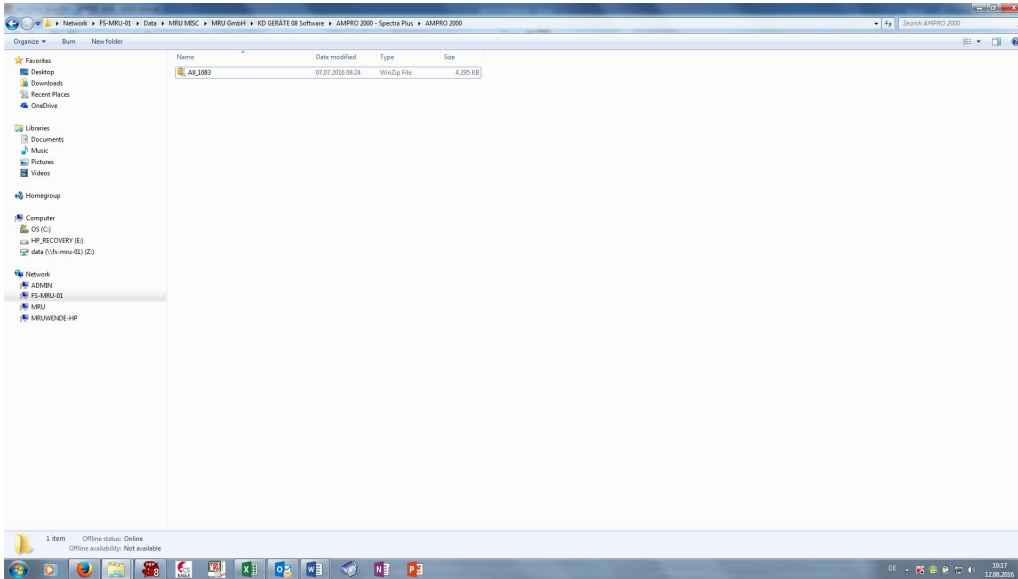


Unzip this file:

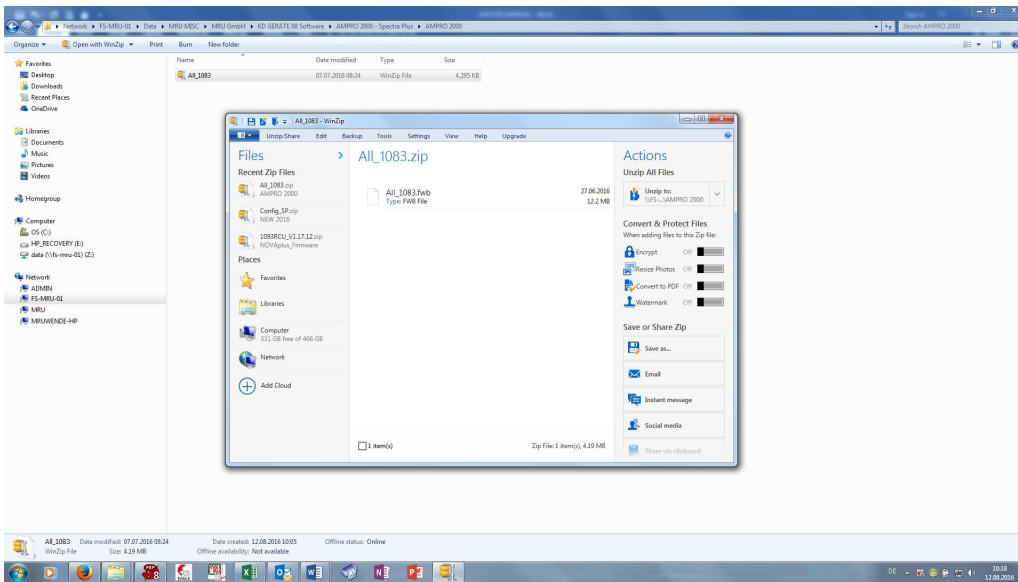


AMPROplus Firmware update



You will now see the unzipped file: **ALL_1083.fwb**

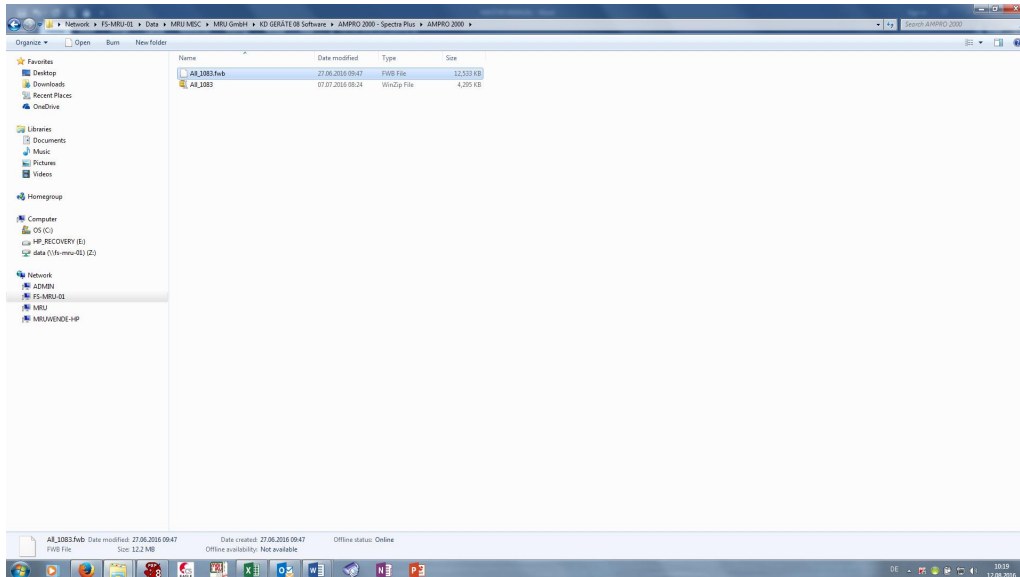

Copy the file **ALL_1083.fwb** onto your SD card.
The analyzer must be turned off.
Insert the SD card into the analyzer **(3)**.

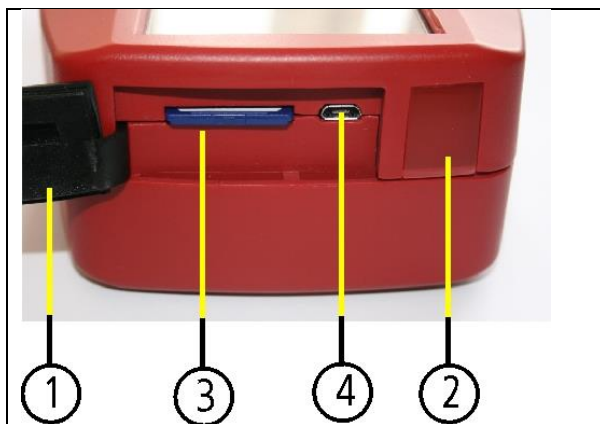

AMPROplus Firmware update




Turn on your analyzer using the ON/OFF button.




Analyzer informs about a new firmware version – confirm if you wish to install the update.



Please wait...

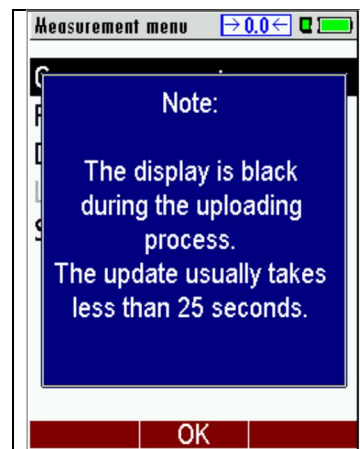

Confirm with the OK button



Screen is blank (the condensate separator LED turns red)



Confirm with the OK button