



CLEANRTH SUPER ADVANCED

Ultrasonic Animal Repeller

We Care About Your Results

Hi, everyone, this is Ron with Cleanrth Products & we are dedicated to safe, positive animal-repelling results.

If for some reason your results are not met at around the 16-20 day mark, please take the time to Contact Us.

We will move to a **“Stage 2”** worth of help/repelling your animal pest issue.

As a business owner, I understand the frustration of pesky animal problems & I wanted to let you know that we’re here to help you when a tough problem comes along.

We Have Solutions For the Real Tough Pesky Animal Issues!

Best Ways to Contact Us

1. If Ordered Online, it’s **“BEST”** to **Contact Us** via the **website** you **ordered from** (e.g., Amazon, Walmart, eBay, etc.)
2. Company E-mail: info@cleanrth.com
3. By Phone: Local 1-480-255-5113 or Toll Free 1-855-707-7075

Specifications:

Model: TSAR550 Weight: 9.5 ounces
 Dimensions: H-8” (No Spike) H-16” (With Spike) W-4.75” L-3.75”
 Power: 9V/500mA adaptor, or 2 x 9V batteries
 Power Consumption: 1.5watts
 Infrared Sensor: USA PerkinElmer
 Infrared Area: Oval, 120 degrees, up to 66 ft radius approximately 4,000 sq. ft.
 Ultrasonic Repelling Coverage: 7,000 sq. ft. Oval, 120 degrees



EPA Est. No. 085464-CHN-001
 FC CE X    4



CLEANRTH SUPER ADVANCED


Ultrasonic Animal Repeller

QUICK - GUIDE



Customers have reported success repelling:



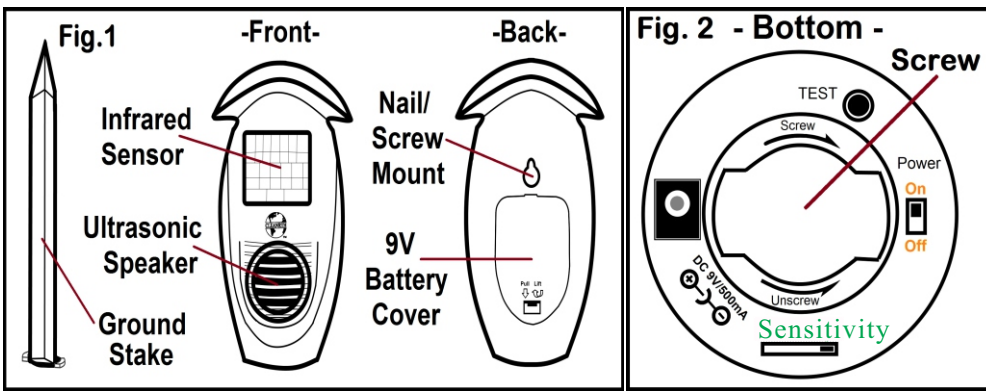

Step 1 Remove the power adaptor from its box and insert the plug end into the 9V DC Input jack located on the bottom of the unit. Plug the other end in a standard US 120V electrical outlet. You can also power the unit by installing two 9 Volt batteries (Fig. 1 -Back-)

Step 2 Slide the Sensitivity Switch all the way Right: **High** (Fig. 2)

Step 3 Choose a nearby spot to set your unit that directly faces the area you want animal free. You have mounting features for hanging the device on the wall or tree (Fig.1 -Back- Nail Screw Mount) or stake into the ground (please keep Infrared Sensor 7 or more inches above ground for best performance).

Step 4 Now simply switch the unit to **ON** (Fig.2 On/Off Switch)

ATTENTION

TEST BUTTON: This allows you to hear a representation of what the device is doing at an audible level.

When the **Test Button is On** and you're hearing the device Buzz & Click, this device is **Not Repelling**.

Please make sure the Test Button is Turned Off.

-**Test Button Sticking Out = Off = No Loud Noises = Repelling**

-**Test Button Pressed In = On = Noisy = Not Repelling**

Running the Repelling Routine & What To Expect

1) Once set up & turned on, please allow 8 days worth of repelling in 1 spot.

2) Use the 8th day as a check point. Do you still see any activity on this day? Has the issue diminished at all? If the problem has improved; great, please continue to use the device in its current settings.

3) If the animal problem still heavily exists, Please move the device to a different location, change the angle, or try using multiple units for a surround-sound effect. Change in repelling is Key to Animal Repelling Success! After these changes, please allow another 8 days of repelling.

4) At this point you should be 16 Days in worth of repelling. Has the issue diminished? If not! Then it's time for us to help. Please Contact Us and we will move to what we like to call our **Stage II** worth of help: **Free of Charge**.

Helpful Hints:

-You want to give the device the best angle for **Detection** so it can **Activate** when an animal intrudes into the area. You might find yourself having to make a few adjustments to get it in the perfect spot.

-Repelling animals is all about **Scaring, Startling,** and making the intruding animals **Uncomfortable**. Change in Repelling Power, Volume, or Angles can be Key for Tough Issues.

If your Problem still persists after the 16-20 day mark. Please Contact us as we will Move to a **Stage 2** worth of Help/Repelling

If Ordered Online, it's "**BEST**" to Contact Us via the website you ordered from (e.g., Amazon, Walmart, Lowes, etc.) or E-mail: info@clearrth.com or Phone: 480-255-5113