

**BioLite
SunLight**



Quick Start Guide

Guía de Inicio Rápido
Guide de Démarrage Rapide
Snelstartgids
Schnellstartanleitung
빠른 시작 설명서
Guida Rapida
クイックスタートガイド
Pikaopas
Snabbguide
Hurtigveiledning
快速入门指南




PLE1002/PLE1003

IMPORTANT: BEFORE FIRST USE

Get out of Demo Mode by pressing and holding on the top button for 10 seconds

10 sec.

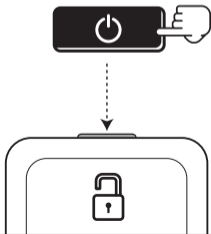

1. Power Button

2. Sun Dial



3. Light Panel

4. Hanging Clip





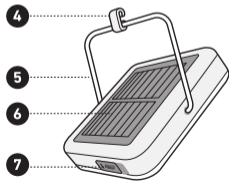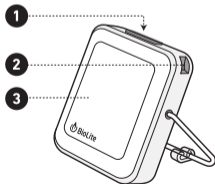


5. 360° Kickstand

6. Solar Panel

7. Micro USB Charge In



1. Basic Operation: Access Lighting Modes

	PRESS 1X	PRESS 2X	PRESS 3X	PRESS 4X
	 	 		
	WHITE LIGHT Press + hold to dim	FULL COLOR Press + hold to select desired hue	Party Mode	Off

2. Battery Life Feedback

When you turn SunLight OFF, it will flash RED, YELLOW, or GREEN to let you know approximately how full your battery is.



Red Blink



Yellow Blink



Green Blink

Low Power Mode

When your SunLight is only in white lantern and won't access RGB or dimming, it's got less than 10% battery left. Go charge!




3. Ways To Charge Your SunLight

SUN When using the solar panel, utilize the sundial in the top corner to align for maximum power



USB You can charge up via micro-USB if you're near a power source



4. Maintenance and Care



You can leave it
out in the rain



You can leave it
outside




DON'T submerge
in water



PRO TIP: Prevent SunLight from
turning on in your bag by placing
kickstand over top power button

IMPORTANT:

Every 6 months charge for battery conditioning

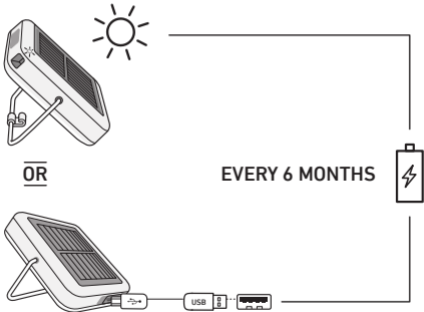

WATCH

SunLight Instructional Video:



BioliteEnergy.com/sunlight-instructions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

EU Compliance Statement - BioLite Inc. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive. A copy of the EU Declaration of Conformity is available online at bioliteenergy.com/euro-compliance. BioLite's EU representative is DSV Solutions Nederland BV, Tradeboulevard 4, Haven 528, 4761 RL Moerdijk, P.O. Box 6086, 4780 LX Moerdijk, The Netherlands.



PO Box 25525 Brooklyn, NY 11201 USA

support@bioliteenergy.com
BioLiteEnergy.com